
eDisGo Documentation

Release 0.1.1

open_eGo – *Team*

Nov 09, 2022

CONTENTS

| | | |
|----------|--------------------------------------|------------|
| 1 | Contents | 3 |
| 1.1 | Getting started | 3 |
| 1.2 | Usage details | 8 |
| 1.3 | Features in detail | 19 |
| 1.4 | Notes to developers | 25 |
| 1.5 | Definition and units | 27 |
| 1.6 | Default configuration data | 29 |
| 1.7 | Equipment data | 37 |
| 1.8 | API | 38 |
| 1.9 | What's New | 146 |
| 1.10 | Index | 151 |
| | Bibliography | 153 |
| | Python Module Index | 155 |
| | Index | 157 |

The python package eDisGo serves as a toolbox to evaluate flexibility measures as an economic alternative to conventional grid expansion in medium and low voltage grids.

The toolbox currently includes:

- Data import from external data sources
 - [ding0](#) tool for synthetic medium and low voltage grid topologies for the whole of Germany
 - [OpenEnergy DataBase \(oedb\)](#) for feed-in time series of fluctuating renewables and scenarios for future power plant park of Germany
 - [demandlib](#) for electrical load time series
 - [SimBEV](#) and [TracBEV](#) for charging demand data of electric vehicles, respectively potential charging point locations
- Static, non-linear power flow analysis using [PyPSA](#) for grid issue identification
- Automatic grid reinforcement methodology solving overloading and voltage issues to determine grid expansion needs and costs based on measures most commonly taken by German distribution grid operators
- Implementation of different charging strategies of electric vehicles
- Multiperiod optimal power flow based on julia package [PowerModels.jl](#) optimizing storage positioning and/or operation (Currently not maintained) as well as generator dispatch with regard to minimizing grid expansion costs
- Temporal complexity reduction
- Heuristic for grid-supportive generator curtailment (Currently not maintained)
- Heuristic grid-supportive battery storage integration (Currently not maintained)

Currently, a method to optimize the flexibility that can be provided by electric vehicles through controlled charging is being implemented. Prospectively, demand side management and reactive power management will be included.

See [Getting started](#) for the first steps. A deeper guide is provided in [Usage details](#). Methodologies are explained in detail in [Features in detail](#). For those of you who want to contribute see [Notes to developers](#) and the [API](#) reference.

eDisGo was initially developed in the [open_eGo](#) research project as part of a grid planning tool that can be used to determine the optimal grid and storage expansion of the German power grid over all voltage levels and has been used in two publications of the project:

- [Integrated Techno-Economic Power System Planning of Transmission and Distribution Grids](#)
- [Final report of the open_eGo project \(in German\)](#)



CONTENTS

1.1 Getting started

1.1.1 Installation using Linux

Warning: Make sure to use python 3.8 or higher!

Install latest eDisGo version through pip. Therefore, we highly recommend using a virtual environment and its pip.

```
python -m pip install edisgo
```

You may also consider installing a developer version as detailed in *Notes to developers*.

1.1.2 Installation using Windows

Warning: Make sure to use python 3.8 or higher!

For Windows users we recommend using Anaconda and to install the geo stack using the conda-forge channel prior to installing eDisGo. You may use the provided [eDisGo_env.yml](#) file to do so. Download the file and create a virtual environment with:

```
conda env create -f path/to/eDisGo_env.yml
```

Activate the newly created environment with:

```
conda activate eDisGo_env
```

1.1.3 Installation using MacOS

We don't have any experience with our package on MacOS yet! If you try eDisGo on MacOS we would be happy if you let us know about your experience!

1.1.4 Requirements for edisgoOPF package

Warning: The non-linear optimal power flow is currently not maintained and might not work out of the box!

To use the multiperiod optimal power flow that is provided in the julia package edisgoOPF in eDisGo you additionally need to install julia version 1.1.1. Download julia from [julia download page](#) and add it to your path (see [platform specific instructions](#) for more information).

Before using the edisgoOPF julia package for the first time you need to instantiate it. Therefore, in a terminal change directory to the edisgoOPF package located in eDisGo/edisgo/opf/edisgoOPF and call julia from there. Change to package mode by typing

```
] 
```

Then activate the package:

```
(v1.0) pkg> activate .
```

And finally instantiate it:

```
(SomeProject) pkg> instantiate
```

Additional linear solver

As with the default linear solver in Ipopt (local solver used in the OPF) the limit for problem sizes is reached quite quickly, you may want to instead use the solver HSL_MA97. The steps required to set up HSL are also described in the [Ipopt Documentation](#). Here is a short version for reference:

First, you need to obtain an academic license for HSL Solvers. Under <http://www.hsl.rl.ac.uk/ipopt/> download the sources for Coin-HSL Full (Stable). You will need to provide an institutional e-mail to gain access.

Unpack the tar.gz:

```
tar -xvzf coinhsl-2014.01.10.tar.gz
```

To install the solver, clone the Ipopt Third Party HSL tools:

```
git clone https://github.com/coin-or-tools/ThirdParty-HSL.git
cd ThirdParty-HSL
```

Under *ThirdParty-HSL*, create a folder for the HSL sources named *coinhsl* and copy the contents of the HSL archive into it. Under Ubuntu, you'll need BLAS, LAPACK and GCC for Fortran. If you don't have them, install them via:

```
sudo apt-get install libblas-dev liblapack-dev gfortran
```

You can then configure and install your HSL Solvers:


```
./configure
make
sudo make install
```

To make Ipopt pick up the solver, you need to add it to your path. During install, there will be an output that tells you where the libraries have been put. Usually like this:

```
Libraries have been installed in:
/usr/local/lib
```

Add this path to the variable `LD_LIBRARY_PATH`:

```
export LD_LIBRARY="/usr/local/bin":$LD_LIBRARY_PATH
```

You might also want to add this to your `.bashrc` to make it persistent.

For some reason, Ipopt looks for a library named `libhsl.so`, which is not what the file is named, so we'll also need to provide a symlink:

```
cd /usr/local/lib
ln -s libcoinhsl.so libhsl.so
```

MA97 should now work and can be called from Julia with:

```
JuMP.setsolver(pm.model, IpoptSolver(linear_solver="ma97"))
```

1.1.5 Prerequisites

Beyond a running and up-to-date installation of eDisGo you need **grid topology data**. Currently synthetic grid data generated with the python project [Ding0](#) is the only supported data source. You can retrieve data from [Zenodo](#) (make sure you choose latest data) or check out the [Ding0 documentation](#) on how to generate grids yourself.

1.1.6 A minimum working example

Following you find short examples on how to use eDisGo to set up a network and time series information for loads and generators in the network and afterwards conduct a power flow analysis and determine possible grid expansion needs and costs. Further details are provided in [Usage details](#). Further examples can be found in the [examples directory](#).

All following examples assume you have a `ding0` grid topology (directory containing csv files, defining the grid topology) in a directory “`ding0_example_grid`” in the directory from where you run your example. If you do not have an example grid, you can download one [here](#).

Aside from grid topology data you may eventually need a dataset on future installation of power plants. You may therefore use the scenarios developed in the [open_eGo](#) project that are available in the [OpenEnergy DataBase \(oedb\)](#) hosted on the [OpenEnergy Platform \(OEP\)](#). eDisGo provides an interface to the oedb using the package `ego.io`. `ego.io` gives you a python SQL-Alchemy representations of the oedb and access to it by using the `oedialect`, an SQL-Alchemy dialect used by the OEP.

You can run a worst-case scenario as follows:

```
from edisgo import EDisGo

# Set up the EDisGo object - the EDisGo object provides the top-level API for
```

(continues on next page)

(continued from previous page)

```

# invocation of data import, power flow analysis, network reinforcement,
# flexibility measures, etc..
edisgo_obj = EDisGo(ding0_grid="ding0_example_grid")

# Import scenario for future generator park from the oedb
edisgo_obj.import_generators(generator_scenario="nep2035")

# Set up feed-in and load time series (here for a worst case analysis)
edisgo_obj.set_time_series_worst_case_analysis()

# Conduct power flow analysis (non-linear power flow using PyPSA)
edisgo_obj.analyze()

# Do grid reinforcement
edisgo_obj.reinforce()

# Determine costs for each line/transformer that was reinforced
costs = edisgo_obj.results.grid_expansion_costs

```

Instead of conducting a worst-case analysis you can also provide specific time series:

```

import pandas as pd
from edisgo import EDisGo

# Set up the EDisGo object with generator park scenario NEP2035
edisgo_obj = EDisGo(
    ding0_grid="ding0_example_grid",
    generator_scenario="nep2035"
)

# Set up your own time series by load sector and generator type (these are dummy
# time series!)
timeindex = pd.date_range("1/1/2011", periods=4, freq="H")
# load time series (scaled by annual demand)
timeseries_load = pd.DataFrame(
    {"residential": [0.0001] * len(timeindex),
     "retail": [0.0002] * len(timeindex),
     "industrial": [0.00015] * len(timeindex),
     "agricultural": [0.00005] * len(timeindex)},
    index=timeindex)
# feed-in time series of fluctuating generators (scaled by nominal power)
timeseries_generation_fluctuating = pd.DataFrame(
    {"solar": [0.2] * len(timeindex),
     "wind": [0.3] * len(timeindex)},
    index=timeindex)
# feed-in time series of dispatchable generators (scaled by nominal power)
timeseries_generation_dispatchable = pd.DataFrame(
    {"biomass": [1] * len(timeindex),
     "coal": [1] * len(timeindex),
     "other": [1] * len(timeindex)}

```

(continues on next page)

(continued from previous page)

```

    },
    index=timeindex)

# Before you can set the time series to the edisgo_obj you need to set the time
# index (this could also be done upon initialisation of the edisgo_obj) - the time
# index specifies which time steps to consider in power flow analysis
edisgo_obj.set_timeindex(timeindex)

# Now you can set the active power time series of loads and generators in the grid
edisgo_obj.set_time_series_active_power_predefined(
    conventional_loads_ts=timeseries_load,
    fluctuating_generators_ts=timeseries_generation_fluctuating,
    dispatchable_generators_ts=timeseries_generation_dispatchable
)

# Before you can now run a power flow analysis and determine grid expansion needs,
# reactive power time series of the loads and generators also need to be set. If you
# simply want to use default configurations, you can do the following.
edisgo_obj.set_time_series_reactive_power_control()

# Now you are ready to determine grid expansion needs
edisgo_obj.reinforce()

# Determine cost for each line/transformer that was reinforced
costs = edisgo_obj.results.grid_expansion_costs

```

Time series for loads and fluctuating generators can also be automatically generated using the provided API for the oemof demandlib and the OpenEnergy DataBase:

```

import pandas as pd
from edisgo import EDisGo

# Set up the EDisGo object with generator park scenario NEP2035 and time index
timeindex = pd.date_range("1/1/2011", periods=4, freq="H")
edisgo_obj = EDisGo(
    ding0_grid="ding0_example_grid",
    generator_scenario="nep2035",
    timeindex=timeindex
)

# Set up your own time series by load sector and generator type (these are dummy
# time series!)
# Set up active power time series of loads and generators in the grid using prede-
# fined profiles per load sector and technology type
# (There are currently no predefined profiles for dispatchable generators, wherefore
# their feed-in profiles need to be provided)
timeseries_generation_dispatchable = pd.DataFrame(
    {"biomass": [1] * len(timeindex),
     "coal": [1] * len(timeindex),
     "other": [1] * len(timeindex)
    },
    index=timeindex

```

(continues on next page)

(continued from previous page)

```
)
edisgo_obj.set_time_series_active_power_predefined(
    conventional_loads_ts="demandlib",
    fluctuating_generators_ts="oedb",
    dispatchable_generators_ts=timeseries_generation_dispatchable
)

# Before you can now run a power flow analysis and determine grid expansion needs,
# reactive power time series of the loads and generators also need to be set. Here,
# default configurations are again used.
edisgo_obj.set_time_series_reactive_power_control()

# Do grid reinforcement
edisgo_obj.reinforce()

# Determine cost for each line/transformer that was reinforced
costs = edisgo_obj.results.grid_expansion_costs
```

1.1.7 LICENSE

Copyright (C) 2018 Reiner Lemoine Institut gGmbH

This program is free software: you can redistribute it and/or modify it under the terms of the GNU Affero General Public License as published by the Free Software Foundation, either version 3 of the License, or (at your option) any later version.

This program is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU Affero General Public License for more details.

You should have received a copy of the GNU General Public License along with this program. If not, see <https://www.gnu.org/licenses/>.

1.2 Usage details

As eDisGo is designed to serve as a toolbox, it provides several methods to analyze distribution grids for grid issues and to evaluate measures responding these. Below, we give a detailed introduction to the data structure and to how different features can be used.

1.2.1 The fundamental data structure

It's worth understanding how the fundamental data structure of eDisGo is designed in order to make use of its entire features.

The class *EDisGo* serves as the top-level API for setting up your scenario, invocation of data import, analysis of hosting capacity, grid reinforcement and flexibility measures. It also provides access to all relevant data. Grid data is stored in the *Topology* class. Time series data can be found in the *TimeSeries* class. The class *Electromobility* holds data on charging processes (how long cars are parking at a charging station, how much they need to charge, etc.) necessary to apply different charging strategies, as well as information on potential charging sites and integrated charging parks. The class *HeatPump* holds data on heat pump COP, heat demand to be served by the heat pumps and thermal storage units, which is necessary to determine flexibility potential of heat pumps. Results data holding results e.g. from the

power flow analysis and grid expansion is stored in the *Results* class. Configuration data from the config files (see *Default configuration data*) is stored in the *Config* class. All these can be accessed through the *EDisGo* object. In the following code examples *edisgo* constitutes an *EDisGo* object.

```
# Access Topology grid data container object
edisgo.topology

# Access TimeSeries data container object
edisgo.timeseries

# Access Electromobility data container object
edisgo.electromobility

# Access HeatPump data container object
edisgo.heat_pump

# Access Results data container object
edisgo.results

# Access configuration data container object
edisgo.config
```

Grid data is stored in *pandas.DataFrames* in the *Topology* object. There are extra data frames for all grid elements (buses, lines, switches, transformers), as well as generators, loads and storage units. You can access those dataframes as follows:

```
# Access all buses in MV grid and underlying LV grids
edisgo.topology.buses_df

# Access all lines in MV grid and underlying LV grids
edisgo.topology.lines_df

# Access all MV/LV transformers
edisgo.topology.transformers_df

# Access all HV/MV transformers
edisgo.topology.transformers_hvmv_df

# Access all switches in MV grid and underlying LV grids
edisgo.topology.switches_df

# Access all generators in MV grid and underlying LV grids
edisgo.topology.generators_df

# Access all loads in MV grid and underlying LV grids
edisgo.topology.loads_df

# Access all storage units in MV grid and underlying LV grids
edisgo.topology.storage_units_df
```

The grids can also be accessed individually. The MV grid is stored in an *MVGrid* object and each LV grid in an *LVGrid* object. The MV grid topology can be accessed through

```
# Access MV grid
edisgo.topology.mv_grid
```

Its components can be accessed analog to those of the whole grid topology as shown above.

```
# Access all buses in MV grid
edisgo.topology.mv_grid.buses_df

# Access all generators in MV grid
edisgo.topology.mv_grid.generators_df
```

A list of all LV grids can be retrieved through:

```
# Get list of all underlying LV grids
# (Note that MVGrid.lv_grids returns a generator object that must first be
# converted to a list in order to view the LVGrid objects)
list(edisgo.topology.mv_grid.lv_grids)
# the following yields the same
list(edisgo.topology.lv_grids)
```

Access to a single LV grid's components can be obtained analog to shown above for the whole topology and the MV grid:

```
# Get single LV grid by providing its ID (e.g. 1) or name (e.g. "LVGrid_1")
lv_grid = edisgo.topology.get_lv_grid("LVGrid_402945")

# Access all buses in that LV grid
lv_grid.buses_df

# Access all loads in that LV grid
lv_grid.loads_df
```

A single grid's generators, loads, storage units and switches can also be retrieved as *Generator*, *Load*, *Storage*, and *Switch* objects, respectively:

```
# Get all switch disconnectors in MV grid as Switch objects
# (Note that objects are returned as a python generator object that must
# first be converted to a list in order to view the Switch objects)
list(edisgo.topology.mv_grid.switch_disconnectors)

# Get all generators in LV grid as Generator objects
list(lv_grid.generators)
```

For some applications it is helpful to get a graph representation of the grid, e.g. to find the path from the station to a generator. The graph representation of the whole topology or each single grid can be retrieved as follows:

```
# Get graph representation of whole topology
edisgo.to_graph()

# Get graph representation for MV grid
edisgo.topology.mv_grid.graph

# Get graph representation for LV grid
lv_grid.graph
```

The returned graph is a `networkx.Graph`, where lines are represented by edges in the graph, and buses and transformers are represented by nodes.

1.2.2 Component time series

There are various options how to set active and reactive power time series. First, options for setting active power time series are explained, followed by options for setting reactive power time series. You can also check out the [A minimum working example](#) section to get a quick start.

Active power time series

There are various options how to set active time series:

- “manual”: providing your own time series
- “worst-case”: using simultaneity factors from config files
- “predefined”: using predefined profiles, e.g. standard load profiles
- “optimised”: using the LOPF to optimise e.g. vehicle charging
- “heuristic”: using heuristics

Manual

Use this mode to provide your own time series for specific components. It can be invoked as follows:

```
edisgo.set_time_series_manual()
```

See `set_time_series_manual` for more information.

When using this mode make sure to previously set the time index. This can either be done upon initialisation of the EDisGo object by providing the input parameter ‘timeindex’ or by using the function `set_timeindex`.

Worst-case

Use this mode to set feed-in and load in heavy load flow case (here called “load_case”) and/or reverse power flow case (here called “feed-in_case”) using simultaneity factors used in conventional grid planning. It can be invoked as follows:

```
edisgo.set_time_series_worst_case_analysis()
```

See `set_time_series_worst_case_analysis` for more information.

When using this mode a fictitious time index starting 1/1/1970 00:00 is automatically set. This is done because pypsa needs time indices. To find out which time index corresponds to which case check out:

```
edisgo.timeseries.timeindex_worst_cases
```

Predefined

Use this mode if you want to set time series by component type. You may either provide your own time series or use ones provided through the OpenEnergy DataBase or other python tools. This mode can be invoked as follows:

```
edisgo.set_time_series_active_power_predefined()
```

For the following components you can use existing time series:

- Fluctuating generators: Feed-in time series for solar and wind power plants can be retrieved from the [OpenEnergy DataBase](#).
- Conventional loads: Standard load profiles for the different sectors residential, commercial, agricultural and industrial are generated using the oemof [demandlib](#).

For all other components you need to provide your own time series. Time series for heat pumps cannot be set using this mode. See [set_time_series_active_power_predefined](#) for more information.

When using this mode make sure to previously set the time index. This can either be done upon initialisation of the EDisGo object by providing the input parameter 'timeindex' or by using the function [set_timeindex](#).

Optimised

Use this mode to optimise flexibilities, e.g. charging of electric vehicles or dispatch of heat pumps with thermal storage units.

Todo: Add more details once the optimisation is merged.

Heuristic

Use this mode to use heuristics to set time series. So far, only heuristics for electric vehicle charging are implemented. The charging strategies can be invoked as follows:

```
edisgo.apply_charging_strategy()
```

See function docstring of [apply_charging_strategy](#) or documentation section [Charging strategies](#) for more information.

Further, there is currently one operating strategy for heat pumps implemented where the heat demand is directly served by the heat pump without buffering heat using a thermal storage. The operating strategy can be invoked as follows:

```
edisgo.apply_heat_pump_operating_strategy()
```

See function docstring of [apply_heat_pump_operating_strategy](#) for more information.

Reactive power time series

There are so far two options how to set reactive power time series:

- “manual”: providing your own time series
- “fixed $\cos\varphi$ ”: using a fixed power factor

It is perspectively planned to also provide reactive power controls $Q(U)$ and $\cos\varphi(P)$.

Manual

See active power [Manual](#) mode documentation.

Fixed $\cos\varphi$

Use this mode to set reactive power time series using fixed power factors. It can be invoked as follows:

```
edisgo.set_time_series_reactive_power_control()
```

See [set_time_series_reactive_power_control](#) for more information.

When using this mode make sure to previously set active power time series.

1.2.3 Identifying grid issues

As detailed in [A minimum working example](#), once you set up your scenario by instantiating an [EDisGo](#) object, you are ready for a grid analysis and identifying grid issues (line overloading and voltage issues) using [analyze\(\)](#):

```
# Do non-linear power flow analysis for MV and LV grid
edisgo.analyze()
```

The [analyze](#) function conducts a non-linear power flow using PyPSA.

The range of time analyzed by the power flow analysis is by default defined by the [timeindex\(\)](#), that can be given as an input to the EDisGo object through the parameter [timeindex](#) or is otherwise set automatically. If you want to change the time steps that are analyzed, you can specify those through the parameter [timesteps](#) of the [analyze](#) function. Make sure that the specified time steps are a subset of [timeindex\(\)](#).

1.2.4 Grid expansion

Grid expansion can be invoked by [reinforce\(\)](#):

```
# Reinforce grid due to overloading and overvoltage issues
edisgo.reinforce()
```

You can further specify e.g. if to conduct a combined analysis for MV and LV (regarding allowed voltage deviations) or if to only calculate grid expansion needs without changing the topology of the graph. See [reinforce_grid\(\)](#) for more information.

Costs for the grid expansion measures can be obtained as follows:

```
# Get costs of grid expansion
costs = edisgo.results.grid_expansion_costs
```

Further information on the grid reinforcement methodology can be found in section [Grid expansion](#).

1.2.5 Electromobility

Electromobility data including charging processes as well as information on potential charging sites and integrated charging parks are stored in the [Electromobility](#) object.

You can access these data as follows:

```
# Access DataFrame with all SimBEV charging processes
edisgo.electromobility.charging_processes_df

# Access GeoDataFrame with all TracBEV potential charging parks
edisgo.electromobility.potential_charging_parks_gdf

# Access DataFrame with all charging parks that got integrated
edisgo.electromobility.integrated_charging_parks_df
```

The integrated charging points are also stored in the [Topology](#) object and can be accessed as follows:

```
# Access DataFrame with all integrated charging points.
edisgo.topology.charging_points_df
```

So far, adding electromobility data to an eDisGo object requires electromobility data from [SimBEV](#) (required version: [3083c5a](#)) and [TracBEV](#) (required version: [14d864c](#)) to be stored in the directories specified through the parameters `simbev_directory` and `tracbev_directory`. SimBEV provides data on standing times, charging demand, etc. per vehicle, whereas TracBEV provides potential charging point locations.

Todo: Add information on how to retrieve SimBEV and TracBEV data

Here is a small example on how to import electromobility data and apply a charging strategy. A more extensive example can be found in the example jupyter notebook [electromobility_example](#).

```
import pandas as pd
from edisgo import EDisGo

# Set up the EDisGo object
timeindex = pd.date_range("1/1/2011", periods=24*7, freq="H")
edisgo = EDisGo(
    ding0_grid=dingo_grid_path,
    timeindex=timeindex
)
edisgo.set_time_series_active_power_predefined(
    fluctuating_generators_ts="oedb",
    dispatchable_generators_ts=pd.DataFrame(
        data=1, columns=["other"], index=timeindex),
    conventional_loads_ts="demandlib",
)

edisgo.set_time_series_reactive_power_control()

# Resample edisgo timeseries to 15-minute resolution to match with SimBEV and
```

(continues on next page)

(continued from previous page)

```
# TracBEV data
edisgo.resample_timeseries()

# Import electromobility data
edisgo.import_electromobility(
    simbev_directory=simbev_path,
    tracbev_directory=tracbev_path,
)

# Apply charging strategy
edisgo.apply_charging_strategy(strategy="dumb")
```

Further information on the electromobility integration methodology and the charging strategies can be found in section *Electromobility integration*.

1.2.6 Heat pumps

Heat pump data including the heat pump's time variant COP, heat demand to be served as well as thermal storage capacities are stored in the *HeatPump* object.

You can access these data as follows:

```
# Access DataFrame with COP time series
edisgo.heat_pump.cop_df

# Access DataFrame with heat demand time series
edisgo.heat_pump.heat_demand_df

# Access DataFrame with information on thermal storage capacities
edisgo.heat_pump.thermal_storage_units_df
```

The heat pumps themselves are also stored in the *Topology* object and can be accessed as follows:

```
# Access DataFrame with all integrated heat pumps
edisgo.topology.loads_df[edisgo.topology.loads_df.type == "heat_pump"]
```

Here is a small example on how to integrate a heat pump and apply an operating strategy.

```
import pandas as pd
from edisgo import EDisGo

# Set up the EDisGo object
timeindex = pd.date_range("1/1/2011", periods=4, freq="H")
edisgo = EDisGo(
    ding0_grid=dingo_grid_path,
    timeindex=timeindex
)

# Set up dummy heat pump data
bus = edisgo.topology.loads_df[
    edisgo.topology.loads_df.sector == "residential"].bus[0]
heat_pump_params = {"bus": bus, "p_set": 0.015, "type": "heat_pump"}
```

(continues on next page)

(continued from previous page)

```

cop = pd.Series([1.0, 2.0, 1.5, 3.4], index=timeindex)
heat_demand = pd.Series([0.01, 0.03, 0.015, 0.0], index=timeindex)

# Add heat pump to grid topology
hp_name = edisgo.add_component("load", **heat_pump_params)

# Add heat pump COP and heat demand to be served
edisgo.heat_pump.set_cop(edisgo, cop.to_frame(name=hp_name))
edisgo.heat_pump.set_heat_demand(edisgo, heat_demand.to_frame(name=hp_name))

# Apply operating strategy - this sets the heat pump's dispatch time series
# in timeseries.loads_active_power
edisgo.apply_heat_pump_operating_strategy()

hp_dispatch = edisgo.timeseries.loads_active_power.loc[:, hp_name]
hp_dispatch.plot()

```

1.2.7 Battery storage systems

Battery storage systems can be integrated into the grid as an alternative to classical grid expansion. Here are two small examples on how to integrate a storage unit manually. In the first one, the EDisGo object is set up for a worst-case analysis, wherefore no time series needs to be provided for the storage unit, as worst-case definition is used. In the second example, a time series analysis is conducted, wherefore a time series for the storage unit needs to be provided.

```

from edisgo import EDisGo

# Set up EDisGo object
edisgo = EDisGo(ding0_grid=dingo_grid_path)

# Get random bus to connect storage to
random_bus = edisgo.topology.buses_df.index[3]
# Add storage instance
edisgo.add_component(
    comp_type="storage_unit",
    add_ts=False,
    bus=random_bus,
    p_nom=4
)

# Set up worst case time series for loads, generators and storage unit
edisgo.set_time_series_worst_case_analysis()

```

```

import pandas as pd
from edisgo import EDisGo

# Set up the EDisGo object
timeindex = pd.date_range("1/1/2011", periods=4, freq="H")
edisgo = EDisGo(
    ding0_grid=dingo_grid_path,

```

(continues on next page)

(continued from previous page)

```

    generator_scenario="ego100",
    timeindex=timeindex
)

# Add time series for loads and generators
timeseries_generation_dispatchable = pd.DataFrame(
    {"biomass": [1] * len(timeindex),
     "coal": [1] * len(timeindex),
     "other": [1] * len(timeindex)}
    ),
    index=timeindex
)
edisgo.set_time_series_active_power_predefined(
    conventional_loads_ts="demandlib",
    fluctuating_generators_ts="oedb",
    dispatchable_generators_ts=timeseries_generation_dispatchable
)
edisgo.set_time_series_reactive_power_control()

# Add storage unit to random bus with time series
edisgo.add_component(
    comp_type="storage_unit",
    bus=edisgo.topology.buses_df.index[3],
    p_nom=4,
    ts_active_power=pd.Series(
        [-3.4, 2.5, -3.4, 2.5],
        index=edisgo.timeseries.timeindex),
    ts_reactive_power=pd.Series(
        [0., 0., 0., 0.],
        index=edisgo.timeseries.timeindex)
)

```

To optimise storage positioning and operation eDisGo provides the options to use a heuristic (described in section [Storage integration](#)) or an optimal power flow approach. However, the storage integration heuristic is not yet adapted to the refactored code and therefore not available, and the OPF is not maintained and may therefore not work out of the box. Following you find an example on how to use the OPF to find the optimal storage positions in the grid with regard to grid expansion costs. Storage operation is optimized at the same time. The example uses the same EDisGo instance as above. A total storage capacity of 10 MW is distributed in the grid. `storage_buses` can be used to specify certain buses storage units may be connected to. This does not need to be provided but will speed up the optimization.

```

random_bus = edisgo.topology.buses_df.index[3:13]
edisgo.perform_mp_opf(
    timesteps=period,
    scenario="storage",
    storage_units=True,
    storage_buses=busnames,
    total_storage_capacity=10.0,
    results_path=results_path)

```

1.2.8 Curtailment

The curtailment function is used to spatially distribute the power that is to be curtailed. To optimise which generators should be curtailed eDisGo provides the options to use a heuristics (heuristics *feedin-proportional* and *voltage-based*, in detail explained in section [Curtailment](#)) or an optimal power flow approach. However, the heuristics are not yet adapted to the refactored code and therefore not available, and the OPF is not maintained and may therefore not work out of the box.

In the following example the optimal power flow is used to find the optimal generator curtailment with regard to minimizing grid expansion costs for given curtailment requirements. It uses the EDisGo object from above.

```
edisgo.perform_mp_opf(  
    timesteps=period,  
    scenario='curtailment',  
    results_path=results_path,  
    curtailment_requirement=True,  
    curtailment_requirement_series=[10, 20, 15, 0])
```

1.2.9 Plots

Todo: Add plotly plot option

EDisGo provides a bunch of predefined plots to e.g. plot the MV grid topology, line loading and node voltages in the MV grid or as a histograms.

```
# plot MV grid topology on a map  
edisgo.plot_mv_grid_topology()  
  
# plot grid expansion costs for lines in the MV grid and stations on a map  
edisgo.plot_mv_grid_expansion_costs()  
  
# plot voltage histogram  
edisgo.histogram_voltage()
```

See [EDisGo](#) class for more plots and plotting options.

1.2.10 Results

Results such as voltages at nodes and line loading from the power flow analysis as well as grid expansion costs are provided through the [Results](#) class and can be accessed the following way:

```
edisgo.results
```

Get voltages at nodes from [v_res\(\)](#) and line loading from [s_res\(\)](#) or [i_res](#). [equipment_changes](#) holds details about measures performed during grid expansion. Associated costs can be obtained through [grid_expansion_costs](#). Flexibility measures may not entirely resolve all issues. These unresolved issues are listed in [unresolved_issues](#).

Results can be saved to csv files with:

```
edisgo.results.save('path/to/results/directory/')
```

See [save\(\)](#) for more information.

1.3 Features in detail

1.3.1 Power flow analysis

In order to analyse voltages and line loadings a non-linear power flow analysis (PF) using pypsa is conducted. All loads and generators are modelled as PQ nodes. The slack is positioned at the substation's secondary side.

1.3.2 Multi period optimal power flow

Warning: The non-linear optimal power flow is currently not maintained and might not work out of the box!

Todo: Add

1.3.3 Grid expansion

General methodology

The grid expansion methodology is conducted in `reinforce_grid()`.

The order grid expansion measures are conducted is as follows:

- Reinforce stations and lines due to overloading issues
- Reinforce lines in MV grid due to voltage issues
- Reinforce distribution substations due to voltage issues
- Reinforce lines in LV grid due to voltage issues
- Reinforce stations and lines due to overloading issues

Reinforcement of stations and lines due to overloading issues is performed twice, once in the beginning and again after fixing voltage issues, as the changed power flows after reinforcing the grid may lead to new overloading issues. How voltage and overloading issues are identified and solved is shown in figure *Grid expansion measures* and further explained in the following sections.

`reinforce_grid()` offers a few additional options. It is e.g. possible to conduct grid reinforcement measures on a copy of the graph so that the original grid topology is not changed. It is also possible to only identify necessary reinforcement measures for two worst-case snapshots in order to save computing time and to set combined or separate allowed voltage deviation limits for MV and LV. See documentation of `reinforce_grid()` for more information.

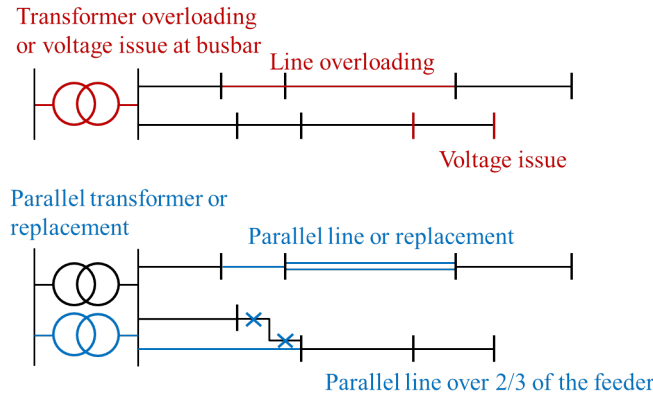


Fig. 1.1: Grid expansion measures

Identification of overloading and voltage issues

Identification of overloading and voltage issues is conducted in `check_tech_constraints`.

Voltage issues are determined based on allowed voltage deviations set in the config file `config_grid_expansion` in section `grid_expansion_allowed_voltage_deviations`. It is possible to set one allowed voltage deviation that is used for MV and LV or define separate allowed voltage deviations. Which allowed voltage deviation is used is defined through the parameter `combined_analysis` of `reinforce_grid()`. By default `combined_analysis` is set to false, resulting in separate voltage limits for MV and LV, as a combined limit may currently lead to problems if voltage deviation in MV grid is already close to the allowed limit, in which case the remaining allowed voltage deviation in the LV grids is close to zero.

Overloading is determined based on allowed load factors that are also defined in the config file `config_grid_expansion` in section `grid_expansion_load_factors`.

Allowed voltage deviations as well as load factors are in most cases different for load and feed-in case. Load and feed-in case are commonly used worst-cases for grid expansion analyses. Load case defines a situation where all loads in the grid have a high demand while feed-in by generators is low or zero. In this case power is flowing from the high-voltage grid to the distribution grid. In the feed-in case there is a high generator feed-in and a small energy demand leading to a reversed power flow. Load and generation assumptions for the two worst-cases are defined in the config file `config_timeseries` in section `worst_case_scale_factor` (scale factors describe actual power to nominal power ratio of generators and loads).

When conducting grid reinforcement based on given time series instead of worst-case assumptions, load and feed-in case also need to be defined to determine allowed voltage deviations and load factors. Therefore, the two cases are identified based on the generation and load time series of all loads and generators in the grid and defined as follows:

- Load case: positive ($\sum load - \sum generation$)
- Feed-in case: negative ($\sum load - \sum generation$) -> reverse power flow at HV/MV substation

Grid losses are not taken into account. See `timesteps_load_feedin_case()` for more details and implementation.

Check line load

Exceedance of allowed line load of MV and LV lines is checked in `mv_line_load()` and `lv_line_load()`, respectively. The functions use the given load factor and the maximum allowed current given by the manufacturer (see I_{max_th} in tables *LV cables*, *MV cables* and *MV overhead lines*) to calculate the allowed line load of each LV and MV line. If the line load calculated in the power flow analysis exceeds the allowed line load, the line is reinforced (see *Reinforce lines due to overloading issues*).

Check station load

Exceedance of allowed station load of HV/MV and MV/LV stations is checked in `hv_mv_station_load()` and `mv_lv_station_load()`, respectively. The functions use the given load factor and the maximum allowed apparent power given by the manufacturer (see S_{nom} in tables *LV transformers*, and *MV transformers*) to calculate the allowed apparent power of the stations. If the apparent power calculated in the power flow analysis exceeds the allowed apparent power the station is reinforced (see *Reinforce stations due to overloading issues*).

Check line and station voltage deviation

Compliance with allowed voltage deviation limits in MV and LV grids is checked in `mv_voltage_deviation()` and `lv_voltage_deviation()`, respectively. The functions check if the voltage deviation at a node calculated in the power flow analysis exceeds the allowed voltage deviation. If it does, the line is reinforced (see *Reinforce MV/LV stations due to voltage issues* or *Reinforce lines due to voltage*).

Grid expansion measures

Reinforcement measures are conducted in `reinforce_measures`. Whereas overloading issues can usually be solved in one step, except for some cases where the lowered grid impedance through reinforcement measures leads to new issues, voltage issues can only be solved iteratively. This means that after each reinforcement step a power flow analysis is conducted and the voltage rechecked. An upper limit for how many iteration steps should be performed is set in order to avoid endless iteration. By default it is set to 10 but can be changed using the parameter `max_while_iterations` of `reinforce_grid()`.

Reinforce lines due to overloading issues

Line reinforcement due to overloading is conducted in `reinforce_lines_overloading()`. In a first step a parallel line of the same line type is installed. If this does not solve the overloading issue as many parallel standard lines as needed are installed.

Reinforce stations due to overloading issues

Reinforcement of HV/MV and MV/LV stations due to overloading is conducted in `reinforce_hv_mv_station_overloading()` and `reinforce_mv_lv_station_overloading()`, respectively. In a first step a parallel transformer of the same type as the existing transformer is installed. If there is more than one transformer in the station the smallest transformer that will solve the overloading issue is used. If this does not solve the overloading issue as many parallel standard transformers as needed are installed.

Reinforce MV/LV stations due to voltage issues

Reinforcement of MV/LV stations due to voltage issues is conducted in `reinforce_mv_lv_station_voltage_issues()`. To solve voltage issues, a parallel standard transformer is installed.

After each station with voltage issues is reinforced, a power flow analysis is conducted and the voltage rechecked. If there are still voltage issues the process of installing a parallel standard transformer and conducting a power flow analysis is repeated until voltage issues are solved or until the maximum number of allowed iterations is reached.

Reinforce lines due to voltage

Reinforcement of lines due to voltage issues is conducted in `reinforce_lines_voltage_issues()`. In the case of several voltage issues the path to the node with the highest voltage deviation is reinforced first. Therefore, the line between the secondary side of the station and the node with the highest voltage deviation is disconnected at a distribution substation after 2/3 of the path length. If there is no distribution substation where the line can be disconnected, the node is directly connected to the busbar. If the node is already directly connected to the busbar a parallel standard line is installed.

Only one voltage problem for each feeder is considered at a time since each measure effects the voltage of each node in that feeder.

After each feeder with voltage problems has been considered, a power flow analysis is conducted and the voltage rechecked. The process of solving voltage issues is repeated until voltage issues are solved or until the maximum number of allowed iterations is reached.

Grid expansion costs

Total grid expansion costs are the sum of costs for each added transformer and line. Costs for lines and transformers are only distinguished by the voltage level they are installed in and not by the different types. In the case of lines it is further taken into account whether the line is installed in a rural or an urban area, whereas rural areas are areas with a population density smaller or equal to 500 people per km² and urban areas are defined as areas with a population density higher than 500 people per km² [DENA]. The population density is calculated by the population and area of the grid district the line is in (See Grid).

Costs for lines of aggregated loads and generators are not considered in the costs calculation since grids of aggregated areas are not modeled but aggregated loads and generators are directly connected to the MV busbar.

1.3.4 Curtailment

Warning: The curtailment methods are not yet adapted to the refactored code and therefore currently do not work.

eDisGo right now provides two curtailment methodologies called ‘feedin-proportional’ and ‘voltage-based’, that are implemented in `curtailment`. Both methods are intended to take a given curtailment target obtained from an optimization of the EHV and HV grids using `eTraGo` and allocate it to the generation units in the grids. Curtailment targets can be specified for all wind and solar generators, by generator type (solar or wind) or by generator type in a given weather cell. It is also possible to curtail specific generators internally, though a user friendly implementation is still in the works.

‘feedin-proportional’

The ‘feedin-proportional’ curtailment is implemented in `feedin_proportional()`. The curtailment that has to be met in each time step is allocated equally to all generators depending on their share of total feed-in in that time step.

$$c_{g,t} = \frac{a_{g,t}}{\sum_{g \in gens} a_{g,t}} \times c_{target,t} \quad \forall t \in timesteps$$

where $c_{g,t}$ is the curtailed power of generator g in timestep t , $a_{g,t}$ is the weather-dependent availability of generator g in timestep t and $c_{target,t}$ is the given curtailment target (power) for timestep t to be allocated to the generators.

‘voltage-based’

The ‘voltage-based’ curtailment is implemented in `voltage_based()`. The curtailment that has to be met in each time step is allocated to all generators depending on the exceedance of the allowed voltage deviation at the nodes of the generators. The higher the exceedance, the higher the curtailment.

The optional parameter `voltage_threshold` specifies the threshold for the exceedance of the allowed voltage deviation above which a generator is curtailed. By default it is set to zero, meaning that all generators at nodes with voltage deviations that exceed the allowed voltage deviation are curtailed. Generators at nodes where the allowed voltage deviation is not exceeded are not curtailed. In the case that the required curtailment exceeds the weather-dependent availability of all generators with voltage deviations above the specified threshold, the voltage threshold is lowered in steps of 0.01 p.u. until the curtailment target can be met.

Above the threshold, the curtailment is proportional to the exceedance of the allowed voltage deviation.

$$\frac{c_{g,t}}{a_{g,t}} = n \cdot (V_{g,t} - V_{threshold,g,t}) + offset$$

where $c_{g,t}$ is the curtailed power of generator g in timestep t , $a_{g,t}$ is the weather-dependent availability of generator g in timestep t , $V_{g,t}$ is the voltage at generator g in timestep t and $V_{threshold,g,t}$ is the voltage threshold for generator g in timestep t . $V_{threshold,g,t}$ is calculated as follows:

$$V_{threshold,g,t} = V_{station,t} + \Delta V_{allowed} + \Delta V_{offset,t}$$

where $V_{station,t}$ is the voltage at the station’s secondary side, $\Delta V_{allowed}$ is the allowed voltage deviation in the reverse power flow and $\Delta V_{offset,t}$ is the exceedance of the allowed voltage deviation above which generators are curtailed.

n and $offset$ in the equation above are slope and y-intercept of a linear relation between the curtailment and the exceedance of the allowed voltage deviation. They are calculated by solving the following linear problem that penalizes the offset using the python package pyomo:

$$\begin{aligned} & \min \left(\sum_t offset_t \right) \\ & s.t. \sum_g c_{g,t} = c_{target,t} \quad \forall g \in (solar, wind) \\ & \quad c_{g,t} \leq a_{g,t} \quad \forall g \in (solar, wind), t \end{aligned}$$

where $c_{target,t}$ is the given curtailment target (power) for timestep t to be allocated to the generators.

1.3.5 Electromobility integration

The import and integration of electromobility data is implemented in `electromobility_import()`.

Allocation of charging demand

The allocation of charging processes to charging stations is implemented in `distribute_charging_demand()`. After electromobility data is loaded, the charging demand from SimBEV is allocated to potential charging parks from TracBEV. The allocation of the charging processes to the charging infrastructure is carried out with the help of the weighting factor of the potential charging parks determined by TracBEV. This involves a random and weighted selection of one charging park per charging process. In the case of private charging infrastructure, a separate charging point is set up for each electric vehicle (EV). All charging processes of the respective EV and charging use case are assigned to this charging point. The allocation of private charging processes to charging stations is implemented in `distribute_private_charging_demand()`.

For public charging infrastructure, the allocation is made explicitly per charging process. For each charging process it is determined whether a suitable charging point is already available. For this purpose it is checked whether the charging point is occupied by another EV in the corresponding period and whether it can provide the corresponding charging capacity. If no suitable charging point is available, a charging point is determined randomly and weighted in the same way as for private charging. The allocation of public charging processes to charging stations is implemented in `distribute_public_charging_demand()`.

Charging strategies

eDisGo right now provides three charging strategy methodologies called ‘dumb’, ‘reduced’ and ‘residual’, that are implemented in `charging_strategies`. The aim of the charging strategies ‘reduced’ and ‘residual’ is to generate the most grid-friendly charging behavior possible without restricting the convenience for end users. Therefore, the boundary condition of all charging strategies is that the charging requirement of each charging process must be fully covered. This means that charging processes can only be flexibilised if the EV can be fully charged while it is stationary. Furthermore, only private charging processes can be used as a flexibility, since the fulfillment of the service is the priority for public charging processes.

‘dumb’

In this charging strategy the cars are charged directly after arrival with the maximum possible charging capacity.

‘reduced’

This is a preventive charging strategy. The cars are charged directly after arrival with the minimum possible charging power. The minimum possible charging power is determined by the parking time and the parameter `minimum_charging_capacity_factor`.

‘residual’

This is an active charging strategy. The cars are charged when the residual load in the MV grid is lowest (high generation and low consumption). Charging processes with a low flexibility are given priority.

1.3.6 Storage integration

Warning: The storage integration methods described below are not yet adapted to the refactored code and therefore currently do not work.

Besides the possibility to connect a storage with a given operation to any node in the grid, eDisGo provides a methodology that takes a given storage capacity and allocates it to multiple smaller storage units such that it reduces line overloading and voltage deviations. The methodology is implemented in `one_storage_per_feeder()`. As the above described curtailment allocation methodologies it is intended to be used in combination with [eTraGo](#) where storage capacity and operation is optimized.

For each feeder with load or voltage issues it is checked if integrating a storage will reduce peaks in the feeder, starting with the feeder with the highest theoretical grid expansion costs. A heuristic approach is used to estimate storage sizing and siting while storage operation is carried over from the given storage operation.

A more thorough documentation will follow soon.

1.3.7 References

1.4 Notes to developers

1.4.1 Installation

Clone the repository from [GitHub](#) and change into the eDisGo directory:

```
cd eDisGo
```

Installation using Linux

To set up a source installation using linux simply use a virtual environment and install the source code with pip. Make sure to use python3.7 or higher (recommended python3.8). **After** setting up your virtual environment and activating it run the following commands within your eDisGo directory:

```
python -m pip install -e .[full] # install eDisGo from source
pre-commit install # install pre-commit hooks
```

Installation using Windows

For Windows users we recommend using Anaconda and to install the geo stack using the conda-forge channel prior to installing eDisGo. You may use the provided `eDisGo_env_dev.yml` file to do so. Create the virtual environment with:

```
conda env create -f path/to/eDisGo_env_dev.yml # install eDisGo from source
```

Activate the newly created environment and install the pre-commit hooks with:

```
conda activate eDisGo_env_dev
pre-commit install # install pre-commit hooks
```

This will install eDisGo with all its dependencies.

Installation using MacOS

We don't have any experience with our package on MacOS yet! If you try eDisGo on MacOS we would be happy if you let us know about your experience!

1.4.2 Code standards

- **pre-commit hooks:** Make sure to use the provided pre-commit hooks
- **pytest:** Make sure that all pytest tests are passing and add tests for every new code base
- **Documentation of `@property` functions:** Put documentation of getter and setter both in Docstring of getter, see on [Stackoverflow](#)
- Order of public/private/protected methods, property decorators, etc. in a class: TBD

1.4.3 Documentation

Build the docs locally by first setting up the sphinx environment with (executed from top-level folder)

```
sphinx-apidoc -f -o doc/api edisgo
```

And then you build the html docs on your computer with

```
sphinx-build -E -a doc/ doc/_html
```

1.5 Definition and units

1.5.1 Sign Convention

Generators and Loads in an AC power system can behave either like an inductor or a capacitor. Mathematically, this has two different sign conventions, either from the generator perspective or from the load perspective. This is defined by the direction of power flow from the component.

Both sign conventions are used in eDisGo depending upon the components being defined, similar to pypsa.

Generator Sign Convention

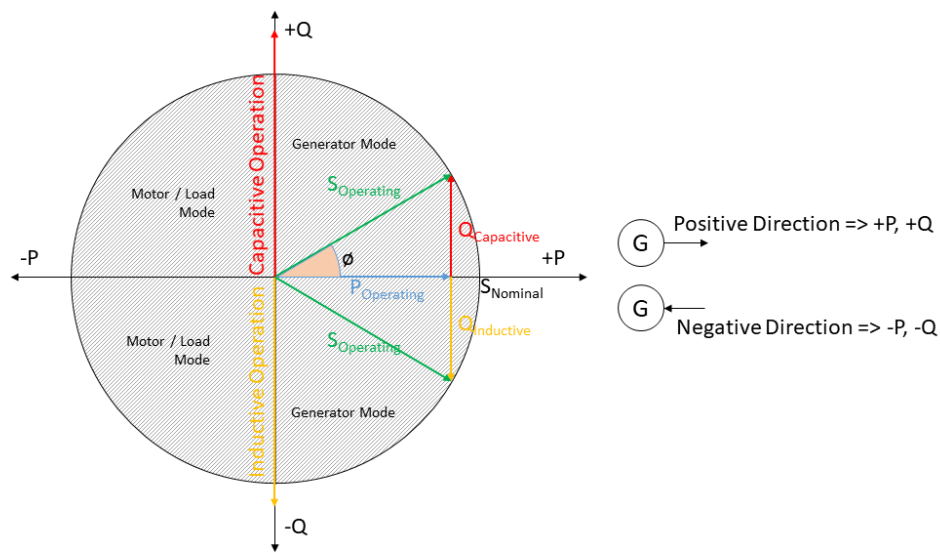


Fig. 1.2: Generator sign convention in detail

While defining time series for `Generator`, `GeneratorFluctuating`, and `Storage`, the generator sign convention is used.

Load Sign Convention

The time series for `Load` is defined using the load sign convention.

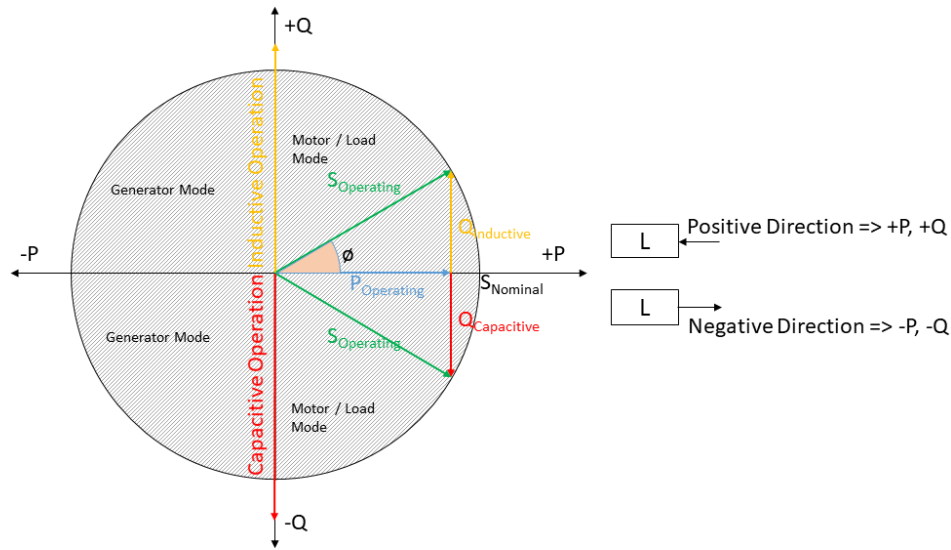


Fig. 1.3: Load sign convention in detail

1.5.2 Reactive Power Sign Convention

Generators and Loads in an AC power system can behave either like an inductor or a capacitor. Mathematically, this has two different sign conventions, either from the generator perspective or from the load perspective.

Both sign conventions are used in eDisGo, similar to pypsa. While defining time series for `Generator`, `GeneratorFluctuating`, and `Storage`, the generator sign convention is used. This means that when the reactive power (Q) is positive, the component shows capacitive behaviour and when the reactive power (Q) is negative, the component shows inductive behaviour.

The time series for Load is defined using the load sign convention. This means that when the reactive power (Q) is positive, the component shows inductive behaviour and when the reactive power (Q) is negative, the component shows capacitive behaviour. This is the direct opposite of the generator sign convention.

1.5.3 Units

Table 1.1: List of variables and units

| Variable | Sym- bol | Unit | Comment |
|----------------|-------------|---------------------|-------------------------|
| Current | I | kA | |
| Length | l | km | |
| Active Power | P | MW | |
| Reactive Power | Q | MVar | |
| Apparent Power | S | MVA | |
| Resistance | R | Ohm or Ohm/km | Ohm/km applies to lines |
| Reactance | X | Ohm or Ohm/km | Ohm/km applies to lines |
| Voltage | V | kV | |
| Inductance | L | mH/km | |
| Capacitance | C | μF/km | |
| Costs | . | kEUR | |

1.6 Default configuration data

Following you find the default configuration files.

1.6.1 config_db_tables

The config file `config_db_tables.cfg` holds data about which database connection to use from your saved database connections and which dataprocessing version.

```
# This file is part of eDisGo, a python package for distribution grid
# analysis and optimization.
#
# It is developed in the project open_eGo: https://openegoproject.wordpress.com
#
# eDisGo lives on github: https://github.com/openego/edisgo/
# The documentation is available on RTD: http://edisgo.readthedocs.io

[data_source]

oedb_data_source = versioned

[model_draft]

conv_generators_prefix = t_ego_supply_conv_powerplant_
conv_generators_suffix = _mview
re_generators_prefix = t_ego_supply_res_powerplant_
re_generators_suffix = _mview
```

(continues on next page)

(continued from previous page)

```

res_feedin_data = EgoRenewableFeedin
load_data = EgoDemandHvmvDemand
load_areas = EgoDemandLoadarea

#conv_generators_nep2035 = t_ego_supply_conv_powerplant_nep2035_mview
#conv_generators_ego100 = ego_supply_conv_powerplant_ego100_mview
#re_generators_nep2035 = t_ego_supply_res_powerplant_nep2035_mview
#re_generators_ego100 = t_ego_supply_res_powerplant_ego100_mview

[versioned]

conv_generators_prefix = t_ego_dp_conv_powerplant_
conv_generators_suffix = _mview
re_generators_prefix = t_ego_dp_res_powerplant_
re_generators_suffix = _mview
res_feedin_data = EgoRenewableFeedin
load_data = EgoDemandHvmvDemand
load_areas = EgoDemandLoadarea

version = v0.4.5

```

1.6.2 config_grid_expansion

The config file `config_grid_expansion.cfg` holds data mainly needed to determine grid expansion needs and costs - these are standard equipment to use in grid expansion and its costs, as well as allowed voltage deviations and line load factors.

```

# This file is part of eDisGo, a python package for distribution grid
# analysis and optimization.
#
# It is developed in the project open_eGo: https://openegoproject.wordpress.com
#
# eDisGo lives on github: https://github.com/openego/edisgo/
# The documentation is available on RTD: http://edisgo.readthedocs.io

[grid_expansion_standard_equipment]

# standard equipment
# =====
# Standard equipment for grid expansion measures. Source: Rehtanz et. al.:
# ↪ "Verteilnetzstudie für das Land Baden-Württemberg", 2017.
hv_mv_transformer = 40 MVA
mv_lv_transformer = 630 kVA
mv_line_10kv = NA2XS2Y 3x1x185 RM/25
mv_line_20kv = NA2XS2Y 3x1x240
lv_line = NAYY 4x1x150

[grid_expansion_allowed_voltage_deviations]

# allowed voltage deviations
# =====

```

(continues on next page)

(continued from previous page)

```

# relevant for all cases
feed-in_case_lower = 0.9
load_case_upper = 1.1

# COMBINED MV+LV
# -----
# hv_mv_trafo_offset:
#     offset which is set at HV-MV station
#     (pos. if op. voltage is increased, neg. if decreased)
hv_mv_trafo_offset = 0.0

# hv_mv_trafo_control_deviation:
#     control deviation of HV-MV station
#     (always pos. in config; pos. or neg. usage depending on case in edisgo)
hv_mv_trafo_control_deviation = 0.0

# mv_lv_max_v_deviation:
#     max. allowed voltage deviation according to DIN EN 50160
#     caution: offset and control deviation at HV-MV station must be considered in
#     ↪ calculations!
mv_lv_feed-in_case_max_v_deviation = 0.1
mv_lv_load_case_max_v_deviation = 0.1

# MV ONLY
# -----
# mv_load_case_max_v_deviation:
#     max. allowed voltage deviation in MV grids (load case)
mv_load_case_max_v_deviation = 0.015

# mv_feed-in_case_max_v_deviation:
#     max. allowed voltage deviation in MV grids (feed-in case)
#     according to BDEW
mv_feed-in_case_max_v_deviation = 0.05

# LV ONLY
# -----
# max. allowed voltage deviation in LV grids (load case)
lv_load_case_max_v_deviation = 0.065

# max. allowed voltage deviation in LV grids (feed-in case)
#     according to VDE-AR-N 4105
lv_feed-in_case_max_v_deviation = 0.035

# max. allowed voltage deviation in MV/LV stations (load case)
mv_lv_station_load_case_max_v_deviation = 0.02

# max. allowed voltage deviation in MV/LV stations (feed-in case)
mv_lv_station_feed-in_case_max_v_deviation = 0.015

[grid_expansion_load_factors]

# load factors

```

(continues on next page)

(continued from previous page)

```

# =====
# Source: Rehtanz et. al.: "Verteilnetzstudie für das Land Baden-Württemberg", 2017.
mv_load_case_transformer = 0.5
mv_load_case_line = 0.5
mv_feed-in_case_transformer = 1.0
mv_feed-in_case_line = 1.0

lv_load_case_transformer = 1.0
lv_load_case_line = 1.0
lv_feed-in_case_transformer = 1.0
lv_feed-in_case_line = 1.0

# costs
# =====

[costs_cables]

# costs in kEUR/km
# costs for cables without earthwork are taken from [1] (costs for standard
# cables are used here as representative since they have average costs), costs
# including earthwork are taken from [2]
# [1] https://www.bundesnetzagentur.de/SharedDocs/Downloads/DE/Sachgebiete/Energie/Unternehmen\_Institutionen/Netzentgelte/Anreizregulierung/GA\_AnalytischeKostenmodelle.pdf?\_\_blob=publicationFile&v=1
# [2] https://shop.dena.de/fileadmin/denashop/media/Downloads\_Dateien/esd/9100\_dena-Verteilnetzstudie\_Abschlussbericht.pdf
# costs including earthwork costs depend on population density according to [2]
# here "rural" corresponds to a population density of  $\leq 500$  people/km2
# and "urban" corresponds to a population density of  $> 500$  people/km2
lv_cable = 9
lv_cable_incl_earthwork_rural = 60
lv_cable_incl_earthwork_urban = 100
mv_cable = 20
mv_cable_incl_earthwork_rural = 80
mv_cable_incl_earthwork_urban = 140

[costs_transformers]

# costs in kEUR, source: DENA Verteilnetzstudie
lv = 10
mv = 1000

```

1.6.3 config_timeseries

The config file `config_timeseries.cfg` holds data to define the two worst-case scenarios heavy load flow ('load case') and reverse power flow ('feed-in case') used in conventional grid expansion planning, power factors and modes (inductive or capacitive) to generate reactive power time series, as well as configurations of the demandlib in case load time series are generated using the oemof demandlib.

```
# This file is part of eDisGo, a python package for distribution grid
# analysis and optimization.
#
# It is developed in the project open_eGo: https://openegoproject.wordpress.com
#
# eDisGo lives on github: https://github.com/openego/edisgo/
# The documentation is available on RTD: http://edisgo.readthedocs.io

# This file contains relevant data to generate load and feed-in time series.
# Scale factors are used in worst-case scenarios.
# Power factors are used to generate reactive power time series.

[worst_case_scale_factor]

# scale factors
# =====
# scale factors describe actual power to nominal power ratio of generators and loads in
↳ worst-case scenarios
# following values provided by "dena-Verteilnetzstudie. Ausbau- und
# Innovationsbedarf der Stromverteilnetze in Deutschland bis 2030", .p. 98

# conventional load
# factors taken from "dena-Verteilnetzstudie. Ausbau- und
# Innovationsbedarf der Stromverteilnetze in Deutschland bis 2030", p. 98
mv_feed-in_case_load = 0.15
lv_feed-in_case_load = 0.1
mv_load_case_load = 1.0
lv_load_case_load = 1.0

# generators
# factors taken from "dena-Verteilnetzstudie. Ausbau- und
# Innovationsbedarf der Stromverteilnetze in Deutschland bis 2030", p. 98
feed-in_case_feed-in_pv = 0.85
feed-in_case_feed-in_wind = 1.0
feed-in_case_feed-in_other = 1.0
load_case_feed-in_pv = 0.0
load_case_feed-in_wind = 0.0
load_case_feed-in_other = 0.0

# storage units (own values)
feed-in_case_storage = 1.0
load_case_storage = -1.0

# charging points (temporary own values)

# simultaneity of 0.15 follows assumptions from "dena-Verteilnetzstudie" for
↳ conventional loads
```

(continues on next page)

(continued from previous page)

```

mv_feed-in_case_cp_home = 0.15
mv_feed-in_case_cp_work = 0.15
mv_feed-in_case_cp_public = 0.15
mv_feed-in_case_cp_hpc = 0.15

# simultaneity in feed-in case is in dena study "Integrierte Energiewende" (p. 90) as
↳ well assumed to be zero
lv_feed-in_case_cp_home = 0.0
lv_feed-in_case_cp_work = 0.0
lv_feed-in_case_cp_public = 0.0
lv_feed-in_case_cp_hpc = 0.0

# simultaneity in load case should be dependent on number of charging points in the grid
# as well as charging power
# assumed factors for home and work charging higher for LV, as simultaneity of charging
# decreases with the number of charging points

# simultaneity of 0.2 follows assumptions from dena study "Integrierte Energiewende" (p.
↳ 90) where
# simultaneity for 70-500 charging points lies around 20%
mv_load_case_cp_home = 0.2
mv_load_case_cp_work = 0.2
mv_load_case_cp_public = 1.0
mv_load_case_cp_hpc = 1.0

lv_load_case_cp_home = 1.0
lv_load_case_cp_work = 1.0
lv_load_case_cp_public = 1.0
lv_load_case_cp_hpc = 1.0

# heat pumps (temporary own values)

# simultaneity in feed-in case is in dena study "Integrierte Energiewende" (p. 90) as
↳ well assumed to be zero
mv_feed-in_case_hp = 0.0
lv_feed-in_case_hp = 0.0

# simultaneity in load case should be dependent on number of heat pumps in the grid
# simultaneity of 0.8 follows assumptions from dena study "Integrierte Energiewende" (p.
↳ 90) where
# simultaneity for 70-500 heat pumps lies around 80%
mv_load_case_hp = 0.8
lv_load_case_hp = 1.0

[reactive_power_factor]

# power factors
# =====
# power factors used to generate reactive power time series for loads and generators

mv_gen = 0.9
mv_load = 0.9

```

(continues on next page)

(continued from previous page)

```

mv_storage = 0.9
mv_cp = 1.0
mv_hp = 1.0
lv_gen = 0.95
lv_load = 0.95
lv_storage = 0.95
lv_cp = 1.0
lv_hp = 1.0

[reactive_power_mode]

# power factor modes
# =====
# power factor modes used to generate reactive power time series for loads and generators

mv_gen = inductive
mv_load = inductive
mv_storage = inductive
mv_cp = inductive
mv_hp = inductive
lv_gen = inductive
lv_load = inductive
lv_storage = inductive
lv_cp = inductive
lv_hp = inductive

[demandlib]

# demandlib data
# =====
# data used in the demandlib to generate industrial load profile
# see IndustrialProfile in https://github.com/oemof/demandlib/blob/master/demandlib/
# ↪ particular_profiles.py
# for further information

# scaling factors for night and day of weekdays and weekend days
week_day = 0.8
week_night = 0.6
weekend_day = 0.6
weekend_night = 0.6
# tuple specifying the beginning/end of a workday (e.g. 18:00)
day_start = 6:00
day_end = 22:00

```

1.6.4 config_grid

The config file `config_grid.cfg` holds data to specify parameters used when connecting new generators to the grid and where to position disconnecting points.

```
# This file is part of eDisGo, a python package for distribution grid
# analysis and optimization.
#
# It is developed in the project open_eGo: https://openegoproject.wordpress.com
#
# eDisGo lives on github: https://github.com/openego/edisgo/
# The documentation is available on RTD: http://edisgo.readthedocs.io

# Config file to specify parameters used when connecting new generators to the grid and
# where to position disconnecting points.

[geo]

# WGS84: 4326
srid = 4326

[grid_connection]

# branch_detour_factor:
#     normally, lines do not go straight from A to B due to obstacles etc. Therefore, a
#     ↪ detour factor is used.
#     unit: -
branch_detour_factor = 1.3

# conn_buffer_radius:
#     radius used to find connection targets
#     unit: m
conn_buffer_radius = 2000

# conn_buffer_radius_inc:
#     radius which is incrementally added to conn_buffer_radius as long as no target
#     ↪ is found
#     unit: m
conn_buffer_radius_inc = 1000

# conn_diff_tolerance:
#     threshold which is used to determine if 2 objects are on the same position
#     unit: -
conn_diff_tolerance = 0.0001

[disconnecting_point]

# Positioning of disconnecting points: Can be position at location of most
# balanced load or generation. Choose load, generation, loadgen
position = load
```


1.7 Equipment data

The following tables hold all data of cables, lines and transformers used.

Table 1.2: LV cables

| name | U_n | I_max_th | R_per_km | L_per_km | C_per_km |
|--------------|-----|----------|----------|----------|----------|
| #- | kV | kA | ohm/km | mH/km | uF/km |
| NAYY 4x1x300 | 0.4 | 0.419 | 0.1 | 0.279 | 0 |
| NAYY 4x1x240 | 0.4 | 0.364 | 0.125 | 0.254 | 0 |
| NAYY 4x1x185 | 0.4 | 0.313 | 0.164 | 0.256 | 0 |
| NAYY 4x1x150 | 0.4 | 0.275 | 0.206 | 0.256 | 0 |
| NAYY 4x1x120 | 0.4 | 0.245 | 0.253 | 0.256 | 0 |
| NAYY 4x1x95 | 0.4 | 0.215 | 0.320 | 0.261 | 0 |
| NAYY 4x1x50 | 0.4 | 0.144 | 0.449 | 0.270 | 0 |
| NAYY 4x1x35 | 0.4 | 0.123 | 0.868 | 0.271 | 0 |

Table 1.3: MV cables

| name | U_n | I_max_th | R_per_km | L_per_km | C_per_km |
|---------------------------|-----|----------|----------|----------|----------|
| #- | kV | kA | ohm/km | mH/km | uF/km |
| NA2XS2Y 3x1x185 RM/25 | 10 | 0.357 | 0.164 | 0.38 | 0.41 |
| NA2XS2Y 3x1x240 RM/25 | 10 | 0.417 | 0.125 | 0.36 | 0.47 |
| NA2XS2Y 3x1x300 RM/25 | 10 | 0.466 | 0.1 | 0.35 | 0.495 |
| NA2XS2Y 3x1x400 RM/35 | 10 | 0.535 | 0.078 | 0.34 | 0.57 |
| NA2XS2Y 3x1x500 RM/35 | 10 | 0.609 | 0.061 | 0.32 | 0.63 |
| NA2XS2Y 3x1x150 RE/25 | 20 | 0.319 | 0.206 | 0.4011 | 0.24 |
| NA2XS2Y 3x1x240 | 20 | 0.417 | 0.13 | 0.3597 | 0.304 |
| NA2XS(FL)2Y 3x1x300 RM/25 | 20 | 0.476 | 0.1 | 0.37 | 0.25 |
| NA2XS(FL)2Y 3x1x400 RM/35 | 20 | 0.525 | 0.078 | 0.36 | 0.27 |
| NA2XS(FL)2Y 3x1x500 RM/35 | 20 | 0.598 | 0.06 | 0.34 | 0.3 |

Table 1.4: MV overhead lines

| name | U_n | I_max_th | R_per_km | L_per_km | C_per_km |
|-----------------|-----|----------|----------|----------|----------|
| #- | kV | kA | ohm/km | mH/km | uF/km |
| 48-AL1/8-ST1A | 10 | 0.21 | 0.35 | 1.11 | 0.0104 |
| 94-AL1/15-ST1A | 10 | 0.35 | 0.33 | 1.05 | 0.0112 |
| 122-AL1/20-ST1A | 10 | 0.41 | 0.31 | 0.99 | 0.0115 |
| 48-AL1/8-ST1A | 20 | 0.21 | 0.37 | 1.18 | 0.0098 |
| 94-AL1/15-ST1A | 20 | 0.35 | 0.35 | 1.11 | 0.0104 |
| 122-AL1/20-ST1A | 20 | 0.41 | 0.34 | 1.08 | 0.0106 |

Table 1.5: LV transformers

| name | S_nom | u_kr | P_k |
|----------|-------|------|---------|
| # | MVA | % | MW |
| 100 kVA | 0.1 | 4 | 0.00175 |
| 160 kVA | 0.16 | 4 | 0.00235 |
| 250 kVA | 0.25 | 4 | 0.00325 |
| 400 kVA | 0.4 | 4 | 0.0046 |
| 630 kVA | 0.63 | 4 | 0.0065 |
| 800 kVA | 0.8 | 6 | 0.0084 |
| 1000 kVA | 1.0 | 6 | 0.00105 |

Table 1.6: MV transformers

| name | S_nom |
|--------|-------|
| # | MVA |
| 20 MVA | 20 |
| 32 MVA | 32 |
| 40 MVA | 40 |
| 63 MVA | 63 |

1.8 API

1.8.1 EDisGo class

class edisgo.EDisGo(**kwargs)

Provides the top-level API for invocation of data import, power flow analysis, network reinforcement, flexibility measures, etc..

Parameters

- **ding0_grid** (*str*) – Path to directory containing csv files of network to be loaded.
- **generator_scenario** (None or *str*, optional) – If None, the generator park of the imported grid is kept as is. Otherwise defines which scenario of future generator park to use and invokes grid integration of these generators. Possible options are ‘nep2035’ and ‘ego100’. These are scenarios from the research project [open_eGo](#) (see [final report](#) for more information on the scenarios). See [import_generators](#) for further information on how generators are integrated and what further options there are. Default: None.
- **timeindex** (None or *pandas.DatetimeIndex*, optional) – Defines the time steps feed-in and demand time series of all generators, loads and storage units need to be set. The time index is for example used as default for time steps considered in the power flow analysis and when checking the integrity of the network. Providing a time index is only optional in case a worst case analysis is set up using [set_time_series_worst_case_analysis\(\)](#). In all other cases a time index needs to be set manually.
- **config_path** (None or *str* or *dict*) – Path to the config directory. Options are:
 - **‘default’** (default)
If *config_path* is set to ‘default’, the provided default config files are used directly.
 - **str**
If *config_path* is a string, configs will be loaded from the directory specified by *con-*

fig_path. If the directory does not exist, it is created. If config files don't exist, the default config files are copied into the directory.

– **dict**

A dictionary can be used to specify different paths to the different config files. The dictionary must have the following keys:

- * 'config_db_tables'
- * 'config_grid'
- * 'config_grid_expansion'
- * 'config_timeseries'

Values of the dictionary are paths to the corresponding config file. In contrast to the other options, the directories and config files must exist and are not automatically created.

– **None**

If *config_path* is None, configs are loaded from the edisgo default config directory (\$HOME\$.edisgo). If the directory does not exist, it is created. If config files don't exist, the default config files are copied into the directory.

Default: "default".

topology

The topology is a container object holding the topology of the grids including buses, lines, transformers, switches and components connected to the grid including generators, loads and storage units.

Type

Topology

timeseries

Container for active and reactive power time series of generators, loads and storage units.

Type

TimeSeries

results

This is a container holding all calculation results from power flow analyses and grid reinforcement.

Type

Results

electromobility

This class holds data on charging processes (how long cars are parking at a charging station, how much they need to charge, etc.) necessary to apply different charging strategies, as well as information on potential charging sites and integrated charging parks.

Type

Electromobility

heat_pump

This is a container holding heat pump data such as COP, heat demand to be served and heat storage information.

Type

HeatPump

property config

eDisGo configuration data.

Parameters

kwargs (*dict*) – Dictionary with keyword arguments to set up Config object. See parameters of [Config](#) class for more information on possible input parameters.

Returns

Config object with configuration data from config files.

Return type

[Config](#)

import_ding0_grid(path)

Import ding0 topology data from csv files in the format as [Ding0](#) provides it.

Parameters

path (*str*) – Path to directory containing csv files of network to be loaded.

set_timeindex(timeindex)

Sets [timeindex](#) all time-dependent attributes are indexed by.

The time index is for example used as default for time steps considered in the power flow analysis and when checking the integrity of the network.

Parameters

timeindex ([pandas.DatetimeIndex](#)) – Time index to set.

set_time_series_manual(generators_p=None, loads_p=None, storage_units_p=None, generators_q=None, loads_q=None, storage_units_q=None)

Sets given component time series.

If time series for a component were already set before, they are overwritten.

Parameters

- **generators_p** ([pandas.DataFrame](#)) – Active power time series in MW of generators. Index of the data frame is a datetime index. Columns contain generators names of generators to set time series for. Default: None.
- **loads_p** ([pandas.DataFrame](#)) – Active power time series in MW of loads. Index of the data frame is a datetime index. Columns contain load names of loads to set time series for. Default: None.
- **storage_units_p** ([pandas.DataFrame](#)) – Active power time series in MW of storage units. Index of the data frame is a datetime index. Columns contain storage unit names of storage units to set time series for. Default: None.
- **generators_q** ([pandas.DataFrame](#)) – Reactive power time series in MVA of generators. Index of the data frame is a datetime index. Columns contain generators names of generators to set time series for. Default: None.
- **loads_q** ([pandas.DataFrame](#)) – Reactive power time series in MVA of loads. Index of the data frame is a datetime index. Columns contain load names of loads to set time series for. Default: None.
- **storage_units_q** ([pandas.DataFrame](#)) – Reactive power time series in MVA of storage units. Index of the data frame is a datetime index. Columns contain storage unit names of storage units to set time series for. Default: None.

Notes

This function raises a warning in case a time index was not previously set. You can set the time index upon initialisation of the EDisGo object by providing the input parameter ‘timeindex’ or using the function [set_timeindex](#). Also make sure that the time steps for which time series are provided include the set time index.

set_time_series_worst_case_analysis(*cases=None, generators_names=None, loads_names=None, storage_units_names=None*)

Sets demand and feed-in of all loads, generators and storage units for the specified worst cases.

See `set_worst_case()` for more information.

Parameters

- **cases** (*str* or *list(str)*) – List with worst-cases to generate time series for. Can be ‘feed-in_case’, ‘load_case’ or both. Defaults to None in which case both ‘feed-in_case’ and ‘load_case’ are set up.
- **generators_names** (*list(str)*) – Defines for which generators to set worst case time series. If None, time series are set for all generators. Default: None.
- **loads_names** (*list(str)*) – Defines for which loads to set worst case time series. If None, time series are set for all loads. Default: None.
- **storage_units_names** (*list(str)*) – Defines for which storage units to set worst case time series. If None, time series are set for all storage units. Default: None.

set_time_series_active_power_predefined(*fluctuating_generators_ts=None, fluctuating_generators_names=None, dispatchable_generators_ts=None, dispatchable_generators_names=None, conventional_loads_ts=None, conventional_loads_names=None, charging_points_ts=None, charging_points_names=None*)

Uses predefined feed-in or demand profiles.

Predefined profiles comprise i.e. standard electric conventional load profiles for different sectors generated using the oemof [demandlib](#) or feed-in time series of fluctuating solar and wind generators provided on the OpenEnergy DataBase for the weather year 2011.

This function can also be used to provide your own profiles per technology or load sector.

Parameters

- **fluctuating_generators_ts** (*str* or *pandas.DataFrame*) – Defines which technology-specific (or technology and weather cell specific) time series to use to set active power time series of fluctuating generators. See parameter *ts_generators* in `predefined_fluctuating_generators_by_technology()` for more information. If None, no time series of fluctuating generators are set. Default: None.
- **fluctuating_generators_names** (*list(str)*) – Defines for which fluctuating generators to apply technology-specific time series. See parameter *generator_names* in `predefined_dispatchable_generators_by_technology()` for more information. Default: None.
- **dispatchable_generators_ts** (*pandas.DataFrame*) – Defines which technology-specific time series to use to set active power time se-

ries of dispatchable generators. See parameter *ts_generators* in `predefined_dispatchable_generators_by_technology()` for more information. If None, no time series of dispatchable generators are set. Default: None.

- **dispatchable_generators_names** (*list(str)*) – Defines for which dispatchable generators to apply technology-specific time series. See parameter *generator_names* in `predefined_dispatchable_generators_by_technology()` for more information. Default: None.
- **conventional_loads_ts** (*pandas.DataFrame*) – Defines which sector-specific time series to use to set active power time series of conventional loads. See parameter *ts_loads* in `predefined_conventional_loads_by_sector()` for more information. If None, no time series of conventional loads are set. Default: None.
- **conventional_loads_names** (*list(str)*) – Defines for which conventional loads to apply technology-specific time series. See parameter *load_names* in `predefined_conventional_loads_by_sector()` for more information. Default: None.
- **charging_points_ts** (*pandas.DataFrame*) – Defines which use-case-specific time series to use to set active power time series of charging points. See parameter *ts_loads* in `predefined_charging_points_by_use_case()` for more information. If None, no time series of charging points are set. Default: None.
- **charging_points_names** (*list(str)*) – Defines for which charging points to apply use-case-specific time series. See parameter *load_names* in `predefined_charging_points_by_use_case()` for more information. Default: None.

Notes

This function raises a warning in case a time index was not previously set. You can set the time index upon initialisation of the EDisGo object by providing the input parameter ‘timeindex’ or using the function [set_timeindex](#). Also make sure that the time steps for which time series are provided include the set time index.

```
set_time_series_reactive_power_control(control='fixed_cosphi',
                                       generators_parametrisation='default',
                                       loads_parametrisation='default',
                                       storage_units_parametrisation='default')
```

Set reactive power time series of components.

Parameters

- **control** (*str*) – Type of reactive power control to apply. Currently the only option is ‘fixed_coshpi’. See `fixed_cosphi()` for further information.
- **generators_parametrisation** (*str* or *pandas.DataFrame*) – See parameter *generators_parametrisation* in `fixed_cosphi()` for further information. Here, per default, the option ‘default’ is used.
- **loads_parametrisation** (*str* or *pandas.DataFrame*) – See parameter *loads_parametrisation* in `fixed_cosphi()` for further information. Here, per default, the option ‘default’ is used.
- **storage_units_parametrisation** (*str* or *pandas.DataFrame*) – See parameter *storage_units_parametrisation* in `fixed_cosphi()` for further information. Here,

per default, the option ‘default’ is used.

Notes

Be careful to set parametrisation of other component types to None if you only want to set reactive power of certain components. See example below for further information.

Examples

To only set reactive power time series of one generator using default configurations you can do the following:

```
>>> self.set_time_series_reactive_power_control(
>>>     generators_parametrisation=pd.DataFrame(
>>>         {
>>>             "components": ["Generator_1"],
>>>             "mode": ["default"],
>>>             "power_factor": ["default"],
>>>         },
>>>         index=[1],
>>>     ),
>>>     loads_parametrisation=None,
>>>     storage_units_parametrisation=None
>>> )
```

In the example above, *loads_parametrisation* and *storage_units_parametrisation* need to be set to None, otherwise already existing time series would be overwritten.

To only change configuration of one load and for all other components use default configurations you can do the following:

```
>>> self.set_time_series_reactive_power_control(
>>>     loads_parametrisation=pd.DataFrame(
>>>         {
>>>             "components": ["Load_1"],
>>>                             self.topology.loads_df.index.drop(["Load_1"]),
>>>             "mode": ["capacitive", "default"],
>>>             "power_factor": [0.98, "default"],
>>>         },
>>>         index=[1, 2],
>>>     )
>>> )
```

In the example above, *generators_parametrisation* and *storage_units_parametrisation* do not need to be set as default configurations are per default used for all generators and storage units anyways.

to_pypsa(*mode=None, timesteps=None, check_edisgo_integrity=False, **kwargs*)

Convert grid to [PyPSA.Network](#) representation.

You can choose between translation of the MV and all underlying LV grids (*mode=None* (default)), the MV network only (*mode='mv'* or *mode='mvlv'*) or a single LV network (*mode='lv'*).

Parameters

- **mode** (*str*) – Determines network levels that are translated to `PyPSA.Network`. Possible options are:
 - None
MV and underlying LV networks are exported. This is the default.
 - 'mv'
Only MV network is exported. MV/LV transformers are not exported in this mode. Loads, generators and storage units in underlying LV grids are connected to the respective MV/LV station's primary side. Per default, they are all connected separately, but you can also choose to aggregate them. See parameters `aggregate_loads`, `aggregate_generators` and `aggregate_storages` for more information.
 - 'mvlv'
This mode works similar as mode 'mv', with the difference that MV/LV transformers are as well exported and LV components connected to the respective MV/LV station's secondary side. Per default, all components are connected separately, but you can also choose to aggregate them. See parameters `aggregate_loads`, `aggregate_generators` and `aggregate_storages` for more information.
 - 'lv'
Single LV network topology including the MV/LV transformer is exported. The LV grid to export is specified through the parameter `lv_grid_id`. The slack is positioned at the secondary side of the MV/LV station.
- **timesteps** (`pandas.DatetimeIndex` or `pandas.Timestamp`) – Specifies which time steps to export to pypsa representation to e.g. later on use in power flow analysis. It defaults to None in which case all time steps in `timeindex` are used. Default: None.
- **check_edisgo_integrity** (*bool*) – Check integrity of edisgo object before translating to pypsa. This option is meant to help the identification of possible sources of errors if the power flow calculations fail. See `check_integrity` for more information.
- **use_seed** (*bool*) – Use a seed for the initial guess for the Newton-Raphson algorithm. Only available when MV level is included in the power flow analysis. If True, uses voltage magnitude results of previous power flow analyses as initial guess in case of PQ buses. PV buses currently do not occur and are therefore currently not supported. Default: False.
- **lv_grid_id** (*int* or *str*) – ID (e.g. 1) or name (string representation, e.g. "LV-Grid_1") of LV grid to export in case mode is 'lv'.
- **aggregate_loads** (*str*) – Mode for load aggregation in LV grids in case mode is 'mv' or 'mvlv'. Can be 'sectoral' aggregating the loads sector-wise, 'all' aggregating all loads into one or None, not aggregating loads but appending them to the station one by one. Default: None.
- **aggregate_generators** (*str*) – Mode for generator aggregation in LV grids in case mode is 'mv' or 'mvlv'. Can be 'type' aggregating generators per generator type, 'curtailable' aggregating 'solar' and 'wind' generators into one and all other generators into another one, or None, where no aggregation is undertaken and generators are added to the station one by one. Default: None.

- **aggregate_storages** (*str*) – Mode for storage unit aggregation in LV grids in case mode is ‘mv’ or ‘mvlv’. Can be ‘all’ where all storage units in an LV grid are aggregated to one storage unit or None, in which case no aggregation is conducted and storage units are added to the station. Default: None.

Returns

[PyPSA.Network](#) representation.

Return type

[PyPSA.Network](#)

to_graph()

Returns networkx graph representation of the grid.

Returns

Graph representation of the grid as networkx Ordered Graph, where lines are represented by edges in the graph, and buses and transformers are represented by nodes.

Return type

[networkx.Graph](#)

import_generators(*generator_scenario=None, **kwargs*)

Gets generator park for specified scenario and integrates them into the grid.

Currently, the only supported data source is scenario data generated in the research project [open_eGo](#). You can choose between two scenarios: ‘nep2035’ and ‘ego100’. You can get more information on the scenarios in the [final report](#).

The generator data is retrieved from the [open energy platform](#) from tables for [conventional power plants](#) and [renewable power plants](#).

When the generator data is retrieved, the following steps are conducted:

- Step 1: Update capacity of existing generators if ‘update_existing’ is True, which it is by default.
- Step 2: Remove decommissioned generators if *remove_decommissioned* is True, which it is by default.
- Step 3: Integrate new MV generators.
- Step 4: Integrate new LV generators.

For more information on how generators are integrated, see [connect_to_mv](#) and [connect_to_lv](#).

After the generator park is changed there may be grid issues due to the additional in-feed. These are not solved automatically. If you want to have a stable grid without grid issues you can invoke the automatic grid expansion through the function [reinforce](#).

Parameters

- **generator_scenario** (*str*) – Scenario for which to retrieve generator data. Possible options are ‘nep2035’ and ‘ego100’.
- **kwargs** – See [edisgo.io.generators_import.oedb\(\)](#).

analyze(*mode=None, timesteps=None, raise_not_converged=True, troubleshooting_mode=None, range_start=0.1, range_num=10, **kwargs*)

Conducts a static, non-linear power flow analysis.

Conducts a static, non-linear power flow analysis using [PyPSA](#) and writes results (active, reactive and apparent power as well as current on lines and voltages at buses) to [Results](#) (e.g. [v_res](#) for voltages).

Parameters

- **mode** (*str* or *None*) – Allows to toggle between power flow analysis for the whole network or just the MV or one LV grid. Possible options are:
 - **None (default)**

Power flow analysis is conducted for the whole network including MV grid and underlying LV grids.
 - **'mv'**

Power flow analysis is conducted for the MV level only. LV loads, generators and storage units are aggregated at the respective MV/LV stations' primary side. Per default, they are all connected separately, but you can also choose to aggregate them. See parameters *aggregate_loads*, *aggregate_generators* and *aggregate_storages* in [to_pypsa](#) for more information.
 - **'mvlv'**

Power flow analysis is conducted for the MV level only. In contrast to mode 'mv' LV loads, generators and storage units are in this case aggregated at the respective MV/LV stations' secondary side. Per default, they are all connected separately, but you can also choose to aggregate them. See parameters *aggregate_loads*, *aggregate_generators* and *aggregate_storages* in [to_pypsa](#) for more information.
 - **'lv'**

Power flow analysis is conducted for one LV grid only. ID or name of the LV grid to conduct power flow analysis for needs to be provided through keyword argument 'lv_grid_id' as integer or string. See parameter *lv_grid_id* in [to_pypsa](#) for more information. The slack is positioned at the secondary side of the MV/LV station.
- **timesteps** (*pandas.DatetimeIndex* or *pandas.Timestamp*) – Timesteps specifies for which time steps to conduct the power flow analysis. It defaults to *None* in which case all time steps in *timeindex* are used.
- **raise_not_converged** (*bool*) – If *True*, an error is raised in case power flow analysis did not converge for all time steps. Default: *True*.
- **troubleshooting_mode** (*str* or *None*) – Two optional troubleshooting methods in case of nonconvergence of nonlinear power flow (cf. [1])
 - **None (default)**

Power flow analysis is conducted using nonlinear power flow method.
 - **'lpf'**

Non-linear power flow initial guess is seeded with the voltage angles from the linear power flow.
 - **'iteration'**

Power flow analysis is conducted by reducing all power values of generators and loads to a fraction, e.g. 10%, solving the load flow and using it as a seed for the power at 20%, iteratively up to 100%.
- **range_start** (*float*, *optional*) – Specifies the minimum fraction that power values are set to when using troubleshooting_mode 'iteration'. Must be between 0 and 1. Default: 0.1.
- **range_num** (*int*, *optional*) – Specifies the number of fraction samples to generate when using troubleshooting_mode 'iteration'. Must be non-negative. Default: 10.

- **kwargs** (*dict*) – Possible other parameters comprise all other parameters that can be set in `edisgo.io.pypsa.io.to_pypsa()`.

Returns

Returns the time steps for which power flow analysis did not converge.

Return type

`pandas.DatetimeIndex`

References

[1] <https://pypsa.readthedocs.io/en/latest/troubleshooting.html>

reinforce(*timesteps_pfa=None, copy_grid=False, max_while_iterations=20, combined_analysis=False, mode=None, without_generator_import=False, **kwargs*)

Reinforces the network and calculates network expansion costs.

If the `edisgo.network.timeseries.TimeSeries.is_worst_case` is True input for *timesteps_pfa* and *mode* are overwritten and therefore ignored.

See `edisgo.flex_opt.reinforce_grid.reinforce_grid()` for more information on input parameters and methodology.

Parameters

is_worst_case (*bool*) – Is used to overwrite the return value from `edisgo.network.timeseries.TimeSeries.is_worst_case`. If True reinforcement is calculated for worst-case MV and LV cases separately.

Return type

Results

perform_mp_opf(*timesteps, storage_series=None, **kwargs*)

Run optimal power flow with julia.

Parameters

- **timesteps** (*list*) – List of timesteps to perform OPF for.
- **kwargs** – See `run_mp_opf()` for further information.

Returns

Status of optimization.

Return type

str

add_component(*comp_type, ts_active_power=None, ts_reactive_power=None, **kwargs*)

Adds single component to network.

Components can be lines or buses as well as generators, loads, or storage units. If *add_ts* is set to True, time series of elements are set as well. Currently, time series need to be provided.

Parameters

- **comp_type** (*str*) – Type of added component. Can be ‘bus’, ‘line’, ‘load’, ‘generator’, or ‘storage_unit’.
- **ts_active_power** (`pandas.Series` or *None*) – Active power time series of added component. Index of the series must contain all time steps in *timeindex*. Values are active power per time step in MW. Defaults to *None* in which case no time series is set.
- **ts_reactive_power** (`pandas.Series` or *str* or *None*) – Possible options are:

- `pandas.Series`

Reactive power time series of added component. Index of the series must contain all time steps in `timeindex`. Values are reactive power per time step in MVA.

- "default"

Reactive power time series is determined based on assumptions on fixed power factor of the component. To this end, the power factors set in the config section `reactive_power_factor` and the power factor mode, defining whether components behave inductive or capacitive, given in the config section `reactive_power_mode`, are used. This option requires you to provide an active power time series. In case it was not provided, reactive power cannot be set and a warning is raised.

- None

No reactive power time series is set.

Default: None

- ****kwargs** (*dict*) – Attributes of added component. See respective functions for required entries.
 - 'bus' : `add_bus`
 - 'line' : `add_line`
 - 'load' : `add_load`
 - 'generator' : `add_generator`
 - 'storage_unit' : `add_storage_unit`

integrate_component_based_on_geolocation(*comp_type, geolocation, voltage_level=None, add_ts=True, ts_active_power=None, ts_reactive_power=None, **kwargs*)

Adds single component to topology based on geolocation.

Currently components can be generators, charging points and heat pumps.

See `connect_to_mv` and `connect_to_lv` for more information.

Parameters

- **comp_type** (*str*) – Type of added component. Can be 'generator', 'charging_point' or 'heat_pump'.
- **geolocation** (*shapely.Point* or tuple) – Geolocation of the new component. In case of tuple, the geolocation must be given in the form (longitude, latitude).
- **voltage_level** (*int, optional*) – Specifies the voltage level the new component is integrated in. Possible options are 4 (MV busbar), 5 (MV grid), 6 (LV busbar) or 7 (LV grid). If no voltage level is provided the voltage level is determined based on the nominal power `p_nom` or `p_set` (given as kwarg) as follows:
 - voltage level 4 (MV busbar): nominal power between 4.5 MW and 17.5 MW
 - voltage level 5 (MV grid) : nominal power between 0.3 MW and 4.5 MW
 - voltage level 6 (LV busbar): nominal power between 0.1 MW and 0.3 MW
 - voltage level 7 (LV grid): nominal power below 0.1 MW

- **add_ts** (*bool*, optional) – Indicator if time series for component are added as well. Default: True.
- **ts_active_power** (*pandas.Series*, optional) – Active power time series of added component. Index of the series must contain all time steps in *timeindex*. Values are active power per time step in MW. If you want to add time series (if *add_ts* is True), you must provide a time series. It is not automatically retrieved.
- **ts_reactive_power** (*pandas.Series*, optional) – Reactive power time series of added component. Index of the series must contain all time steps in *timeindex*. Values are reactive power per time step in MVA. If you want to add time series (if *add_ts* is True), you must provide a time series. It is not automatically retrieved.
- **kwargs** – Attributes of added component. See *add_generator* respectively *add_load* methods for more information on required and optional parameters of generators respectively charging points and heat pumps.

remove_component (*comp_type*, *comp_name*, *drop_ts=True*)

Removes single component from network.

Components can be lines or buses as well as generators, loads, or storage units. If *drop_ts* is set to True, time series of elements are deleted as well.

Parameters

- **comp_type** (*str*) – Type of removed component. Can be ‘bus’, ‘line’, ‘load’, ‘generator’, or ‘storage_unit’.
- **comp_name** (*str*) – Name of component to be removed.
- **drop_ts** (*bool*) – Indicator if time series for component are removed as well. Defaults to True.

aggregate_components (*aggregate_generators_by_cols=None*, *aggregate_loads_by_cols=None*)

Aggregates generators and loads at the same bus.

By default all generators respectively loads at the same bus are aggregated. You can specify further columns to consider in the aggregation, such as the generator type or the load sector. Make sure to always include the bus in the list of columns to aggregate by, as otherwise the topology would change.

Be aware that by aggregating components you lose some information e.g. on load sector or charging point use case.

Parameters

- **aggregate_generators_by_cols** (*list(str)* or *None*) – List of columns to aggregate generators at the same bus by. Valid columns are all columns in *generators_df*. If an empty list is given, generators are not aggregated. Defaults to None, in which case all generators at the same bus are aggregated.
- **aggregate_loads_by_cols** (*list(str)*) – List of columns to aggregate loads at the same bus by. Valid columns are all columns in *loads_df*. If an empty list is given, generators are not aggregated. Defaults to None, in which case all loads at the same bus are aggregated.

import_electromobility (*simbev_directory*, *tracbev_directory*, *import_electromobility_data_kwds=None*, *allocate_charging_demand_kwds=None*)

Imports electromobility data and integrates charging points into grid.

So far, this function requires electromobility data from *SimBEV* (required version: 3083c5a) and *TracBEV* (required version: 14d864c) to be stored in the directories specified through the parameters

simbev_directory and *tracbev_directory*. SimBEV provides data on standing times, charging demand, etc. per vehicle, whereas TracBEV provides potential charging point locations.

After electromobility data is loaded, the charging demand from SimBEV is allocated to potential charging points from TracBEV. Afterwards, all potential charging points with charging demand allocated to them are integrated into the grid.

Be aware that this function does not yield charging time series per charging point but only charging processes (see [charging_processes_df](#) for more information). The actual charging time series are determined through applying a charging strategy using the function `charging_strategy`.

Parameters

- **simbev_directory** (*str*) – SimBEV directory holding SimBEV data.
- **tracbev_directory** (*str*) – TracBEV directory holding TracBEV data.
- **import_electromobility_data_kwds** (*dict*) – These may contain any further attributes you want to specify when calling the function to import electromobility data from SimBEV and TracBEV using `import_electromobility()`.

gc_to_car_rate_home

[float] Specifies the minimum rate between potential charging parks points for the use case “home” and the total number of cars. Default 0.5.

gc_to_car_rate_work

[float] Specifies the minimum rate between potential charging parks points for the use case “work” and the total number of cars. Default 0.25.

gc_to_car_rate_public

[float] Specifies the minimum rate between potential charging parks points for the use case “public” and the total number of cars. Default 0.1.

gc_to_car_rate_hpc

[float] Specifies the minimum rate between potential charging parks points for the use case “hpc” and the total number of cars. Default 0.005.

mode_parking_times

[str] If the mode_parking_times is set to “frugal” only parking times with any charging demand are imported. Any other input will lead to all parking and driving events being imported. Default “frugal”.

charging_processes_dir

[str] Charging processes sub-directory. Default None.

simbev_config_file

[str] Name of the simbev config file. Default “metadata_simbev_run.json”.

- **allocate_charging_demand_kwds** – These may contain any further attributes you want to specify when calling the function that allocates charging processes from SimBEV to potential charging points from TracBEV using `distribute_charging_demand()`.

mode

[str] Distribution mode. If the mode is set to “user_friendly” only the simbev weights are used for the distribution. If the mode is “grid_friendly” also grid conditions are respected. Default “user_friendly”.

generators_weight_factor

[float] Weighting factor of the generators weight within an LV grid in comparison to the loads weight. Default 0.5.

distance_weight

[float] Weighting factor for the distance between a potential charging park and its nearest substation in comparison to the combination of the generators and load factors of the LV grids. Default 1 / 3.

user_friendly_weight

[float] Weighting factor of the user friendly weight in comparison to the grid friendly weight. Default 0.5.

apply_charging_strategy(*strategy='dumb', **kwargs*)

Applies charging strategy to set EV charging time series at charging parks.

This function requires that standing times, charging demand, etc. at charging parks were previously set using [import_electromobility](#).

It is assumed that only ‘private’ charging processes at ‘home’ or at ‘work’ can be flexibilized. ‘public’ charging processes will always be ‘dumb’.

The charging time series at each charging parks are written to [loads_active_power](#). Reactive power in [loads_reactive_power](#) is set to 0 Mvar.

Parameters

- **strategy** (*str*) – Defines the charging strategy to apply. The following charging strategies are valid:
 - ‘dumb’

The cars are charged directly after arrival with the maximum possible charging capacity.
 - ‘reduced’

The cars are charged directly after arrival with the minimum possible charging power. The minimum possible charging power is determined by the parking time and the parameter *minimum_charging_capacity_factor*.
 - ‘residual’

The cars are charged when the residual load in the MV grid is lowest (high generation and low consumption). Charging processes with a low flexibility are given priority.

Default: ‘dumb’.
- **timestamp_share_threshold** (*float*) – Percental threshold of the time required at a time step for charging the vehicle. If the time requirement is below this limit, then the charging process is not mapped into the time series. If, however, it is above this limit, the time step is mapped to 100% into the time series. This prevents differences between the charging strategies and creates a compromise between the simultaneity of charging processes and an artificial increase in the charging demand. Default: 0.2.
- **minimum_charging_capacity_factor** (*float*) – Technical minimum charging power of charging points in p.u. used in case of charging strategy ‘reduced’. E.g. for a charging point with a nominal capacity of 22 kW and a *minimum_charging_capacity_factor* of 0.1 this would result in a minimum charging power of 2.2 kW. Default: 0.1.

import_heat_pumps(*scenario=None, **kwargs*)

Gets heat pump capacities for specified scenario from oedb and integrates them into the grid.

Besides heat pump capacity the heat pump’s COP and heat demand to be served are as well retrieved.

Currently, the only supported data source is scenario data generated in the research project [eGoⁿ](#). You can choose between two scenarios: 'eGon2035' and 'eGon100RE'.

The data is retrieved from the [open energy platform](#).

ToDo Add information on scenarios and from which tables data is retrieved.

The following steps are conducted in this function:

- Spatially disaggregated data on heat pump capacities in individual and district heating are obtained from the database for the specified scenario.
- Heat pumps are integrated into the grid (added to [loads_df](#)).
 - Grid connection points of heat pumps for individual heating are determined based on the corresponding building ID.
 - Grid connection points of heat pumps for district heating are determined based on their geolocation and installed capacity. See [connect_to_mv](#) and [connect_to_lv](#) for more information.
- COP and heat demand for each heat pump are retrieved from the database and stored in the [HeatPump](#) class that can be accessed through [heat_pump](#).

Be aware that this function does not yield electricity load time series for the heat pumps. The actual time series are determined through applying an operation strategy or optimising heat pump dispatch.

After the heat pumps are integrated there may be grid issues due to the additional load. These are not solved automatically. If you want to have a stable grid without grid issues you can invoke the automatic grid expansion through the function [reinforce](#).

Parameters

- **scenario** (*str*) – Scenario for which to retrieve heat pump data. Possible options are 'eGon2035' and 'eGon100RE'.
- **kwargs** – See `edisgo.io.heat_pump_import.oedb()`.

apply_heat_pump_operating_strategy(*strategy='uncontrolled', heat_pump_names=None, **kwargs*)

Applies operating strategy to set electrical load time series of heat pumps.

This function requires that COP and heat demand time series, and depending on the operating strategy also information on thermal storage units, were previously set in [heat_pump](#). COP and heat demand information is automatically set when using [import_heat_pumps](#). When not using this function it can be manually set using [set_cop](#) and [set_heat_demand](#).

The electrical load time series of each heat pump are written to [loads_active_power](#). Reactive power in [loads_reactive_power](#) is set to 0 Mvar.

Parameters

- **strategy** (*str*) – Defines the operating strategy to apply. The following strategies are valid:
 - 'uncontrolled'

The heat demand is directly served by the heat pump without buffering heat using a thermal storage. The electrical load of the heat pump is determined as follows:

$$P_{el} = P_{th}/COP$$

Default: 'uncontrolled'.

- **heat_pump_names** (*list(str)* or *None*) – Defines for which heat pumps to apply operating strategy. If *None*, all heat pumps for which COP information in [heat_pump](#) is given are used. Default: *None*.

plot_mv_grid_topology(*technologies=False, **kwargs*)

Plots plain MV network topology and optionally nodes by technology type (e.g. station or generator).

For more information see [edisgo.tools.plots.mv_grid_topology\(\)](#).

Parameters

technologies (*bool*) – If *True* plots stations, generators, etc. in the topology in different colors. If *False* does not plot any nodes. Default: *False*.

plot_mv_voltages(***kwargs*)

Plots voltages in MV network on network topology plot.

For more information see [edisgo.tools.plots.mv_grid_topology\(\)](#).

plot_mv_line_loading(***kwargs*)

Plots relative line loading (current from power flow analysis to allowed current) of MV lines.

For more information see [edisgo.tools.plots.mv_grid_topology\(\)](#).

plot_mv_grid_expansion_costs(***kwargs*)

Plots grid expansion costs per MV line.

For more information see [edisgo.tools.plots.mv_grid_topology\(\)](#).

plot_mv_storage_integration(***kwargs*)

Plots storage position in MV topology of integrated storage units.

For more information see [edisgo.tools.plots.mv_grid_topology\(\)](#).

plot_mv_grid(***kwargs*)

General plotting function giving all options of function [edisgo.tools.plots.mv_grid_topology\(\)](#).

histogram_voltage(*timestep=None, title=True, **kwargs*)

Plots histogram of voltages.

For more information on the histogram plot and possible configurations see [edisgo.tools.plots.histogram\(\)](#).

Parameters

- **timestep** (*pandas.Timestamp* or *list(pandas.Timestamp)* or *None*, optional) – Specifies time steps histogram is plotted for. If *timestep* is *None* all time steps voltages are calculated for are used. Default: *None*.
- **title** (*str* or *bool*, optional) – Title for plot. If *True* title is auto generated. If *False* plot has no title. If *str*, the provided title is used. Default: *True*.

histogram_relative_line_load(*timestep=None, title=True, voltage_level='mv_lv', **kwargs*)

Plots histogram of relative line loads.

For more information on how the relative line load is calculated see [edisgo.tools.get_line_loading_from_network\(\)](#). For more information on the histogram plot and possible configurations see [edisgo.tools.plots.histogram\(\)](#).

Parameters

- **timestep** (*pandas.Timestamp* or *list(pandas.Timestamp)* or *None*, optional) – Specifies time step(s) histogram is plotted for. If *timestep* is *None* all time steps currents are calculated for are used. Default: *None*.

- **title** (*str* or *bool*, optional) – Title for plot. If True title is auto generated. If False plot has no title. If *str*, the provided title is used. Default: True.
- **voltage_level** (*str*) – Specifies which voltage level to plot voltage histogram for. Possible options are ‘mv’, ‘lv’ and ‘mv_lv’. ‘mv_lv’ is also the fallback option in case of wrong input. Default: ‘mv_lv’

save(*directory*, *save_topology=True*, *save_timeseries=True*, *save_results=True*, *save_electromobility=False*, *save_heatpump=False*, ***kwargs*)

Saves EDisGo object to csv files.

It can be chosen what is included in the csv export (e.g. power flow results, electromobility flexibility, etc.). Further, in order to save disk storage space the data type of time series data can be reduced, e.g. to float32 and data can be archived, e.g. in a zip archive.

Parameters

- **directory** (*str*) – Main directory to save EDisGo object to.
- **save_topology** (*bool*, optional) – Indicates whether to save *Topology* object. Per default it is saved to sub-directory ‘topology’. See *to_csv* for more information. Default: True.
- **save_timeseries** (*bool*, optional) – Indicates whether to save *Timeseries* object. Per default it is saved to subdirectory ‘timeseries’. Through the keyword arguments *reduce_memory* and *to_type* it can be chosen if memory should be reduced. See *to_csv* for more information. Default: True.
- **save_results** (*bool*, optional) – Indicates whether to save *Results* object. Per default it is saved to subdirectory ‘results’. Through the keyword argument *parameters* the results that should be stored can be specified. Further, through the keyword parameters *reduce_memory* and *to_type* it can be chosen if memory should be reduced. See *to_csv* for more information. Default: True.
- **save_electromobility** (*bool*, optional) – Indicates whether to save *Electromobility* object. Per default it is not saved. If set to True, it is saved to subdirectory ‘electromobility’. See *to_csv* for more information.
- **save_heatpump** (*bool*, optional) – Indicates whether to save *HeatPump* object. Per default it is not saved. If set to True, it is saved to subdirectory ‘heat_pump’. See *to_csv* for more information.
- **reduce_memory** (*bool*, optional) – If True, size of dataframes containing time series in *Results*, *TimeSeries* and *HeatPump* is reduced. See respective classes *reduce_memory* functions for more information. Type to convert to can be specified by providing *to_type* as keyword argument. Further parameters of *reduce_memory* functions cannot be passed here. Call these functions directly to make use of further options. Default: False.
- **to_type** (*str*, optional) – Data type to convert time series data to. This is a trade-off between precision and memory. Default: “float32”.
- **parameters** (*None* or *dict*) – Specifies which results to store. By default this is set to None, in which case all available results are stored. To only store certain results provide a dictionary. See function docstring *parameters* parameter in *to_csv()* for more information.
- **electromobility_attributes** (*None* or *list(str)*) – Specifies which electromobility attributes to store. By default this is set to None, in which case all attributes are stored. See function docstring *attributes* parameter in *to_csv* for more information.

- **archive** (*bool*, *optional*) – Save disk storage capacity by archiving the csv files. The archiving takes place after the generation of the CSVs and therefore temporarily the storage needs are higher. Default: False.
- **archive_type** (*str*, *optional*) – Set archive type. Default: “zip”.
- **drop_unarchived** (*bool*, *optional*) – Drop the unarchived data if parameter archive is set to True. Default: True.

save_edisgo_to_pickle(*path*="", *filename*=None)

Saves EDisGo object to pickle file.

Parameters

- **path** (*str*) – Directory the pickle file is saved to. Per default it takes the current working directory.
- **filename** (*str* or *None*) – Filename the pickle file is saved under. If None, filename is ‘edisgo_object_{grid_id}.pkl’.

reduce_memory(***kwargs*)

Reduces size of dataframes containing time series to save memory.

Per default, float data is stored as float64. As this precision is barely needed, this function can be used to convert time series data to a data subtype with less memory usage, such as float32.

Parameters

- **to_type** (*str*, *optional*) – Data type to convert time series data to. This is a trade-off between precision and memory. Default: “float32”.
- **results_attr_to_reduce** (*list(str)*, *optional*) – See *attr_to_reduce* parameter in *reduce_memory* for more information.
- **timeseries_attr_to_reduce** (*list(str)*, *optional*) – See *attr_to_reduce* parameter in *reduce_memory* for more information.

check_integrity()

Method to check the integrity of the EDisGo object.

Checks for consistency of topology (see `edisgo.topology.check_integrity()`), timeseries (see `edisgo.timeseries.check_integrity()`) and the interplay of both.

resample_timeseries(*method*='ffill', *freq*='15min')

Resamples all generator, load and storage time series to a desired resolution.

The following time series are affected by this:

- *generators_active_power*
- *loads_active_power*
- *storage_units_active_power*
- *generators_reactive_power*
- *loads_reactive_power*
- *storage_units_reactive_power*

Both up- and down-sampling methods are possible.

Parameters

- **method** (*str*, *optional*) – Method to choose from to fill missing values when re-sampling. Possible options are:

- **'ffill'**
Propagate last valid observation forward to next valid observation. See `pandas.DataFrame.ffill`.
 - **'bfill'**
Use next valid observation to fill gap. See `pandas.DataFrame.bfill`.
 - **'interpolate'**
Fill NaN values using an interpolation method. See `pandas.DataFrame.interpolate`.
- Default: 'ffill'.
- **freq** (*str*, *optional*) – Frequency that time series is resampled to. Offset aliases can be found here: https://pandas.pydata.org/pandas-docs/stable/user_guide/timeseries.html#offset-aliases. Default: '15min'.

1.8.2 edisgo.network package

edisgo.network.components module

class `edisgo.network.components.BasicComponent`(**kwargs)

Bases: `ABC`

Generic component

Can be initialized with EDisGo object or Topology object. In case of Topology object component time series attributes currently will raise an error.

property `id`

Unique identifier of component as used in component dataframes in `Topology`.

Returns

Unique identifier of component.

Return type

`str`

property `edisgo_obj`

EDisGo container

Return type

`EDisGo`

property `topology`

Network topology container

Return type

`Topology`

property `voltage_level`

Voltage level the component is connected to ('mv' or 'lv').

Returns

Voltage level. Returns 'lv' if component connected to the low voltage and 'mv' if component is connected to the medium voltage.

Return type

`str`

abstract property grid

Grid component is in.

Returns

Grid component is in.

Return type

Grid

class edisgo.network.components.**Component**(**kwargs)

Bases: [BasicComponent](#)

Generic component for all components that can be considered nodes, e.g. generators and loads.

property bus

Bus component is connected to.

Parameters

bus ([str](#)) – ID of bus to connect component to.

Returns

Bus component is connected to.

Return type

[str](#)

property grid

Grid the component is in.

Returns

Grid object the component is in.

Return type

Grid

property geom

Geo location of component.

Return type

[shapely.Point](#)

class edisgo.network.components.**Load**(**kwargs)

Bases: [Component](#)

Load object

property p_set

Peak load in MW.

Parameters

p_set ([float](#)) – Peak load in MW.

Returns

Peak load in MW.

Return type

[float](#)

property annual_consumption

Annual consumption of load in MWh.

Parameters

annual_consumption ([float](#)) – Annual consumption in MWh.

Returns

Annual consumption of load in MWh.

Return type

`float`

property sector

Sector load is associated with.

The sector is e.g. used to assign load time series to a load using the demandlib. The following four sectors are considered: 'agricultural', 'retail', 'residential', 'industrial'.

Parameters

sector (`str`) –

Returns

- `str` – Load sector
- `#ToDo` (Maybe return 'not specified' in case sector is None?)

property active_power_timeseries

Active power time series of load in MW.

Returns

Active power time series of load in MW.

Return type

`pandas.Series`

property reactive_power_timeseries

Reactive power time series of load in Mvar.

Returns

Reactive power time series of load in Mvar.

Return type

`pandas.Series`

class edisgo.network.components.**Generator**(**kwargs)

Bases: `Component`

Generator object

property nominal_power

Nominal power of generator in MW.

Parameters

nominal_power (`float`) – Nominal power of generator in MW.

Returns

Nominal power of generator in MW.

Return type

`float`

property type

Technology type of generator (e.g. 'solar').

Parameters

type (`str`) –

Returns

- `str` – Technology type
- `#ToDo` (Maybe return ‘not specified’ in case type is None?)

property subtype

Technology subtype of generator (e.g. ‘solar_roof_mounted’).

Parameters

subtype (`str`) –

Returns

- `str` – Technology subtype
- `#ToDo` (Maybe return ‘not specified’ in case subtype is None?)

property active_power_timeseries

Active power time series of generator in MW.

Returns

Active power time series of generator in MW.

Return type

`pandas.Series`

property reactive_power_timeseries

Reactive power time series of generator in Mvar.

Returns

Reactive power time series of generator in Mvar.

Return type

`pandas.Series`

property weather_cell_id

Weather cell ID of generator.

The weather cell ID is only used to obtain generator feed-in time series for solar and wind generators.

Parameters

weather_cell_id (`int`) – Weather cell ID of generator.

Returns

Weather cell ID of generator.

Return type

`int`

class `edisgo.network.components.Storage(**kwargs)`

Bases: `Component`

Storage object

property nominal_power

Nominal power of storage unit in MW.

Parameters

nominal_power (`float`) – Nominal power of storage unit in MW.

Returns

Nominal power of storage unit in MW.

Return type

`float`

property active_power_timeseries

Active power time series of storage unit in MW.

Returns

Active power time series of storage unit in MW.

Return type

`pandas.Series`

property reactive_power_timeseries

Reactive power time series of storage unit in Mvar.

Returns

Reactive power time series of storage unit in Mvar.

Return type

`pandas.Series`

class `edisgo.network.components.Switch(**kwargs)`

Bases: `BasicComponent`

Switch object

Switches are for example medium voltage disconnecting points (points where MV rings are split under normal operation conditions). They are represented as branches and can have two states: 'open' or 'closed'. When the switch is open the branch it is represented by connects some bus and the bus specified in *bus_open*. When it is closed bus *bus_open* is substituted by the bus specified in *bus_closed*.

property type

Type of switch.

So far edisgo only considers switch disconnectors.

Parameters

type (`str`) – Type of switch.

Returns

Type of switch.

Return type

`str`

property bus_open

Bus ID of bus the switch is 'connected' to when state is 'open'.

As switches are represented as branches they connect two buses. *bus_open* specifies the bus the branch is connected to in the open state.

Returns

Bus in 'open' state.

Return type

`str`

property bus_closed

Bus ID of bus the switch is 'connected' to when state is 'closed'.

As switches are represented as branches they connect two buses. *bus_closed* specifies the bus the branch is connected to in the closed state.

Returns

Bus in 'closed' state.

Return type`str`**property state**

State of switch (open or closed).

Returns

State of switch: 'open' or 'closed'.

Return type`str`**property branch**

Branch the switch is represented by.

Returns

Branch the switch is represented by.

Return type`str`**property grid**

Grid switch is in.

Returns

Grid switch is in.

Return type`Grid`**open()**

Open switch.

close()

Close switch.

class `edisgo.network.components.PotentialChargingParks`(**kwargs)

Bases: `BasicComponent`

property voltage_level

Voltage level the component is connected to ('mv' or 'lv').

Returns

Voltage level. Returns 'lv' if component connected to the low voltage and 'mv' if component is connected to the medium voltage.

Return type`str`**property grid**

Grid component is in.

Returns

Grid component is in.

Return type`Grid`**property ags**

8-digit AGS (Amtlicher Gemeindeschlüssel, eng. Community Identification Number) number the potential charging park is in. Number is given as `int` and leading zeros are therefore missing.

Returns

AGS number

Return type`int`**property use_case**

Charging use case (home, work, public or hpc) of the potential charging park.

Returns

Charging use case

Return type`str`**property designated_charging_point_capacity**

Total gross designated charging park capacity.

This is not necessarily equal to the connection rating.

Returns

Total gross designated charging park capacity

Return type`float`**property user_centric_weight**User centric weight of the potential charging park determined by [SimBEV](#).**Returns**

User centric weight

Return type`float`**property geometry**Location of the potential charging park as [Shapely Point](#) object.**Returns**

Location of the potential charging park.

Return type[Shapely Point](#) object.**property nearest_substation**

Determines the nearest LV Grid, substation and distance.

Returns`int`

LV Grid ID

`str`

ID of the nearest substation

`float`

Distance to nearest substation

Return type`dict`**property edisgo_id**

property charging_processes_df

Determines designated charging processes for the potential charging park.

Returns

DataFrame with AGS, car ID, trip destination, charging use case (private or public), netto charging capacity, charging demand, charge start, charge end, potential charging park ID and charging point ID.

Return type

`pandas.DataFrame`

property grid_connection_capacity**property within_grid**

Determines if the potential charging park is located within the grid district.

edisgo.network.electromobility module

class `edisgo.network.electromobility.Electromobility(**kwargs)`

Bases: `object`

Data container for all electromobility data.

This class holds data on charging processes (how long cars are parking at a charging station, how much they need to charge, etc.) necessary to apply different charging strategies, as well as information on potential charging sites and integrated charging parks.

property charging_processes_df

DataFrame with all `SimBEV` charging processes.

Returns

DataFrame with AGS, car ID, trip destination, charging use case, netto charging capacity, charging demand, charge start, charge end, grid connection point and charging point ID. The columns are:

ags

[int] 8-digit AGS (Amtlicher Gemeindeschlüssel, eng. Community Identification Number). Leading zeros are missing.

car_id

[int] Car ID to differentiate charging processes from different cars.

destination

[str] `SimBEV` driving destination.

use_case

[str] `SimBEV` use case. Can be “hpc”, “home”, “public” or “work”.

nominal_charging_capacity_kW

[float] Vehicle charging capacity in kW.

grid_charging_capacity_kW

[float] Grid-sided charging capacity including charging infrastructure losses in kW.

chargingdemand_kWh

[float] Charging demand in kWh.

park_time_timesteps

[int] Number of parking time steps.

park_start_timesteps

[int] Time step the parking event starts.

park_end_timesteps

[int] Time step the parking event ends.

charging_park_id

[int] Designated charging park ID from potential_charging_parks_gdf. Is NaN if the charging demand is not yet distributed.

charging_point_id

[int] Designated charging point ID. Is used to differentiate between multiple charging points at one charging park.

Return type

`pandas.DataFrame`

property potential_charging_parks_gdf

GeoDataFrame with all [TracBEV](#) potential charging parks.

Returns

GeoDataFrame with ID as index, AGS, charging use case (home, work, public or hpc), user centric weight and geometry. Columns are:

index

[int] Charging park ID.

use_case

[str] TracBEV use case. Can be “hpc”, “home”, “public” or “work”.

user_centric_weight

[float] User centric weight used in distribution of charging demand. Weight is determined by TracBEV but normalized from 0 .. 1.

geometry

[GeoSeries] Geolocation of charging parks.

Return type

`geopandas.GeoDataFrame`

property potential_charging_parks

Potential charging parks within the AGS.

Returns

List of potential charging parks within the AGS.

Return type

list([PotentialChargingParks](#))

property simbev_config_df

Dict with all [SimBEV](#) config data.

Returns

DataFrame with used regio type, charging point efficiency, stepsize in minutes, start date, end date, minimum SoC for hpc, grid timeseries setting, grid timeseries by use case setting and the number of simulated days. Columns are:

regio_type

[str] RegioStaR 7 ID used in SimBEV.

eta_cp

[float or int] Charging point efficiency used in SimBEV.

stepsize

[int] Stepsize in minutes the driving profile is simulated for in SimBEV.

start_date

[datetime64] Start date of the SimBEV simulation.

end_date

[datetime64] End date of the SimBEV simulation.

soc_min

[float] Minimum SoC when a HPC event is initialized in SimBEV.

grid_timeseries

[bool] Setting whether a grid timeseries is generated within the SimBEV simulation.

grid_timeseries_by_usecase

[bool] Setting whether a grid timeseries by use case is generated within the SimBEV simulation.

days

[int] Timedelta between the end_date and start_date in days.

Return type

`pandas.DataFrame`

property integrated_charging_parks_df

Mapping DataFrame to map the charging park ID to the internal eDisGo ID.

The eDisGo ID is determined when integrating components using `add_component()` or `integrate_component_based_on_geolocation()` method.

Returns

Mapping DataFrame to map the charging park ID to the internal eDisGo ID.

Return type

`pandas.DataFrame`

property stepsize

Stepsize in minutes used in [SimBEV](#).

Returns

Stepsize in minutes

Return type

`int`

property simulated_days

Number of simulated days in [SimBEV](#).

Returns

Number of simulated days

Return type

`int`

property eta_charging_points

Charging point efficiency.

Returns

Charging point efficiency in p.u..

Return type

`float`

property flexibility_bands

Dictionary with flexibility bands (lower and upper energy band as well as upper power band).

Parameters

flex_dict (`dict(str, pandas.DataFrame)`) – Keys are ‘upper_power’, ‘lower_energy’ and ‘upper_energy’. Values are dataframes containing the corresponding band per each charging point. Columns of the dataframe are the charging point names as in `loads_df`. Index is a time index.

Returns

See input parameter `flex_dict` for more information on the dictionary.

Return type

`dict(str, pandas.DataFrame)`

get_flexibility_bands(edisgo_obj, use_case)

Method to determine flexibility bands (lower and upper energy band as well as upper power band).

Besides being returned by this function, flexibility bands are written to `flexibility_bands`.

Parameters

- **edisgo_obj** (`EDisGo`) –
- **use_case** (`str` or `list(str)`) – Charging point use case(s) to determine flexibility bands for.

Returns

Keys are ‘upper_power’, ‘lower_energy’ and ‘upper_energy’. Values are dataframes containing the corresponding band for each charging point of the specified use case. Columns of the dataframe are the charging point names as in `loads_df`. Index is a time index.

Return type

`dict(str, pandas.DataFrame)`

to_csv(directory, attributes=None)

Exports electromobility data to csv files.

The following attributes can be exported:

- ‘charging_processes_df’ : Attribute `charging_processes_df` is saved to `charging_processes.csv`.
- ‘potential_charging_parks_gdf’ : Attribute `potential_charging_parks_gdf` is saved to `potential_charging_parks.csv`.
- ‘integrated_charging_parks_df’ : Attribute `integrated_charging_parks_df` is saved to `integrated_charging_parks.csv`.
- ‘simbev_config_df’ : Attribute `simbev_config_df` is saved to `simbev_config.csv`.
- ‘flexibility_bands’ : The three flexibility bands in attribute `flexibility_bands` are saved to `flexibility_band_upper_power.csv`, `flexibility_band_lower_energy.csv`, and `flexibility_band_upper_energy.csv`.

Parameters

- **directory** (`str`) – Path to save electromobility data to.

- **attributes** (*list(str)* or *None*) – List of attributes to export. See above for attributes that can be exported. If *None*, all specified attributes are exported. Default: *None*.

from_csv(*data_path*, *edisgo_obj*, *from_zip_archive=False*)

Restores electromobility from csv files.

Parameters

- **data_path** (*str*) – Path to electromobility csv files.
- **edisgo_obj** (*EDisGo*) –
- **from_zip_archive** (*bool*, *optional*) – Set *True* if data is archived in a zip archive. Default: *False*

edisgo.network.grids module

class edisgo.network.grids.Grid(**kwargs)

Bases: *ABC*

Defines a basic grid in eDisGo.

Parameters

- **edisgo_obj** (*EDisGo*) –
- **id** (*str* or *int*, *optional*) – Identifier

property id

ID of the grid.

property edisgo_obj

EDisGo object the grid is stored in.

property nominal_voltage

Nominal voltage of network in kV.

Parameters

- **nominal_voltage** (*float*) –

Returns

Nominal voltage of network in kV.

Return type

float

property graph

Graph representation of the grid.

Returns

Graph representation of the grid as networkx Ordered Graph, where lines are represented by edges in the graph, and buses and transformers are represented by nodes.

Return type

networkx.Graph

property geopandas

Returns components as `geopandas.GeoDataFrames`

Returns container with `geopandas.GeoDataFrames` containing all georeferenced components within the grid.

Returns

Data container with `GeoDataFrames` containing all georeferenced components within the grid(s).

Return type

`GeoPandasGridContainer` or `list(GeoPandasGridContainer)`

property station

`DataFrame` with form of `buses_df` with only grid's station's secondary side bus information.

property generators_df

Connected generators within the network.

Returns

Dataframe with all generators in topology. For more information on the dataframe see [`generators_df`](#).

Return type

`pandas.DataFrame`

property generators

Connected generators within the network.

Returns

List of generators within the network.

Return type

`list(Generator)`

property loads_df

Connected loads within the network.

Returns

Dataframe with all loads in topology. For more information on the dataframe see [`loads_df`](#).

Return type

`pandas.DataFrame`

property loads

Connected loads within the network.

Returns

List of loads within the network.

Return type

`list(Load)`

property storage_units_df

Connected storage units within the network.

Returns

Dataframe with all storage units in topology. For more information on the dataframe see [`storage_units_df`](#).

Return type`pandas.DataFrame`**property charging_points_df**

Connected charging points within the network.

Returns

Dataframe with all charging points in topology. For more information on the dataframe see [`loads_df`](#).

Return type`pandas.DataFrame`**property switch_disconnectors_df**

Switch disconnectors in network.

Switch disconnectors are points where rings are split under normal operating conditions.

Returns

Dataframe with all switch disconnectors in network. For more information on the dataframe see [`switches_df`](#).

Return type`pandas.DataFrame`**property switch_disconnectors**

Switch disconnectors within the network.

Returns

List of switch disconnector within the network.

Return type`list(Switch)`**property lines_df**

Lines within the network.

Returns

Dataframe with all buses in topology. For more information on the dataframe see [`lines_df`](#).

Return type`pandas.DataFrame`**abstract property buses_df**

Buses within the network.

Returns

Dataframe with all buses in topology. For more information on the dataframe see [`buses_df`](#).

Return type`pandas.DataFrame`**property weather_cells**

Weather cells in network.

Returns

List of weather cell IDs in network.

Return type`list(int)`

property peak_generation_capacity

Cumulative peak generation capacity of generators in the network in MW.

Returns

Cumulative peak generation capacity of generators in the network in MW.

Return type

`float`

property peak_generation_capacity_per_technology

Cumulative peak generation capacity of generators in the network per technology type in MW.

Returns

Cumulative peak generation capacity of generators in the network per technology type in MW.

Return type

`pandas.DataFrame`

property p_set

Cumulative peak load of loads in the network in MW.

Returns

Cumulative peak load of loads in the network in MW.

Return type

`float`

property p_set_per_sector

Cumulative peak load of loads in the network per sector in MW.

Returns

Cumulative peak load of loads in the network per sector in MW.

Return type

`pandas.DataFrame`

class edisgo.network.grids.MVGrid(kwargs)**

Bases: `Grid`

Defines a medium voltage network in eDisGo.

property lv_grids

Yields generator object with all underlying low voltage grids.

Returns

Yields generator object with `LVGrid` object.

Return type

`LVGrid`

property buses_df

Buses within the network.

Returns

Dataframe with all buses in topology. For more information on the dataframe see `buses_df`.

Return type

`pandas.DataFrame`

property transformers_df

Transformers to overlaying network.

Returns

Dataframe with all transformers to overlaying network. For more information on the dataframe see [transformers_df](#).

Return type

[pandas.DataFrame](#)

draw()

Draw MV network.

class edisgo.network.grids.LVGrid(kwargs)**

Bases: [Grid](#)

Defines a low voltage network in eDisGo.

property buses_df

Buses within the network.

Returns

Dataframe with all buses in topology. For more information on the dataframe see [buses_df](#).

Return type

[pandas.DataFrame](#)

property transformers_df

Transformers to overlaying network.

Returns

Dataframe with all transformers to overlaying network. For more information on the dataframe see [transformers_df](#).

Return type

[pandas.DataFrame](#)

draw(node_color='black', edge_color='black', colorbar=False, labels=False, filename=None)

Draw LV network.

Currently, edge width is proportional to nominal apparent power of the line and node size is proportional to peak load of connected loads.

Parameters

- **node_color** (str or [pandas.Series](#)) – Color of the nodes (buses) of the grid. If provided as string all nodes will have that color. If provided as series, the index of the series must contain all buses in the LV grid and the corresponding values must be float values, that will be translated to the node color using a colormap, currently set to “Blues”. Default: “black”.
- **edge_color** (str or [pandas.Series](#)) – Color of the edges (lines) of the grid. If provided as string all edges will have that color. If provided as series, the index of the series must contain all lines in the LV grid and the corresponding values must be float values, that will be translated to the edge color using a colormap, currently set to “inferno_r”. Default: “black”.
- **colorbar** ([bool](#)) – If True, a colorbar is added to the plot for node and edge colors, in case these are sequences. Default: False.

- **labels** (*bool*) – If True, displays bus names. As bus names are quite long, this is currently not very pretty. Default: False.
- **filename** (*str* or *None*) – If a filename is provided, the plot is saved under that name but not displayed. If no filename is provided, the plot is only displayed. Default: None.

property geopandas

Remove this as soon as LVGrids are georeferenced

Type

TODO

edisgo.network.heat module

class edisgo.network.heat.**HeatPump**(**kwargs)

Bases: `object`

Data container for all heat pump data.

This class holds data on heat pump COP, heat demand time series, thermal storage data...

property cop_df

DataFrame with COP time series of heat pumps.

Parameters

df (`pandas.DataFrame`) – DataFrame with COP time series of heat pumps in p.u.. Index of the dataframe is a time index and should contain all time steps given in *timeindex*. Column names are names of heat pumps as in *loads_df*.

Returns

DataFrame with COP time series of heat pumps in p.u.. For more information on the dataframe see input parameter *df*.

Return type

`pandas.DataFrame`

property heat_demand_df

DataFrame with heat demand time series of heat pumps.

Parameters

df (`pandas.DataFrame`) – DataFrame with heat demand time series of heat pumps in MW. Index of the dataframe is a time index and should contain all time steps given in *timeindex*. Column names are names of heat pumps as in *loads_df*.

Returns

DataFrame with heat demand time series of heat pumps in MW. For more information on the dataframe see input parameter *df*.

Return type

`pandas.DataFrame`

property thermal_storage_units_df

DataFrame with heat pump's thermal storage information.

Parameters

df (`pandas.DataFrame`) – DataFrame with thermal storage information. Index of the dataframe are names of heat pumps as in *loads_df*. Columns of the dataframe are:

capacity

[float] Thermal storage capacity in MWh.

efficiency

[float] Charging and discharging efficiency in p.u..

state_of_charge_initial

[float] Initial state of charge in MWh.

Returns

DataFrame with thermal storage information. For more information on the dataframe see input parameter *df*.

Return type

`pandas.DataFrame`

property building_ids_df

DataFrame with buildings served by each heat pump.

Parameters

df (`pandas.DataFrame`) – DataFrame with building IDs of buildings served by each heat pump. Index of the dataframe are names of heat pumps as in *loads_df*. Columns of the dataframe are:

building_ids

[list(int)] List of building IDs.

Returns

DataFrame with building IDs of buildings served by each heat pump. For more information on the dataframe see input parameter *df*.

Return type

`pandas.DataFrame`

set_cop(*edisgo_object*, *ts_cop*, *heat_pump_names=None*)

Get COP time series for heat pumps.

Heat pumps need to already be integrated into the grid.

Parameters

- **edisgo_object** (*EDisGo*) –
- **ts_cop** (str or `pandas.DataFrame`) – Defines option used to set COP time series. Possible options are:
 - 'oedb'

Not yet implemented! Weather cell specific hourly COP time series are obtained from the [OpenEnergy DataBase](#) for the weather year 2011. See [edisgo.io.timeseries_import.cop_oedb\(\)](#) for more information. Using information on which weather cell each heat pump is in, the weather cell specific time series are mapped to each heat pump.
 - `pandas.DataFrame`

DataFrame with self-provided COP time series per heat pump. See *cop_df* on information on the required dataframe format.
- **heat_pump_names** (*list(str)* or *None*) – Defines for which heat pumps to get COP time series for in case *ts_cop* is 'oedb'. If *None*, all heat pumps in *loads_df* (type is 'heat_pump') are used. Default: *None*.

set_heat_demand(*edisgo_object*, *ts_heat_demand*, *heat_pump_names=None*)

Get heat demand time series for buildings with heat pumps.

Heat pumps need to already be integrated into the grid.

Parameters

- **edisgo_object** (*EDisGo*) –
- **ts_heat_demand** (str or *pandas.DataFrame*) – Defines option used to set heat demand time series. Possible options are:
 - ‘oedb’
Not yet implemented! Heat demand time series are obtained from the [OpenEnergy DataBase](#) for the weather year 2011. See [edisgo.io.timeseries_import.heat_demand_oedb\(\)](#) for more information.
 - *pandas.DataFrame*
DataFrame with self-provided heat demand time series per heat pump. See [heat_demand_df](#) on information on the required dataframe format.
- **heat_pump_names** (*list(str)* or *None*) – Defines for which heat pumps to get heat demand time series for in case *ts_heat_demand* is ‘oedb’. If *None*, all heat pumps in [loads_df](#) (type is ‘heat_pump’) are used. Default: *None*.

reduce_memory(*attr_to_reduce=None*, *to_type='float32'*)

Reduces size of dataframes to save memory.

See [reduce_memory](#) for more information.

Parameters

- **attr_to_reduce** (*list(str)*, *optional*) – List of attributes to reduce size for. Per default, the following attributes are reduced if they exist: *cop_df*, *heat_demand_df*.
- **to_type** (*str*, *optional*) – Data type to convert time series data to. This is a trade-off between precision and memory. Default: “float32”.

to_csv(*directory*, *reduce_memory=False*, ***kwargs*)

Exports heat pump data to csv files.

The following attributes are exported:

- ‘cop_df’
Attribute [cop_df](#) is saved to *cop.csv*.
- ‘heat_demand_df’
Attribute [heat_demand_df](#) is saved to *heat_demand.csv*.
- ‘thermal_storage_units_df’
Attribute [thermal_storage_units_df](#) is saved to *thermal_storage_units.csv*.
- ‘building_ids_df’
Attribute [building_ids_df](#) is saved to *building_ids.csv*.

Parameters

- **directory** (*str*) – Path to save data to.

- **reduce_memory** (*bool*, *optional*) – If True, size of dataframes is reduced using `reduce_memory`. Optional parameters of `reduce_memory` can be passed as kwargs to this function. Default: False.
- **kwargs** – Kwargs may contain arguments of `reduce_memory`.

from_csv(*data_path*, *from_zip_archive=False*)

Restores heat pump data from csv files.

Parameters

- **data_path** (*str*) – Path to heat pump csv files.
- **from_zip_archive** (*bool*, *optional*) – Set True if data is archived in a zip archive. Default: False

edisgo.network.results module

class edisgo.network.results.**Results**(*edisgo_object*)

Bases: `object`

Power flow analysis results management

Includes raw power flow analysis results, history of measures to increase the network’s hosting capacity and information about changes of equipment.

edisgo_object

Type

`EDisGo`

property measures

List with measures conducted to increase network’s hosting capacity.

Parameters

measure (*str*) – Measure to increase network’s hosting capacity. Possible options so far are ‘grid_expansion’, ‘storage_integration’, ‘curtailment’.

Returns

A stack that details the history of measures to increase network’s hosting capacity. The last item refers to the latest measure. The key *original* refers to the state of the network topology as it was initially imported.

Return type

`list`

property pfa_p

Active power over components in MW from last power flow analysis.

The given active power for each line / transformer is the active power at the line ending / transformer side with the higher apparent power determined from active powers p_0 and p_1 and reactive powers q_0 and q_1 at the line endings / transformer sides:

$$S = \max(\sqrt{p_0^2 + q_0^2}, \sqrt{p_1^2 + q_1^2})$$

Parameters

df (`pandas.DataFrame`) – Results for active power over lines and transformers in MW from last power flow analysis. Index of the dataframe is a `pandas.DatetimeIndex` indicating the

time period the power flow analysis was conducted for; columns of the dataframe are the representatives of the lines and stations included in the power flow analysis.

Provide this if you want to set values. For retrieval of data do not pass an argument.

Returns

Results for active power over lines and transformers in MW from last power flow analysis. For more information on the dataframe see input parameter *df*.

Return type

[pandas.DataFrame](#)

property pfa_q

Active power over components in Mvar from last power flow analysis.

The given reactive power over each line / transformer is the reactive power at the line ending / transformer side with the higher apparent power determined from active powers p_0 and p_1 and reactive powers q_0 and q_1 at the line endings / transformer sides:

$$S = \max(\sqrt{p_0^2 + q_0^2}, \sqrt{p_1^2 + q_1^2})$$

Parameters

df ([pandas.DataFrame](#)) – Results for reactive power over lines and transformers in Mvar from last power flow analysis. Index of the dataframe is a [pandas.DatetimeIndex](#) indicating the time period the power flow analysis was conducted for; columns of the dataframe are the representatives of the lines and stations included in the power flow analysis.

Provide this if you want to set values. For retrieval of data do not pass an argument.

Returns

Results for reactive power over lines and transformers in Mvar from last power flow analysis. For more information on the dataframe see input parameter *df*.

Return type

[pandas.DataFrame](#)

property v_res

Voltages at buses in p.u. from last power flow analysis.

Parameters

df ([pandas.DataFrame](#)) – Dataframe with voltages at buses in p.u. from last power flow analysis. Index of the dataframe is a [pandas.DatetimeIndex](#) indicating the time steps the power flow analysis was conducted for; columns of the dataframe are the bus names of all buses in the analyzed grids.

Provide this if you want to set values. For retrieval of data do not pass an argument.

Returns

Dataframe with voltages at buses in p.u. from last power flow analysis. For more information on the dataframe see input parameter *df*.

Return type

[pandas.DataFrame](#)

property i_res

Current over components in kA from last power flow analysis.

Parameters

df ([pandas.DataFrame](#)) – Results for currents over lines and transformers in kA from last power flow analysis. Index of the dataframe is a [pandas.DatetimeIndex](#) indicating the time

steps the power flow analysis was conducted for; columns of the dataframe are the representatives of the lines and stations included in the power flow analysis.

Provide this if you want to set values. For retrieval of data do not pass an argument.

Returns

Results for current over lines and transformers in kA from last power flow analysis. For more information on the dataframe see input parameter *df*.

Return type

`pandas.DataFrame`

property `s_res`

Apparent power over components in MVA from last power flow analysis.

The given apparent power over each line / transformer is the apparent power at the line ending / transformer side with the higher apparent power determined from active powers p_0 and p_1 and reactive powers q_0 and q_1 at the line endings / transformer sides:

$$S = \max(\sqrt{p_0^2 + q_0^2}, \sqrt{p_1^2 + q_1^2})$$

Returns

Apparent power in MVA over lines and transformers. Index of the dataframe is a `pandas.DatetimeIndex` indicating the time steps the power flow analysis was conducted for; columns of the dataframe are the representatives of the lines and stations included in the power flow analysis.

Return type

`pandas.DataFrame`

property `equipment_changes`

Tracks changes to the grid topology.

When the grid is reinforced using `reinforce` or new generators added using `import_generators`, new lines and/or transformers are added, lines split, etc. This is tracked in this attribute.

Parameters

df (`pandas.DataFrame`) – Dataframe holding information on added, changed and removed lines and transformers. Index of the dataframe is in case of lines the name of the line, and in case of transformers the name of the grid the station is in (in case of MV/LV transformers the name of the LV grid and in case of HV/MV transformers the name of the MV grid). Columns are the following:

equipment

[str] Type of new line or transformer as in `equipment_data`.

change

[str] Specifies if something was added, changed or removed.

iteration_step

[int] Grid reinforcement iteration step the change was conducted in. For changes conducted during grid integration of new generators the iteration step is set to 0.

quantity

[int] Number of components added or removed. Only relevant for calculation of network expansion costs to keep track of how many new standard lines were added.

Provide this if you want to set values. For retrieval of data do not pass an argument.

Returns

Dataframe holding information on added, changed and removed lines and transformers. For more information on the dataframe see input parameter *df*.

Return type

`pandas.DataFrame`

property `grid_expansion_costs`

Costs per expanded component in kEUR.

Parameters

df (`pandas.DataFrame`) – Costs per expanded line and transformer in kEUR. Index of the dataframe is the name of the expanded component as string. Columns are the following:

type

[str] Type of new line or transformer as in `equipment_data`.

total_costs

[float] Costs of equipment in kEUR. For lines the line length and number of parallel lines is already included in the total costs.

quantity

[int] For transformers quantity is always one, for lines it specifies the number of parallel lines.

length

[float] Length of line or in case of parallel lines all lines in km.

voltage_level

[str] Specifies voltage level the equipment is in ('lv', 'mv' or 'mv/lv').

Provide this if you want to set grid expansion costs. For retrieval of costs do not pass an argument.

Returns

Costs per expanded line and transformer in kEUR. For more information on the dataframe see input parameter *df*.

Return type

`pandas.DataFrame`

Notes

Network expansion measures are tracked in `equipment_changes`. Resulting costs are calculated using `grid_expansion_costs()`. Total network expansion costs can be obtained through `grid_expansion_costs.total_costs.sum()`.

property `grid_losses`

Active and reactive network losses in MW and Mvar, respectively.

Parameters

df (`pandas.DataFrame`) – Results for active and reactive network losses in columns 'p' and 'q' and in MW and Mvar, respectively. Index is a `pandas.DatetimeIndex`.

Provide this if you want to set values. For retrieval of data do not pass an argument.

Returns

Results for active and reactive network losses MW and Mvar, respectively. For more information on the dataframe see input parameter *df*.

Return type

`pandas.DataFrame`

Notes

Grid losses are calculated as follows:

$$P_{loss} = |\sum infeed - \sum load + P_{slack}|$$

$$Q_{loss} = |\sum infeed - \sum load + Q_{slack}|$$

As the slack is placed at the station's secondary side (if MV is included, it's positioned at the HV/MV station's secondary side and if a single LV grid is analysed it's positioned at the LV station's secondary side) losses do not include losses over the respective station's transformers.

property `pfa_slack`

Active and reactive power from slack in MW and Mvar, respectively.

In case the MV level is included in the power flow analysis, the slack is placed at the secondary side of the HV/MV station and gives the energy transferred to and taken from the HV network. In case a single LV network is analysed, the slack is positioned at the respective station's secondary, in which case this gives the energy transferred to and taken from the overlying MV network.

Parameters

df ([pandas.DataFrame](#)) – Results for active and reactive power from the slack in MW and Mvar, respectively. Dataframe has the columns 'p', holding the active power results, and 'q', holding the reactive power results. Index is a [pandas.DatetimeIndex](#).

Provide this if you want to set values. For retrieval of data do not pass an argument.

Returns

Results for active and reactive power from the slack in MW and Mvar, respectively. For more information on the dataframe see input parameter *df*.

Return type

[pandas.DataFrame](#)

property `pfa_v_mag_pu_seed`

Voltages in p.u. from previous power flow analyses to be used as seed.

See [set_seed\(\)](#) for more information.

Parameters

df ([pandas.DataFrame](#)) – Voltages at buses in p.u. from previous power flow analyses including the MV level. Index of the dataframe is a [pandas.DatetimeIndex](#) indicating the time steps previous power flow analyses were conducted for; columns of the dataframe are the representatives of the buses included in the power flow analyses.

Provide this if you want to set values. For retrieval of data do not pass an argument.

Returns

Voltages at buses in p.u. from previous power flow analyses to be optionally used as seed in following power flow analyses. For more information on the dataframe see input parameter *df*.

Return type

[pandas.DataFrame](#)

property `pfa_v_ang_seed`

Voltages in p.u. from previous power flow analyses to be used as seed.

See [set_seed\(\)](#) for more information.

Parameters

df ([pandas.DataFrame](#)) – Voltage angles at buses in radians from previous power flow analyses including the MV level. Index of the dataframe is a [pandas.DatetimeIndex](#) indicating the time steps previous power flow analyses were conducted for; columns of the dataframe are the representatives of the buses included in the power flow analyses.

Provide this if you want to set values. For retrieval of data do not pass an argument.

Returns

Voltage angles at buses in radians from previous power flow analyses to be optionally used as seed in following power flow analyses. For more information on the dataframe see input parameter *df*.

Return type

[pandas.DataFrame](#)

property unresolved_issues

Lines and buses with remaining grid issues after network reinforcement.

In case overloading or voltage issues could not be solved after maximum number of iterations, network reinforcement is not aborted but network expansion costs are still calculated and unresolved issues listed here.

Parameters

df ([pandas.DataFrame](#)) – Dataframe containing remaining grid issues. Names of remaining critical lines, stations and buses are in the index of the dataframe. Columns depend on the equipment type. See [mv_line_load\(\)](#) for format of remaining overloading issues of lines, [hv_mv_station_load\(\)](#) for format of remaining overloading issues of transformers, and [mv_voltage_deviation\(\)](#) for format of remaining voltage issues.

Provide this if you want to set unresolved_issues. For retrieval of data do not pass an argument.

Returns

Dataframe with remaining grid issues. For more information on the dataframe see input parameter *df*.

Return type

[pandas.DataFrame](#)

reduce_memory(attr_to_reduce=None, to_type='float32')

Reduces size of dataframes containing time series to save memory.

See [reduce_memory](#) for more information.

Parameters

- **attr_to_reduce** ([list\(str\)](#), *optional*) – List of attributes to reduce size for. Attributes need to be dataframes containing only time series. Possible options are: 'pfa_p', 'pfa_q', 'v_res', 'i_res', and 'grid_losses'. Per default, all these attributes are reduced.
- **to_type** ([str](#), *optional*) – Data type to convert time series data to. This is a trade-off between precision and memory. Default: "float32".

Notes

Reducing the data type of the seeds for the power flow analysis, `pfa_v_mag_pu_seed` and `pfa_v_ang_seed`, can lead to non-convergence of the power flow analysis, wherefore memory reduction is not provided for those attributes.

`equality_check(results_obj)`

Checks the equality of two results objects.

Parameters

results_obj (:class:`~network.results.Results`) – Contains the results of analyze function with default settings.

Returns

True if equality check is successful, False otherwise.

Return type

`bool`

`to_csv(directory, parameters=None, reduce_memory=False, save_seed=False, **kwargs)`

Saves results to csv.

Saves power flow results and grid expansion results to separate directories. Which results are saved depends on what is specified in `parameters`. Per default, all attributes are saved.

Power flow results are saved to directory ‘powerflow_results’ and comprise the following, if not otherwise specified:

- ‘v_res’ : Attribute `v_res` is saved to `voltages_pu.csv`.
- ‘i_res’ : Attribute `i_res` is saved to `currents.csv`.
- ‘pfa_p’ : Attribute `pfa_p` is saved to `active_powers.csv`.
- ‘pfa_q’ : Attribute `pfa_q` is saved to `reactive_powers.csv`.
- ‘s_res’ : Attribute `s_res` is saved to `apparent_powers.csv`.
- ‘grid_losses’ : Attribute `grid_losses` is saved to `grid_losses.csv`.
- ‘pfa_slack’ : Attribute `pfa_slack` is saved to `pfa_slack.csv`.
- ‘pfa_v_mag_pu_seed’ : Attribute `pfa_v_mag_pu_seed` is saved to `pfa_v_mag_pu_seed.csv`, if `save_seed` is set to True.
- ‘pfa_v_ang_seed’ : Attribute `pfa_v_ang_seed` is saved to `pfa_v_ang_seed.csv`, if `save_seed` is set to True.

Grid expansion results are saved to directory ‘grid_expansion_results’ and comprise the following, if not otherwise specified:

- `grid_expansion_costs` : Attribute `grid_expansion_costs` is saved to `grid_expansion_costs.csv`.
- `equipment_changes` : Attribute `equipment_changes` is saved to `equipment_changes.csv`.
- `unresolved_issues` : Attribute `unresolved_issues` is saved to `unresolved_issues.csv`.

Parameters

- **directory** (`str`) – Main directory to save the results in.
- **parameters** (`None` or `dict`, optional) – Specifies which results to save. By default this is set to `None`, in which case all results are saved. To only save certain results provide a dictionary. Possible keys are ‘powerflow_results’ and

'grid_expansion_results'. Corresponding values must be lists with attributes to save or None to save all attributes. For example, with the first input only the power flow results *i_res* and *v_res* are saved, and with the second input all power flow results are saved.

```
{'powerflow_results': ['i_res', 'v_res']}
```

```
{'powerflow_results': None}
```

See function docstring for possible power flow and grid expansion results to save and under which file name they are saved.

- **reduce_memory** (*bool*, *optional*) – If True, size of dataframes containing time series to save memory is reduced using [reduce_memory](#). Optional parameters of [reduce_memory](#) can be passed as kwargs to this function. Default: False.
- **save_seed** (*bool*, *optional*) – If True, [pfa_v_mag_pu_seed](#) and [pfa_v_ang_seed](#) are as well saved as csv. As these are only relevant if calculations are not final, the default is False, in which case they are not saved.
- **kwargs** – Kwargs may contain optional arguments of [reduce_memory](#).

from_csv(*data_path*, *parameters=None*, *dtype=None*, *from_zip_archive=False*)

Restores results from csv files.

See [to_csv\(\)](#) for more information on which results can be saved and under which filename and directory they are stored.

Parameters

- **data_path** (*str*) – Main data path results are saved in. Must be directory or zip archive.
- **parameters** (*None or dict*, *optional*) – Specifies which results to restore. By default this is set to None, in which case all available results are restored. To only restore certain results provide a dictionary. Possible keys are 'powerflow_results' and 'grid_expansion_results'. Corresponding values must be lists with attributes to restore or None to restore all available attributes. See function docstring *parameters* parameter in [to_csv\(\)](#) for more information.
- **dtype** (*str*, *optional*) – Numerical data type for data to be loaded from csv, e.g. "float32". Per default this is None in which case data type is inferred.
- **from_zip_archive** (*bool*, *optional*) – Set True if data is archived in a zip archive. Default: False.

edisgo.network.timeseries module

class edisgo.network.timeseries.TimeSeries(**kwargs)

Bases: [object](#)

Holds component-specific active and reactive power time series.

All time series are fixed time series that in case of flexibilities result after application of a heuristic or optimisation. They can be used for power flow calculations.

Also holds any raw time series data that was used to generate component-specific time series in attribute *time_series_raw*. See [TimeSeriesRaw](#) for more information.

Parameters

timeindex (`pandas.DatetimeIndex`, optional) – Can be used to define a time range for which to obtain the provided time series and run power flow analysis. Default: None.

time_series_raw

Raw time series. See *TimeSeriesRaw* for more information.

Type

TimeSeriesRaw

property is_worst_case: bool

Time series mode.

Is used to distinguish between normal time series analysis and worst-case analysis. Is determined by checking if the timindex starts before 1971 as the default for worst-case is 1970. Be mindful when creating your own worst-cases.

Returns

Indicates if current time series is worst-case time series with different assumptions for mv and lv simultaneities.

Return type

bool

property timeindex

Time index all time-dependent attributes are indexed by.

Is used as default time steps in e.g. power flow analysis.

Parameters

ind (`pandas.DatetimeIndex`) – Time index all time-dependent attributes are indexed by.

Returns

Time index all time-dependent attributes are indexed by.

Return type

`pandas.DatetimeIndex`

property generators_active_power

Active power time series of generators in MW.

Parameters

df (`pandas.DataFrame`) – Active power time series of all generators in topology in MW. Index of the dataframe is a time index and column names are names of generators.

Returns

Active power time series of all generators in topology in MW for time steps given in *timeindex*. For more information on the dataframe see input parameter *df*.

Return type

`pandas.DataFrame`

property generators_reactive_power

Reactive power time series of generators in MVA.

Parameters

df (`pandas.DataFrame`) – Reactive power time series of all generators in topology in MVA. Index of the dataframe is a time index and column names are names of generators.

Returns

Reactive power time series of all generators in topology in MVA for time steps given in *timeindex*. For more information on the dataframe see input parameter *df*.

Return type

`pandas.DataFrame`

property loads_active_power

Active power time series of loads in MW.

Parameters

df (`pandas.DataFrame`) – Active power time series of all loads in topology in MW. Index of the dataframe is a time index and column names are names of loads.

Returns

Active power time series of all loads in topology in MW for time steps given in *timeindex*. For more information on the dataframe see input parameter *df*.

Return type

`pandas.DataFrame`

property loads_reactive_power

Reactive power time series of loads in MVA.

Parameters

df (`pandas.DataFrame`) – Reactive power time series of all loads in topology in MVA. Index of the dataframe is a time index and column names are names of loads.

Returns

Reactive power time series of all loads in topology in MVA for time steps given in *timeindex*. For more information on the dataframe see input parameter *df*.

Return type

`pandas.DataFrame`

charging_points_active_power(*edisgo_object*)

Returns a subset of *loads_active_power* containing only the time series of charging points.

Parameters

edisgo_object (*EDisGo*) –

Returns

Pandas DataFrame with active power time series of charging points.

Return type

`pandas.DataFrame`

charging_points_reactive_power(*edisgo_object*)

Returns a subset of *loads_reactive_power* containing only the time series of charging points.

Parameters

edisgo_object (*EDisGo*) –

Returns

Pandas DataFrame with reactive power time series of charging points.

Return type

`pandas.DataFrame`

property storage_units_active_power

Active power time series of storage units in MW.

Parameters

df (`pandas.DataFrame`) – Active power time series of all storage units in topology in MW. Index of the dataframe is a time index and column names are names of storage units.

Returns

Active power time series of all storage units in topology in MW for time steps given in *timeindex*. For more information on the dataframe see input parameter *df*.

Return type

`pandas.DataFrame`

property storage_units_reactive_power

Reactive power time series of storage units in MVA.

Parameters

df (`pandas.DataFrame`) – Reactive power time series of all storage units in topology in MVA. Index of the dataframe is a time index and column names are names of storage units.

Returns

Reactive power time series of all storage units in topology in MVA for time steps given in *timeindex*. For more information on the dataframe see input parameter *df*.

Return type

`pandas.DataFrame`

reset()

Resets all time series.

Active and reactive power time series of all loads, generators and storage units are deleted, as well as *timeindex* and everything stored in *time_series_raw*.

set_active_power_manual(*edisgo_object*, *ts_generators=None*, *ts_loads=None*, *ts_storage_units=None*)

Sets given component active power time series.

If time series for a component were already set before, they are overwritten.

Parameters

- **edisgo_object** (*EDisGo*) –
- **ts_generators** (`pandas.DataFrame`) – Active power time series in MW of generators. Index of the data frame is a datetime index. Columns contain generators names of generators to set time series for.
- **ts_loads** (`pandas.DataFrame`) – Active power time series in MW of loads. Index of the data frame is a datetime index. Columns contain load names of loads to set time series for.
- **ts_storage_units** (`pandas.DataFrame`) – Active power time series in MW of storage units. Index of the data frame is a datetime index. Columns contain storage unit names of storage units to set time series for.

set_reactive_power_manual(*edisgo_object*, *ts_generators=None*, *ts_loads=None*, *ts_storage_units=None*)

Sets given component reactive power time series.

If time series for a component were already set before, they are overwritten.

Parameters

- **edisgo_object** (*EDisGo*) –
- **ts_generators** (`pandas.DataFrame`) – Reactive power time series in MVA of generators. Index of the data frame is a datetime index. Columns contain generators names of generators to set time series for.

- **ts_loads** (`pandas.DataFrame`) – Reactive power time series in MVA of loads. Index of the data frame is a datetime index. Columns contain load names of loads to set time series for.
- **ts_storage_units** (`pandas.DataFrame`) – Reactive power time series in MVA of storage units. Index of the data frame is a datetime index. Columns contain storage unit names of storage units to set time series for.

set_worst_case(*edigo_object, cases, generators_names=None, loads_names=None, storage_units_names=None*)

Sets demand and feed-in of loads, generators and storage units for the specified worst cases.

Per default time series are set for all loads, generators and storage units in the network.

Possible worst cases are 'load_case' (heavy load flow case) and 'feed-in_case' (reverse power flow case). Each case is set up once for dimensioning of the MV grid ('load_case_mv'/'feed-in_case_mv') and once for the dimensioning of the LV grid ('load_case_lv'/'feed-in_case_lv'), as different simultaneity factors are assumed for the different voltage levels.

Assumed simultaneity factors specified in the config section *worst_case_scale_factor* are used to generate active power demand or feed-in. For the reactive power behavior fixed *cosphi* is assumed. The power factors set in the config section *reactive_power_factor* and the power factor mode, defining whether components behave inductive or capacitive, given in the config section *reactive_power_mode*, are used.

Component specific information is given below:

- Generators

Worst case feed-in time series are distinguished by technology (PV, wind and all other) and whether it is a load or feed-in case. In case of generator worst case time series it is not distinguished by whether it is used to analyse the MV or LV. However, both options are generated as it is distinguished in the case of loads. Worst case scaling factors for generators are specified in the config section *worst_case_scale_factor* through the parameters: 'feed-in_case_feed-in_pv', 'feed-in_case_feed-in_wind', 'feed-in_case_feed-in_other', 'load_case_feed-in_pv', 'load_case_feed-in_wind', and 'load_case_feed-in_other'.

For reactive power a fixed *cosphi* is assumed. A different reactive power factor is used for generators in the MV and generators in the LV. The reactive power factors for generators are specified in the config section *reactive_power_factor* through the parameters: 'mv_gen' and 'lv_gen'.

- Conventional loads

Worst case load time series are distinguished by whether it is a load or feed-in case and whether it used to analyse the MV or LV. Worst case scaling factors for conventional loads are specified in the config section *worst_case_scale_factor* through the parameters: 'mv_feed-in_case_load', 'lv_feed-in_case_load', 'mv_load_case_load', and 'lv_load_case_load'.

For reactive power a fixed *cosphi* is assumed. A different reactive power factor is used for loads in the MV and loads in the LV. The reactive power factors for conventional loads are specified in the config section *reactive_power_factor* through the parameters: 'mv_load' and 'lv_load'.

- Charging points

Worst case demand time series are distinguished by use case (home charging, work charging, public (slow) charging and HPC), by whether it is a load or feed-in case and by whether it used to analyse the MV or LV. Worst case scaling factors for charging points are specified in the config section *worst_case_scale_factor* through the

parameters: 'mv_feed-in_case_cp_home', 'mv_feed-in_case_cp_work', 'mv_feed-in_case_cp_public', and 'mv_feed-in_case_cp_hpc', 'lv_feed-in_case_cp_home', 'lv_feed-in_case_cp_work', 'lv_feed-in_case_cp_public', and 'lv_feed-in_case_cp_hpc', 'mv_load-in_case_cp_home', 'mv_load-in_case_cp_work', 'mv_load-in_case_cp_public', and 'mv_load-in_case_cp_hpc', 'lv_load-in_case_cp_home', 'lv_load-in_case_cp_work', 'lv_load-in_case_cp_public', and 'lv_load-in_case_cp_hpc'.

For reactive power a fixed cosphi is assumed. A different reactive power factor is used for charging points in the MV and charging points in the LV. The reactive power factors for charging points are specified in the config section *reactive_power_factor* through the parameters: 'mv_cp' and 'lv_cp'.

- Heat pumps

Worst case demand time series are distinguished by whether it is a load or feed-in case and by whether it used to analyse the MV or LV. Worst case scaling factors for heat pumps are specified in the config section *worst_case_scale_factor* through the parameters: 'mv_feed-in_case_hp', 'lv_feed-in_case_hp', 'mv_load_case_hp', and 'lv_load_case_hp'.

For reactive power a fixed cosphi is assumed. A different reactive power factor is used for heat pumps in the MV and heat pumps in the LV. The reactive power factors for heat pumps are specified in the config section *reactive_power_factor* through the parameters: 'mv_hp' and 'lv_hp'.

- Storage units

Worst case feed-in time series are distinguished by whether it is a load or feed-in case. In case of storage units worst case time series it is not distinguished by whether it is used to analyse the MV or LV. However, both options are generated as it is distinguished in the case of loads. Worst case scaling factors for storage units are specified in the config section *worst_case_scale_factor* through the parameters: 'feed-in_case_storage' and 'load_case_storage'.

For reactive power a fixed cosphi is assumed. A different reactive power factor is used for storage units in the MV and storage units in the LV. The reactive power factors for storage units are specified in the config section *reactive_power_factor* through the parameters: 'mv_storage' and 'lv_storage'.

Parameters

- **edisgo_object** (*EDisGo*) –
- **cases** (*list(str)*) – List with worst-cases to generate time series for. Can be 'feed-in_case', 'load_case' or both.
- **generators_names** (*list(str)*) – Defines for which generators to set worst case time series. If None, time series are set for all generators. Default: None.
- **loads_names** (*list(str)*) – Defines for which loads to set worst case time series. If None, time series are set for all loads. Default: None.
- **storage_units_names** (*list(str)*) – Defines for which storage units to set worst case time series. If None, time series are set for all storage units. Default: None.

Notes

Be careful, this function overwrites all previously set time series in the case that these are not worst case time series. If previously set time series are worst case time series is checked using `is_worst_case`.

Further, if this function is called for a component whose worst-case time series are already set, they are overwritten, even if previously set time series were set for a different worst-case.

Also be aware that loads for which type information is not set are handled as conventional loads.

[illegible]

Set active power feed-in time series for fluctuating generators by technology.

In case time series are provided per technology and weather cell ID, active power feed-in time series are also set by technology and weather cell ID.

Parameters

- **edisgo_object** (*EDisGo*) –
- **ts_generators** (str or `pandas.DataFrame`) – Defines which technology-specific or technology and weather cell specific active power time series to use. Possible options are:
 - 'oedb'

Technology and weather cell specific hourly feed-in time series are obtained from the [OpenEnergy DataBase](#) for the weather year 2011. See `ediso.io.timeseries_import.import_feedin_timeseries()` for more information.

- pandas.DataFrame

DataFrame with self-provided feed-in time series per technology or per technology and weather cell ID normalized to a nominal capacity of 1. In case time series are provided only by technology, columns of the DataFrame contain the technology type as string. In case time series are provided by technology and weather cell ID columns need to be a `pandas.MultiIndex` with the first level containing the technology as string and the second level the weather cell ID as integer. Index needs to be a `pandas.DatetimeIndex`.

When importing a ding0 grid and/or using predefined scenarios of the future generator park, each generator has an assigned weather cell ID that identifies the weather data cell from the weather data set used in the research project [open_eGo](#) to determine feed-in profiles. The weather cell ID can be retrieved from column *weather_cell_id* in [generators_df](#) and could be overwritten to use own weather cells.

- **generator_names** (*list(str)*) – Defines for which fluctuating generators to use technology-specific time series. If None, all generators technology (and weather cell) specific time series are provided for are used. In case the time series are retrieved from the oedb, all solar and wind generators are used. Default: None.

[illegible]

Set active power feed-in time series for dispatchable generators by technology.

Parameters

- `edisgo_object` (*EDisGo*) –

- **ts_generators** (`pandas.DataFrame`) – DataFrame with self-provided active power time series of each type of dispatchable generator normalized to a nominal capacity of 1. Columns contain the technology type as string, e.g. ‘gas’, ‘coal’. Use ‘other’ if you don’t want to explicitly provide a time series for every possible technology. In the current grid existing generator technologies can be retrieved from column *type* in `generators_df`. Index needs to be a `pandas.DatetimeIndex`.
- **generator_names** (`list(str)`) – Defines for which dispatchable generators to use technology-specific time series. If None, all dispatchable generators technology-specific time series are provided for are used. In case `ts_generators` contains a column ‘other’, all dispatchable generators in the network (i.e. all but solar and wind generators) are used.

predefined_conventional_loads_by_sector(*edisgo_object*, *ts_loads*, *load_names=None*)

Set active power demand time series for conventional loads by sector.

Parameters

- **edisgo_object** (`EDisGo`) –
- **ts_loads** (str or `pandas.DataFrame`) – Defines which sector-specific active power time series to use. Possible options are:
 - ‘demandlib’

Time series for the year specified `timeindex` are generated using standard electric load profiles from the oemof `demandlib`. The demandlib provides sector-specific time series for the sectors ‘residential’, ‘retail’, ‘industrial’, and ‘agricultural’.
 - `pandas.DataFrame`

DataFrame with load time series per sector normalized to an annual consumption of 1. Index needs to be a `pandas.DatetimeIndex`. Columns contain the sector as string. In the current grid existing load types can be retrieved from column *sector* in `loads_df` (make sure to select *type* ‘conventional_load’). In ding0 grid the differentiated sectors are ‘residential’, ‘retail’, ‘industrial’, and ‘agricultural’.
- **load_names** (`list(str)`) – Defines for which conventional loads to use sector-specific time series. If None, all loads of sectors for which sector-specific time series are provided are used. In case the demandlib is used, all loads of sectors ‘residential’, ‘retail’, ‘industrial’, and ‘agricultural’ are used.

predefined_charging_points_by_use_case(*edisgo_object*, *ts_loads*, *load_names=None*)

Set active power demand time series for charging points by their use case.

Parameters

- **edisgo_object** (`EDisGo`) –
- **ts_loads** (`pandas.DataFrame`) – DataFrame with self-provided load time series per use case normalized to a nominal power of the charging point of 1. Index needs to be a `pandas.DatetimeIndex`. Columns contain the use case as string. In the current grid existing use case types can be retrieved from column *sector* in `loads_df` (make sure to select *type* ‘charging_point’). When using charging point input from SimBEV the differentiated use cases are ‘home’, ‘work’, ‘public’ and ‘hpc’.
- **load_names** (`list(str)`) – Defines for which charging points to use use-case-specific time series. If None, all charging points of use cases for which use-case-specific time series are provided are used.

fixed_cosphi(*edisgo_object*, *generators_parametrisation=None*, *loads_parametrisation=None*, *storage_units_parametrisation=None*)

Sets reactive power of specified components assuming a fixed power factor.

Overwrites reactive power time series in case they already exist.

Parameters

- **generators_parametrisation** (str or `pandas.DataFrame` or None) – Sets fixed cosphi parameters for generators. Possible options are:

- 'default'

Default configuration is used for all generators in the grid. To this end, the power factors set in the config section *reactive_power_factor* and the power factor mode, defining whether components behave inductive or capacitive, given in the config section *reactive_power_mode*, are used.

- `pandas.DataFrame`

DataFrame with fix cosphi parametrisation for specified generators. Columns are:

- * **'components'**

[list(str)] List with generators to apply parametrisation for.

- * **'mode'**

[str] Defines whether generators behave inductive or capacitive. Possible options are 'inductive', 'capacitive' or 'default'. In case of 'default', configuration from config section *reactive_power_mode* is used.

- * **'power_factor'**

[float or str] Defines the fixed cosphi power factor. The power factor can either be directly provided as float or it can be set to 'default', in which case configuration from config section *reactive_power_factor* is used.

Index of the dataframe is ignored.

- None

No reactive power time series are set.

Default: None.

- **loads_parametrisation** (str or `pandas.DataFrame` or None) – Sets fixed cosphi parameters for loads. The same options as for parameter *generators_parametrisation* apply.
- **storage_units_parametrisation** (str or `pandas.DataFrame` or None) – Sets fixed cosphi parameters for storage units. The same options as for parameter *generators_parametrisation* apply.

Notes

This function requires active power time series to be previously set.

property `residual_load`

Returns residual load in network.

Residual load for each time step is calculated from total load minus total generation minus storage active power (discharge is positive). A positive residual load represents a load case while a negative residual load here represents a feed-in case. Grid losses are not considered.

Returns

Series with residual load in MW.

Return type

`pandas.Series`

property `timesteps_load_feedin_case`

Contains residual load and information on feed-in and load case.

Residual load is calculated from total (load - generation) in the network. Grid losses are not considered.

Feed-in and load case are identified based on the generation, load and storage time series and defined as follows:

1. Load case: positive (load - generation - storage) at HV/MV substation
2. Feed-in case: negative (load - generation - storage) at HV/MV substation

Returns

Series with information on whether time step is handled as load case ('load_case') or feed-in case ('feed-in_case') for each time step in `timeindex`.

Return type

`pandas.Series`

`reduce_memory(attr_to_reduce=None, to_type='float32', time_series_raw=True, **kwargs)`

Reduces size of dataframes to save memory.

See `reduce_memory` for more information.

Parameters

- **attr_to_reduce** (`list(str)`, *optional*) – List of attributes to reduce size for. Per default, all active and reactive power time series of generators, loads, and storage units are reduced.
- **to_type** (`str`, *optional*) – Data type to convert time series data to. This is a tradeoff between precision and memory. Default: "float32".
- **time_series_raw** (`bool`, *optional*) – If True raw time series data in `time_series_raw` is reduced as well. Default: True.
- **attr_to_reduce_raw** (`list(str)`, *optional*) – List of attributes in `TimeSeriesRaw` to reduce size for. See `reduce_memory` for default.

`to_csv(directory, reduce_memory=False, time_series_raw=False, **kwargs)`

Saves component time series to csv.

Saves the following time series to csv files with the same file name (if the time series dataframe is not empty):

- loads_active_power and loads_reactive_power
- generators_active_power and generators_reactive_power
- storage_units_active_power and storage_units_reactive_power

If parameter `time_series_raw` is set to `True`, raw time series data is saved to csv as well. See [to_csv](#) for more information.

Parameters

- **directory** (*str*) – Directory to save time series in.
- **reduce_memory** (*bool*, *optional*) – If `True`, size of dataframes is reduced using [reduce_memory](#). Optional parameters of [reduce_memory](#) can be passed as kwargs to this function. Default: `False`.
- **time_series_raw** (*bool*, *optional*) – If `True` raw time series data in [time_series_raw](#) is saved to csv as well. Per default all raw time series data is then stored in a subdirectory of the specified *directory* called “time_series_raw”. Further, if [reduce_memory](#) is set to `True`, raw time series data is reduced as well. To change this default behavior please call [to_csv](#) separately. Default: `False`.
- **kwargs** – Kwargs may contain arguments of [reduce_memory](#).

from_csv(*data_path*, *dtype=None*, *time_series_raw=False*, *from_zip_archive=False*, ***kwargs*)

Restores time series from csv files.

See [to_csv\(\)](#) for more information on which time series can be saved and thus restored.

Parameters

- **data_path** (*str*) – Data path time series are saved in. Must be a directory or zip archive.
- **dtype** (*str*, *optional*) – Numerical data type for data to be loaded from csv. E.g. “float32”. Default: `None`.
- **time_series_raw** (*bool*, *optional*) – If `True` raw time series data is as well read in (see [from_csv](#) for further information). Directory data is restored from can be specified through kwargs. Default: `False`.
- **from_zip_archive** (*bool*, *optional*) – Set `True` if data is archived in a zip archive. Default: `False`.
- **directory_raw** (*str*, *optional*) – Directory to read raw time series data from. Per default this is a subdirectory of the specified *directory* called “time_series_raw”.

check_integrity()

Check for NaN, duplicated indices or columns and if time series is empty.

drop_component_time_series(*df_name*, *comp_names*)

Drops component time series if they exist.

Parameters

- **df_name** (*str*) – Name of attribute of given object holding the dataframe to remove columns from. Can e.g. be “generators_active_power” if time series should be removed from [generators_active_power](#).
- **comp_names** (*str* or *list(str)*) – Names of components to drop.

add_component_time_series(*df_name*, *ts_new*)

Add component time series by concatenating existing and provided dataframe.

Possibly already component time series are dropped before appending newly provided time series using [drop_component_time_series](#).

Parameters

- **df_name** (*str*) – Name of attribute of given object holding the dataframe to add columns to. Can e.g. be “generators_active_power” if time series should be added to *generators_active_power*.
- **ts_new** (*pandas.DataFrame*) – Dataframe with new time series to add to existing time series dataframe.

resample_timeseries(*method='ffill', freq='15min'*)

Resamples all generator, load and storage time series to a desired resolution.

See *resample_timeseries* for more information.

Parameters

- **method** (*str, optional*) – See *resample_timeseries* for more information.
- **freq** (*str, optional*) – See *resample_timeseries* for more information.

class edisgo.network.timeseries.TimeSeriesRaw

Bases: *object*

Holds raw time series data, e.g. sector-specific demand and standing times of EV.

Normalised time series are e.g. sector-specific demand time series or technology-specific feed-in time series. Time series needed for flexibilities are e.g. heat time series or curtailment time series.

q_control

Dataframe with information on applied reactive power control or in case of conventional loads assumed reactive power behavior. Index of the dataframe are the component names as in index of *generators_df*, *loads_df*, and *storage_units_df*. Columns are “type” with the type of Q-control applied (can be “fixed_cosphi”, “cosphi(P)”, or “Q(V)”), “power_factor” with the (maximum) power factor, “q_sign” giving the sign of the reactive power (only applicable to “fixed_cosphi”), “parametrisation” with the parametrisation of the respective Q-control (only applicable to “cosphi(P)” and “Q(V)”).

Type

pandas.DataFrame

fluctuating_generators_active_power_by_technology

DataFrame with feed-in time series per technology or technology and weather cell ID normalized to a nominal capacity of 1. Columns can either just contain the technology type as string or be a *pandas.MultiIndex* with the first level containing the technology as string and the second level the weather cell ID as integer. Index is a *pandas.DatetimeIndex*.

Type

pandas.DataFrame

dispatchable_generators_active_power_by_technology

DataFrame with feed-in time series per technology normalized to a nominal capacity of 1. Columns contain the technology type as string. Index is a *pandas.DatetimeIndex*.

Type

pandas.DataFrame

conventional_loads_active_power_by_sector

DataFrame with load time series of each type of conventional load normalized to an annual consumption of 1. Index needs to be a *pandas.DatetimeIndex*. Columns represent load type. In ding0 grids the differentiated sectors are ‘residential’, ‘retail’, ‘industrial’, and ‘agricultural’.

Type

pandas.DataFrame

charging_points_active_power_by_use_case

DataFrame with charging demand time series per use case normalized to a nominal capacity of 1. Columns contain the use case as string. Index is a *pandas.DatetimeIndex*.

Type

`pandas.DataFrame`

reduce_memory(*attr_to_reduce=None, to_type='float32'*)

Reduces size of dataframes to save memory.

See [reduce_memory](#) for more information.

Parameters

- **attr_to_reduce** (*list(str), optional*) – List of attributes to reduce size for. Attributes need to be dataframes containing only time series. Per default the following attributes are reduced if they exist: `q_control`, `fluctuating_generators_active_power_by_technology`, `dispatchable_generators_active_power_by_technology`, `conventional_loads_active_power_by_sector`, `charging_points_active_power_by_use_case`.
- **to_type** (*str, optional*) – Data type to convert time series data to. This is a tradeoff between precision and memory. Default: “float32”.

to_csv(*directory, reduce_memory=False, **kwargs*)

Saves time series to csv.

Saves all attributes that are set to csv files with the same file name. See class definition for possible attributes.

Parameters

- **directory** (*str*) – Directory to save time series in.
- **reduce_memory** (*bool, optional*) – If True, size of dataframes is reduced using [reduce_memory](#). Optional parameters of [reduce_memory](#) can be passed as kwargs to this function. Default: False.
- **kwargs** – Kwargs may contain optional arguments of [reduce_memory](#).

from_csv(*directory*)

Restores time series from csv files.

See [to_csv\(\)](#) for more information on which time series are saved.

Parameters

directory (*str*) – Directory time series are saved in.

edisgo.network.topology module

class `edisgo.network.topology.Topology`(***kwargs*)

Bases: `object`

Container for all grid topology data of a single MV grid.

Data may as well include grid topology data of underlying LV grids.

Parameters

config (None or `Config`) – Provide your configurations if you want to load self-provided equipment data. Path to csv files containing the technical data is set in `config_system.cfg` in sections `system_dirs` and `equipment`. The default is None in which case the equipment data provided by eDisGo is used.

property `loads_df`

Dataframe with all loads in MV network and underlying LV grids.

Parameters

df (`pandas.DataFrame`) – Dataframe with all loads (incl. charging points, heat pumps, etc.) in MV network and underlying LV grids. Index of the dataframe are load names as string. Columns of the dataframe are:

bus

[str] Identifier of bus load is connected to.

p_set

[float] Peak load or nominal capacity in MW.

type

[str] Type of load, e.g. ‘conventional_load’, ‘charging_point’ or ‘heat_pump’. This information is for example currently necessary when setting up a worst case analysis, as different types of loads are treated differently.

annual_consumption

[float] Annual consumption in MWh.

sector

[str] Further specifies type of load.

In case of conventional loads this attribute is used if `demandlib` is used to generate sector-specific time series (see function `predefined_conventional_loads_by_sector`). It is further used when new generators are integrated into the grid, as e.g. smaller PV rooftop generators are most likely to be located in a household (see function `connect_to_lv`). The sector needs to either be ‘agricultural’, ‘industrial’, ‘residential’ or ‘retail’.

In case of charging points this attribute is used to define the charging point use case (‘home’, ‘work’, ‘public’ or ‘hpc’) to determine whether a charging process can be flexibilised, as it is assumed that only charging processes at private charging points (‘home’ and ‘work’) can be flexibilised (see function `charging_strategy`). It is further used when charging points are integrated into the grid, as e.g. ‘home’ charging points are allocated to a household (see function `connect_to_lv`).

In case of heat pumps it is used when heat pumps are integrated into the grid, as e.g. heat pumps for individual heating are allocated to an existing load (see function `connect_to_lv`). The sector needs to either be ‘individual_heating’ or ‘district_heating’.

Returns

Dataframe with all loads in MV network and underlying LV grids. For more information on the dataframe see input parameter *df*.

Return type

`pandas.DataFrame`

property generators_df

Dataframe with all generators in MV network and underlying LV grids.

Parameters

df (`pandas.DataFrame`) – Dataframe with all generators in MV network and underlying LV grids. Index of the dataframe are generator names as string. Columns of the dataframe are:

bus

[str] Identifier of bus generator is connected to.

p_nom

[float] Nominal power in MW.

type

[str] Type of generator, e.g. 'solar', 'run_of_river', etc. Is used in case generator type specific time series are provided.

control

[str] Control type of generator used for power flow analysis. In MV and LV grids usually 'PQ'.

weather_cell_id

[int] ID of weather cell, that identifies the weather data cell from the weather data set used in the research project [open_eGo](#) to determine feed-in profiles of wind and solar generators. Only required when time series of wind and solar generators are assigned using precalculated time series from the OpenEnergy DataBase.

subtype

[str] Further specification of type, e.g. 'solar_roof_mounted'. Currently not required for any functionality.

Returns

Dataframe with all generators in MV network and underlying LV grids. For more information on the dataframe see input parameter *df*.

Return type

[pandas.DataFrame](#)

property storage_units_df

Dataframe with all storage units in MV grid and underlying LV grids.

Parameters

df ([pandas.DataFrame](#)) – Dataframe with all storage units in MV grid and underlying LV grids. Index of the dataframe are storage names as string. Columns of the dataframe are:

bus

[str] Identifier of bus storage unit is connected to.

control

[str] Control type of storage unit used for power flow analysis, usually 'PQ'.

p_nom

[float] Nominal power in MW.

Returns

Dataframe with all storage units in MV network and underlying LV grids. For more information on the dataframe see input parameter *df*.

Return type

[pandas.DataFrame](#)

property transformers_df

Dataframe with all MV/LV transformers.

Parameters

df ([pandas.DataFrame](#)) – Dataframe with all MV/LV transformers. Index of the dataframe are transformer names as string. Columns of the dataframe are:

bus0

[str] Identifier of bus at the transformer's primary (MV) side.

bus1

[str] Identifier of bus at the transformer's secondary (LV) side.

x_pu
[float] Per unit series reactance.

r_pu
[float] Per unit series resistance.

s_nom
[float] Nominal apparent power in MW.

type_info
[str] Type of transformer.

Returns

Dataframe with all MV/LV transformers. For more information on the dataframe see input parameter *df*.

Return type

`pandas.DataFrame`

property transformers_hvmv_df

Dataframe with all HV/MV transformers.

Parameters

df (`pandas.DataFrame`) – Dataframe with all HV/MV transformers, with the same format as `transformers_df`.

Returns

Dataframe with all HV/MV transformers. For more information on format see `transformers_df`.

Return type

`pandas.DataFrame`

property lines_df

Dataframe with all lines in MV network and underlying LV grids.

Parameters

df (`pandas.DataFrame`) – Dataframe with all lines in MV network and underlying LV grids. Index of the dataframe are line names as string. Columns of the dataframe are:

bus0
[str] Identifier of first bus to which line is attached.

bus1
[str] Identifier of second bus to which line is attached.

length
[float] Line length in km.

x
[float] Reactance of line (or in case of multiple parallel lines total reactance of lines) in Ohm.

r
[float] Resistance of line (or in case of multiple parallel lines total resistance of lines) in Ohm.

s_nom
[float] Apparent power which can pass through the line (or in case of multiple parallel lines total apparent power which can pass through the lines) in MVA.

num_parallel
[int] Number of parallel lines.

type_info

[str] Type of line as e.g. given in *equipment_data*.

kind

[str] Specifies whether line is a cable ('cable') or overhead line ('line').

Returns

Dataframe with all lines in MV network and underlying LV grids. For more information on the dataframe see input parameter *df*.

Return type

`pandas.DataFrame`

property buses_df

Dataframe with all buses in MV network and underlying LV grids.

Parameters

df (`pandas.DataFrame`) – Dataframe with all buses in MV network and underlying LV grids. Index of the dataframe are bus names as strings. Columns of the dataframe are:

v_nom

[float] Nominal voltage in kV.

x

[float] x-coordinate (longitude) of geolocation.

y

[float] y-coordinate (latitude) of geolocation.

mv_grid_id

[int] ID of MV grid the bus is in.

lv_grid_id

[int] ID of LV grid the bus is in. In case of MV buses this is NaN.

in_building

[bool] Signifies whether a bus is inside a building, in which case only components belonging to this house connection can be connected to it.

Returns

Dataframe with all buses in MV network and underlying LV grids.

Return type

`pandas.DataFrame`

property switches_df

Dataframe with all switches in MV network and underlying LV grids.

Switches are implemented as branches that, when they are closed, are connected to a bus (*bus_closed*) such that there is a closed ring, and when they are open, connected to a virtual bus (*bus_open*), such that there is no closed ring. Once the ring is closed, the virtual is a single bus that is not connected to the rest of the grid.

Parameters

df (`pandas.DataFrame`) – Dataframe with all switches in MV network and underlying LV grids. Index of the dataframe are switch names as string. Columns of the dataframe are:

bus_open

[str] Identifier of bus the switch branch is connected to when the switch is open.

bus_closed

[str] Identifier of bus the switch branch is connected to when the switch is closed.

branch

[str] Identifier of branch that represents the switch.

type

[str] Type of switch, e.g. switch disconnector.

Returns

Dataframe with all switches in MV network and underlying LV grids. For more information on the dataframe see input parameter *df*.

Return type

`pandas.DataFrame`

property charging_points_df

Returns a subset of *loads_df* containing only charging points.

Parameters

type (*str*) – Load type. Default: “charging_point”

Returns

Pandas DataFrame with all loads of the given type.

Return type

`pandas.DataFrame`

property id

MV network ID.

Returns

MV network ID.

Return type

`int`

property mv_grid

Medium voltage network.

The medium voltage network object only contains components (lines, generators, etc.) that are in or connected to the MV grid and does not include any components of the underlying LV grids (also not MV/LV transformers).

Parameters

mv_grid (*MVGrid*) – Medium voltage network.

Returns

Medium voltage network.

Return type

MVGrid

property lv_grids

Yields generator object with all low voltage grids in network.

Returns

Yields generator object with *LVGrid* object.

Return type

LVGrid

get_lv_grid(name)

Returns *LVGrid* object for given LV grid ID or name.

Parameters

name (*int* or *str*) – LV grid ID as integer or LV grid name (string representation) as string of the LV grid object that should be returned.

Returns

LV grid object with the given LV grid ID or LV grid name (string representation).

Return type

LVGrid

property grid_district

Dictionary with MV grid district information.

Parameters

grid_district (*dict*) – Dictionary with the following MV grid district information:

'population'

[int] Number of inhabitants in grid district.

'geom'

[*shapely.MultiPolygon*] Geometry of MV grid district as (Multi)Polygon.

'srid'

[int] SRID (spatial reference ID) of grid district geometry.

Returns

Dictionary with MV grid district information. For more information on the dictionary see input parameter *grid_district*.

Return type

dict

property rings

List of rings in the grid topology.

A ring is represented by the names of buses within that ring.

Returns

List of rings, where each ring is again represented by a list of buses within that ring.

Return type

list(list)

property equipment_data

Technical data of electrical equipment such as lines and transformers.

Returns

Dictionary with *pandas.DataFrame* containing equipment data. Keys of the dictionary are 'mv_transformers', 'mv_overhead_lines', 'mv_cables', 'lv_transformers', and 'lv_cables'.

Return type

dict

get_connected_lines_from_bus(*bus_name*)

Returns all lines connected to specified bus.

Parameters

bus_name (*str*) – Name of bus to get connected lines for.

Returns

Dataframe with connected lines with the same format as *lines_df*.

Return type

pandas.DataFrame

get_line_connecting_buses(*bus_1*, *bus_2*)

Returns information of line connecting bus_1 and bus_2.

Parameters

- **bus_1** (*str*) – Name of first bus.
- **bus_2** (*str*) – Name of second bus.

Returns

Dataframe with information of line connecting bus_1 and bus_2 in the same format as [lines_df](#).

Return type

[pandas.DataFrame](#)

get_connected_components_from_bus(*bus_name*)

Returns dictionary of components connected to specified bus.

Parameters

bus_name (*str*) – Identifier of bus to get connected components for.

Returns

Dictionary of connected components with keys ‘generators’, ‘loads’, ‘storage_units’, ‘lines’, ‘transformers’, ‘transformers_hvmv’, ‘switches’. Corresponding values are component dataframes containing only components that are connected to the given bus.

Return type

dict of [pandas.DataFrame](#)

get_neighbours(*bus_name*)

Returns a set of neighbour buses of specified bus.

Parameters

bus_name (*str*) – Identifier of bus to get neighbouring buses for.

Returns

Set of identifiers of neighbouring buses.

Return type

[set\(str\)](#)

add_load(*bus*, *p_set*, *type*='conventional_load', ***kwargs*)

Adds load to topology.

Load name is generated automatically.

Parameters

- **bus** (*str*) – See [loads_df](#) for more information.
- **p_set** (*float*) – See [loads_df](#) for more information.
- **type** (*str*) – See [loads_df](#) for more information. Default: “conventional_load”
- **kwargs** – Kwargs may contain any further attributes you want to specify. See [loads_df](#) for more information on additional attributes used for some functionalities in edisgo. Kwargs may also contain a load ID (provided through keyword argument *load_id* as string) used to generate a unique identifier for the newly added load.

Returns

Unique identifier of added load.

Return type

[str](#)

add_generator(*bus*, *p_nom*, *generator_type*, *control*='PQ', ***kwargs*)

Adds generator to topology.

Generator name is generated automatically.

Parameters

- **bus** (*str*) – See [generators_df](#) for more information.
- **p_nom** (*float*) – See [generators_df](#) for more information.
- **generator_type** (*str*) – Type of generator, e.g. ‘solar’ or ‘gas’. See ‘type’ in [generators_df](#) for more information.
- **control** (*str*) – See [generators_df](#) for more information. Defaults to ‘PQ’.
- **kwargs** – Kwargs may contain any further attributes you want to specify. See [generators_df](#) for more information on additional attributes used for some functionalities in edisgo. Kwargs may also contain a generator ID (provided through keyword argument *generator_id* as string) used to generate a unique identifier for the newly added generator.

Returns

Unique identifier of added generator.

Return type

str

add_storage_unit(*bus*, *p_nom*, *control*='PQ', ***kwargs*)

Adds storage unit to topology.

Storage unit name is generated automatically.

Parameters

- **bus** (*str*) – See [storage_units_df](#) for more information.
- **p_nom** (*float*) – See [storage_units_df](#) for more information.
- **control** (*str*, *optional*) – See [storage_units_df](#) for more information. Defaults to ‘PQ’.
- **kwargs** – Kwargs may contain any further attributes you want to specify.

add_line(*bus0*, *bus1*, *length*, ***kwargs*)

Adds line to topology.

Line name is generated automatically. If *type_info* is provided, *x*, *r*, *b* and *s_nom* are calculated.

Parameters

- **bus0** (*str*) – Identifier of connected bus.
- **bus1** (*str*) – Identifier of connected bus.
- **length** (*float*) – See [lines_df](#) for more information.
- **kwargs** – Kwargs may contain any further attributes in [lines_df](#). It is necessary to either provide *type_info* to determine *x*, *r*, *b* and *s_nom* of the line, or to provide *x*, *r*, *b* and *s_nom* directly.

add_bus(*bus_name*, *v_nom*, ***kwargs*)

Adds bus to topology.

If provided bus name already exists, a unique name is created.

Parameters

- **bus_name** (*str*) – Name of new bus.
- **v_nom** (*float*) – See [buses_df](#) for more information.
- **x** (*float*) – See [buses_df](#) for more information.

- **y** (*float*) – See *buses_df* for more information.
- **lv_grid_id** (*int*) – See *buses_df* for more information.
- **in_building** (*bool*) – See *buses_df* for more information.

Returns

Name of bus. If provided bus name already exists, a unique name is created.

Return type

str

remove_load(name)

Removes load with given name from topology.

If no other elements are connected, line and bus are removed as well.

Parameters

name (*str*) – Identifier of load as specified in index of *loads_df*.

remove_generator(name)

Removes generator with given name from topology.

If no other elements are connected, line and bus are removed as well.

Parameters

name (*str*) – Identifier of generator as specified in index of *generators_df*.

remove_storage_unit(name)

Removes storage with given name from topology.

If no other elements are connected, line and bus are removed as well.

Parameters

name (*str*) – Identifier of storage as specified in index of *storage_units_df*.

remove_line(name)

Removes line with given name from topology.

Line is only removed, if it does not result in isolated buses. A warning is raised in that case.

Parameters

name (*str*) – Identifier of line as specified in index of *lines_df*.

remove_bus(name)

Removes bus with given name from topology.

Parameters

name (*str*) – Identifier of bus as specified in index of *buses_df*.

Notes

Only isolated buses can be deleted from topology. Use respective functions first to delete all connected components (e.g. lines, transformers, loads, etc.). Use function `get_connected_components_from_bus()` to get all connected components.

update_number_of_parallel_lines(lines_num_parallel)

Changes number of parallel lines and updates line attributes.

When number of parallel lines changes, attributes `x`, `r`, `b`, and `s_nom` have to be adapted, which is done in this function.

Parameters

lines_num_parallel (*pandas.Series*) – Index contains identifiers of lines to update as in index of *lines_df* and values of series contain corresponding new number of parallel lines.

change_line_type(*lines*, *new_line_type*)

Changes line type of specified lines to given new line type.

Be aware that this function replaces the lines by one line of the given line type. Lines must all be in the same voltage level and the new line type must be a cable with technical parameters given in equipment parameters.

Parameters

- **lines** (*list*(*str*)) – List of line names of lines to be changed to new line type.
- **new_line_type** (*str*) – Specifies new line type of lines. Line type must be a cable with technical parameters given in “mv_cables” or “lv_cables” of equipment data.

connect_to_mv(*edisgo_object*, *comp_data*, *comp_type*='generator')

Add and connect new generator, charging point or heat pump to MV grid topology.

This function creates a new bus the new component is connected to. The new bus is then connected to the grid depending on the specified voltage level (given in *comp_data* parameter). Components of voltage level 4 are connected to the HV/MV station. Components of voltage level 5 are connected to the nearest MV bus or line. In case the component is connected to a line, the line is split at the point closest to the new component (using perpendicular projection) and a new branch tee is added to connect the new component to.

Parameters

- **edisgo_object** (*EDisGo*) –
- **comp_data** (*dict*) – Dictionary with all information on component. The dictionary must contain all required arguments of method [add_generator](#) respectively [add_load](#), except the *bus* that is assigned in this function, and may contain all other parameters of those methods. Additionally, the dictionary must contain the voltage level to connect in key ‘voltage_level’ and the geolocation in key ‘geom’. The voltage level must be provided as integer, with possible options being 4 (component is connected directly to the HV/MV station) or 5 (component is connected somewhere in the MV grid). The geolocation must be provided as [Shapely Point](#) object.
- **comp_type** (*str*) – Type of added component. Can be ‘generator’, ‘charging_point’ or ‘heat_pump’. Default: ‘generator’.

Returns

The identifier of the newly connected component.

Return type

str

connect_to_lv(*edisgo_object*, *comp_data*, *comp_type*='generator', *allowed_number_of_comp_per_bus*=2)

Add and connect new generator, charging point or heat pump to LV grid topology.

This function connects the new component depending on the voltage level, and information on the MV/LV substation ID, geometry and sector, all provided in the *comp_data* parameter. It connects

- **Components with specified voltage level 6**
 - to MV/LV substation (a new bus is created for the new component, unless no geometry data is available, in which case the new component is connected directly to the substation)
- **Generators with specified voltage level 7**
 - with a nominal capacity of <=30 kW to LV loads of sector residential, if available

- with a nominal capacity of >30 kW to LV loads of sector retail, industrial or agricultural, if available
- to random bus in the LV grid as fallback if no appropriate load is available
- **Charging points with specified voltage level 7**
 - with sector ‘home’ to LV loads of sector residential, if available
 - with sector ‘work’ to LV loads of sector retail, industrial or agricultural, if available, otherwise
 - with sector ‘public’ or ‘hpc’ to some bus in the grid that is not a house connection
 - to random bus in the LV grid that is not a house connection if no appropriate load is available (fallback)
- **Heat pumps with specified voltage level 7**
 - with sector ‘individual_heating’ to LV loads
 - with sector ‘individual_heating’ to some bus in the grid that is not a house connection
 - to random bus in the LV grid that if no appropriate load is available (fallback)

In case no MV/LV substation ID is provided a random LV grid is chosen. In case the provided MV/LV substation ID does not exist (i.e. in case of components in an aggregated load area), the new component is directly connected to the HV/MV station (will be changed once generators in aggregated areas are treated differently in `ding0`).

The number of components of the same type connected at one load is restricted by the parameter *allowed_number_of_comp_per_bus*. If every possible load already has more than the allowed number then the new component is directly connected to the MV/LV substation.

Parameters

- **edisgo_object** (*EDisGo*) –
- **comp_data** (*dict*) – Dictionary with all information on component. The dictionary must contain all required arguments of method `add_generator` respectively `add_load`, except the *bus* that is assigned in this function, and may contain all other parameters of those methods. Additionally, the dictionary must contain the voltage level to connect in key ‘voltage_level’ and may contain the geolocation in key ‘geom’ and the LV grid ID to connect the component in key ‘mvlv_subst_id’. The voltage level must be provided as integer, with possible options being 6 (component is connected directly to the MV/LV substation) or 7 (component is connected somewhere in the LV grid). The geolocation must be provided as [Shapely Point object](#) and the LV grid ID as integer.
- **comp_type** (*str*) – Type of added component. Can be ‘generator’, ‘charging_point’ or ‘heat_pump’. Default: ‘generator’.
- **allowed_number_of_comp_per_bus** (*int*) – Specifies, how many components of the same type are at most allowed to be placed at the same bus. Default: 2.

Returns

The identifier of the newly connected component.

Return type

str

Notes

For the allocation, loads are selected randomly (sector-wise) using a predefined seed to ensure reproducibility.

`to_graph()`

Returns graph representation of the grid.

Returns

Graph representation of the grid as networkx Ordered Graph, where lines are represented by edges in the graph, and buses and transformers are represented by nodes.

Return type

`networkx.Graph`

`to_geopandas(mode='mv')`

Returns components as `geopandas.GeoDataFrames`.

Returns container with `geopandas.GeoDataFrames` containing all georeferenced components within the grid.

Parameters

mode (*str*) – Return mode. If mode is “mv” the mv components are returned. If mode is “lv” a generator with a container per lv grid is returned. Default: “mv”

Returns

Data container with GeoDataFrames containing all georeferenced components within the grid(s).

Return type

`GeoPandasGridContainer` or `list(GeoPandasGridContainer)`

`to_csv(directory)`

Exports topology to csv files.

The following attributes are exported:

- ‘loads_df’ : Attribute `loads_df` is saved to `loads.csv`.
- ‘generators_df’ : Attribute `generators_df` is saved to `generators.csv`.
- ‘storage_units_df’ : Attribute `storage_units_df` is saved to `storage_units.csv`.
- ‘transformers_df’ : Attribute `transformers_df` is saved to `transformers.csv`.
- ‘transformers_hvmv_df’ : Attribute `transformers_df` is saved to `transformers.csv`.
- ‘lines_df’ : Attribute `lines_df` is saved to `lines.csv`.
- ‘buses_df’ : Attribute `buses_df` is saved to `buses.csv`.
- ‘switches_df’ : Attribute `switches_df` is saved to `switches.csv`.
- ‘grid_district’ : Attribute `grid_district` is saved to `network.csv`.

Attributes are exported in a way that they can be directly imported to pypsa.

Parameters

directory (*str*) – Path to save topology to.

`from_csv(data_path, edisgo_obj, from_zip_archive=False)`

Restores topology from csv files.

Parameters

- **data_path** (*str*) – Path to topology csv files or zip archive.
- **edisgo_obj** (*EDisGo*) –
- **from_zip_archive** (*bool*) – Set to True if data is archived in a zip archive. Default: False.

check_integrity()

Check data integrity.

Checks for duplicated labels and isolated components. Further checks for very small impedances that can cause stability problems in the power flow calculation and large line lengths that might be implausible.

1.8.3 edisgo.flex_opt package**edisgo.flex_opt.charging_strategies module**

```
edisgo.flex_opt.charging_strategies.charging_strategy(edisgo_obj, strategy='dumb',
                                                    timestamp_share_threshold=0.2,
                                                    minimum_charging_capacity_factor=0.1)
```

Applies charging strategy to set EV charging time series at charging parks.

See [apply_charging_strategy](#) for more information.

Parameters

- **edisgo_obj** (*EDisGo*) –
- **strategy** (*str*) – Defines the charging strategy to apply. See [strategy](#) parameter [apply_charging_strategy](#) for more information. Default: 'dumb'.
- **timestamp_share_threshold** (*float*) – Percental threshold of the time required at a time step for charging the vehicle. See [timestamp_share_threshold](#) parameter [apply_charging_strategy](#) for more information. Default: 0.2.
- **minimum_charging_capacity_factor** (*float*) – Technical minimum charging power of charging points in p.u. used in case of charging strategy 'reduced'. See [minimum_charging_capacity_factor](#) parameter [apply_charging_strategy](#) for more information. Default: 0.1.

```
edisgo.flex_opt.charging_strategies.harmonize_charging_processes_df(df, edisgo_obj, len_ts,
                                                                    times-
                                                                    tamp_share_threshold,
                                                                    strategy=None, mini-
                                                                    mum_charging_capacity_factor=0.1,
                                                                    eta_cp=1.0)
```

Harmonizes the charging processes to prevent differences in the energy demand per charging strategy.

Parameters

- **df** (*pandas.DataFrame*) – Charging processes DataFrame.
- **len_ts** (*int*) – Length of the timeseries.
- **timestamp_share_threshold** (*float*) – See description in [charging_strategy\(\)](#).
- **strategy** (*str*) – See description in [charging_strategy\(\)](#).
- **minimum_charging_capacity_factor** (*float*) – See description in [charging_strategy\(\)](#). Default: 0.1.
- **eta_cp** (*float*) – Charging point efficiency. Default: 1.0.

edisgo.flex_opt.check_tech_constraints module

`edisgo.flex_opt.check_tech_constraints.mv_line_load(edisgo_obj)`

Checks for over-loading issues in MV network.

Parameters

edisgo_obj (*EDisGo*) –

Returns

Dataframe containing over-loaded MV lines, their maximum relative over-loading (maximum calculated current over allowed current) and the corresponding time step. Index of the dataframe are the names of the over-loaded lines. Columns are 'max_rel_overload' containing the maximum relative over-loading as float, 'time_index' containing the corresponding time step the over-loading occurred in as [pandas.Timestamp](#), and 'voltage_level' specifying the voltage level the line is in (either 'mv' or 'lv').

Return type

[pandas.DataFrame](#)

Notes

Line over-load is determined based on allowed load factors for feed-in and load cases that are defined in the config file 'config_grid_expansion' in section 'grid_expansion_load_factors'.

`edisgo.flex_opt.check_tech_constraints.lv_line_load(edisgo_obj)`

Checks for over-loading issues in LV network.

Parameters

edisgo_obj (*EDisGo*) –

Returns

Dataframe containing over-loaded LV lines, their maximum relative over-loading (maximum calculated current over allowed current) and the corresponding time step. Index of the dataframe are the names of the over-loaded lines. Columns are 'max_rel_overload' containing the maximum relative over-loading as float, 'time_index' containing the corresponding time step the over-loading occurred in as [pandas.Timestamp](#), and 'voltage_level' specifying the voltage level the line is in (either 'mv' or 'lv').

Return type

[pandas.DataFrame](#)

Notes

Line over-load is determined based on allowed load factors for feed-in and load cases that are defined in the config file 'config_grid_expansion' in section 'grid_expansion_load_factors'.

`edisgo.flex_opt.check_tech_constraints.lines_allowed_load(edisgo_obj, voltage_level)`

Get allowed maximum current per line per time step

Parameters

- **edisgo_obj** (*EDisGo*) –
- **voltage_level** (*str*) – Grid level, allowed line load is returned for. Possible options are "mv" or "lv".

Returns

Dataframe containing the maximum allowed current per line and time step in kA. Index of the dataframe are all time steps power flow analysis was conducted for of type [pandas.Timestamp](#). Columns are line names of all lines in the specified voltage level.

Return type

[pandas.DataFrame](#)

`edisgo.flex_opt.check_tech_constraints.lines_relative_load(edisgo_obj, lines_allowed_load)`

Calculates relative line load based on specified allowed line load.

Parameters

- **edisgo_obj** (*EDisGo*) –
- **lines_allowed_load** (*pandas.DataFrame*) – Dataframe containing the maximum allowed current per line and time step in kA. Index of the dataframe are time steps of type *pandas.Timestamp* and columns are line names.

Returns

Dataframe containing the relative line load per line and time step. Index and columns of the dataframe are the same as those of parameter *lines_allowed_load*.

Return type

pandas.DataFrame

`edisgo.flex_opt.check_tech_constraints.hv_mv_station_load(edisgo_obj)`

Checks for over-loading of HV/MV station.

Parameters

edisgo_obj (*EDisGo*) –

Returns

Dataframe containing over-loaded HV/MV station, their apparent power at maximal over-loading and the corresponding time step. Index of the dataframe is the representative of the MVGrid. Columns are 's_missing' containing the missing apparent power at maximal over-loading in MVA as float and 'time_index' containing the corresponding time step the over-loading occurred in as *pandas.Timestamp*.

Return type

pandas.DataFrame

Notes

Over-load is determined based on allowed load factors for feed-in and load cases that are defined in the config file 'config_grid_expansion' in section 'grid_expansion_load_factors'.

`edisgo.flex_opt.check_tech_constraints.mv_lv_station_load(edisgo_obj)`

Checks for over-loading of MV/LV stations.

Parameters

edisgo_obj (*EDisGo*) –

Returns

Dataframe containing over-loaded MV/LV stations, their missing apparent power at maximal over-loading and the corresponding time step. Index of the dataframe are the representatives of the grids with over-loaded stations. Columns are 's_missing' containing the missing apparent power at maximal over-loading in MVA as float and 'time_index' containing the corresponding time step the over-loading occurred in as *pandas.Timestamp*.

Return type

pandas.DataFrame

Notes

Over-load is determined based on allowed load factors for feed-in and load cases that are defined in the config file 'config_grid_expansion' in section 'grid_expansion_load_factors'.

`edisgo.flex_opt.check_tech_constraints.mv_voltage_deviation(edisgo_obj, voltage_levels='mv_lv')`

Checks for voltage stability issues in MV network.

Returns buses with voltage issues and their maximum voltage deviation.

Parameters

- **edisgo_obj** (*EDisGo*) –
- **voltage_levels** (*str*) – Specifies which allowed voltage deviations to use. Possible options are:
 - 'mv_lv' This is the default. The allowed voltage deviations for buses in the MV is the same as for buses in the LV. Further, load and feed-in case are not distinguished.
 - 'mv' Use this to handle allowed voltage limits in the MV and LV topology differently. In that case, load and feed-in case are differentiated.

Returns

Dictionary with representative of *MVGrid* as key and a *pandas.DataFrame* with voltage deviations from allowed lower or upper voltage limits, sorted descending from highest to lowest voltage deviation, as value. Index of the dataframe are all buses with voltage issues. Columns are 'v_diff_max' containing the maximum voltage deviation as float and 'time_index' containing the corresponding time step the voltage issue occurred in as *pandas.Timestamp*.

Return type

dict

Notes

Voltage issues are determined based on allowed voltage deviations defined in the config file 'config_grid_expansion' in section 'grid_expansion_allowed_voltage_deviations'.

`edisgo.flex_opt.check_tech_constraints.lv_voltage_deviation(edisgo_obj, mode=None, voltage_levels='mv_lv')`

Checks for voltage stability issues in LV networks.

Returns buses with voltage issues and their maximum voltage deviation.

Parameters

- **edisgo_obj** (*EDisGo*) –
- **mode** (*None or str*) – If *None* voltage at all buses in LV networks is checked. If mode is set to 'stations' only voltage at bus bar is checked. Default: *None*.
- **voltage_levels** (*str*) – Specifies which allowed voltage deviations to use. Possible options are:
 - 'mv_lv' This is the default. The allowed voltage deviations for buses in the LV is the same as for buses in the MV. Further, load and feed-in case are not distinguished.
 - 'lv' Use this to handle allowed voltage limits in the MV and LV topology differently. In that case, load and feed-in case are differentiated.

Returns

Dictionary with representative of *LVGrid* as key and a *pandas.DataFrame* with voltage deviations from allowed lower or upper voltage limits, sorted descending from highest to lowest

voltage deviation, as value. Index of the dataframe are all buses with voltage issues. Columns are 'v_diff_max' containing the maximum voltage deviation as float and 'time_index' containing the corresponding time step the voltage issue occurred in as `pandas.Timestamp`.

Return type

dict

Notes

Voltage issues are determined based on allowed voltage deviations defined in the config file 'config_grid_expansion' in section 'grid_expansion_allowed_voltage_deviations'.

`edisgo.flex_opt.check_tech_constraints.voltage_diff(edisgo_obj, buses, v_dev_allowed_upper, v_dev_allowed_lower)`

Function to detect under- and overvoltage at buses.

The function returns both under- and overvoltage deviations in p.u. from the allowed lower and upper voltage limit, respectively, in separate dataframes. In case of both under- and overvoltage issues at one bus, only the highest voltage deviation is returned.

Parameters

- **edisgo_obj** (`EDisGo`) –
- **buses** (`list(str)`) – List of buses to check voltage deviation for.
- **v_dev_allowed_upper** (`pandas.Series`) – Series with time steps (of type `pandas.Timestamp`) power flow analysis was conducted for and the allowed upper limit of voltage deviation for each time step as float in p.u..
- **v_dev_allowed_lower** (`pandas.Series`) – Series with time steps (of type `pandas.Timestamp`) power flow analysis was conducted for and the allowed lower limit of voltage deviation for each time step as float in p.u..

Returns

- `pandas.DataFrame` – Dataframe with deviations from allowed lower voltage level. Columns of the dataframe are all time steps power flow analysis was conducted for of type `pandas.Timestamp`; in the index are all buses for which undervoltage was detected. In case of a higher over- than undervoltage deviation for a bus, the bus does not appear in this dataframe, but in the dataframe with overvoltage deviations.
- `pandas.DataFrame` – Dataframe with deviations from allowed upper voltage level. Columns of the dataframe are all time steps power flow analysis was conducted for of type `pandas.Timestamp`; in the index are all buses for which overvoltage was detected. In case of a higher under- than overvoltage deviation for a bus, the bus does not appear in this dataframe, but in the dataframe with undervoltage deviations.

`edisgo.flex_opt.check_tech_constraints.check_ten_percent_voltage_deviation(edisgo_obj)`

Checks if 10% criteria is exceeded.

Through the 10% criteria it is ensured that voltage is kept between 0.9 and 1.1 p.u.. In case of higher or lower voltages a `ValueError` is raised.

Parameters

edisgo_obj (`EDisGo`) –

edisgo.flex_opt.costs module

`edisgo.flex_opt.costs.grid_expansion_costs(edisgo_obj, without_generator_import=False)`

Calculates topology expansion costs for each reinforced transformer and line in kEUR.

`edisgo.flex_opt.costs.edisgo_obj`

Type

EDisGo

`edisgo.flex_opt.costs.without_generator_import`

If True excludes lines that were added in the generator import to connect new generators to the topology from calculation of topology expansion costs. Default: False.

Type

bool

Returns

DataFrame containing type and costs plus in the case of lines the line length and number of parallel lines of each reinforced transformer and line. Index of the DataFrame is the name of either line or transformer. Columns are the following:

type

[str] Transformer size or cable name

total_costs

[float] Costs of equipment in kEUR. For lines the line length and number of parallel lines is already included in the total costs.

quantity

[int] For transformers quantity is always one, for lines it specifies the number of parallel lines.

line_length

[float] Length of line or in case of parallel lines all lines in km.

voltage_level

[str { 'lv' | 'mv' | 'mv/lv' }] Specifies voltage level the equipment is in.

mv_feeder

[Line] First line segment of half-ring used to identify in which feeder the network expansion was conducted in.

Return type

pandas.DataFrame<DataFrame>

Notes

Total network expansion costs can be obtained through `self.grid_expansion_costs.total_costs.sum()`.

`edisgo.flex_opt.costs.line_expansion_costs(edisgo_obj, lines_names)`

Returns costs for earthworks and per added cable as well as voltage level for chosen lines in `edisgo_obj`.

Parameters

- **edisgo_obj** (*EDisGo*) – eDisGo object of which lines of `lines_df` are part
- **lines_names** (*list of str*) – List of names of evaluated lines

Returns

costs – Dataframe with names of lines as index and entries for 'costs_earthworks', 'costs_cable', 'voltage_level' for each line

Return type`pandas.DataFrame`**edisgo.flex_opt.exceptions module****exception** `edisgo.flex_opt.exceptions.Error`Bases: `Exception`

Base class for exceptions in this module.

exception `edisgo.flex_opt.exceptions.MaximumIterationError(message)`Bases: `Error`

Exception raised when maximum number of iterations in network reinforcement is exceeded.

message

Explanation of the error

Type`str`**exception** `edisgo.flex_opt.exceptions.ImpossibleVoltageReduction(message)`Bases: `Error`

Exception raised when voltage issue cannot be solved.

message

Explanation of the error

Type`str`**edisgo.flex_opt.heat_pump_operation module**`edisgo.flex_opt.heat_pump_operation.operating_strategy(edisgo_obj, strategy='uncontrolled',
heat_pump_names=None)`

Applies operating strategy to set electrical load time series of heat pumps.

See [apply_heat_pump_operating_strategy](#) for more information.**Parameters**

- **edisgo_obj** (`EDisGo`) –
- **strategy** (`str`) – Defines the operating strategy to apply. See `strategy` parameter in [apply_heat_pump_operating_strategy](#) for more information. Default: ‘uncontrolled’.
- **heat_pump_names** (`list(str)` or `None`) – Defines for which heat pumps to apply operating strategy. See `heat_pump_names` parameter in [apply_heat_pump_operating_strategy](#) for more information. Default: `None`.

edisgo.flex_opt.q_control module

`edisgo.flex_opt.q_control.get_q_sign_generator(reactive_power_mode)`

Get the sign of reactive power in generator sign convention.

In the generator sign convention the reactive power is negative in inductive operation (*reactive_power_mode* is 'inductive') and positive in capacitive operation (*reactive_power_mode* is 'capacitive').

Parameters

reactive_power_mode (*str*) – Possible options are 'inductive' and 'capacitive'.

Returns

Sign of reactive power in generator sign convention.

Return type

int

`edisgo.flex_opt.q_control.get_q_sign_load(reactive_power_mode)`

Get the sign of reactive power in load sign convention.

In the load sign convention the reactive power is positive in inductive operation (*reactive_power_mode* is 'inductive') and negative in capacitive operation (*reactive_power_mode* is 'capacitive').

Parameters

reactive_power_mode (*str*) – Possible options are 'inductive' and 'capacitive'.

Returns

Sign of reactive power in load sign convention.

Return type

int

`edisgo.flex_opt.q_control.fixed_cosphi(active_power, q_sign, power_factor)`

Calculates reactive power for a fixed cosphi operation.

Parameters

- **active_power** (*pandas.DataFrame*) – Dataframe with active power time series. Columns of the dataframe are names of the components and index of the dataframe are the time steps reactive power is calculated for.
- **q_sign** (*pandas.Series* or *int*) – *q_sign* defines whether the reactive power is positive or negative and must either be -1 or +1. In case *q_sign* is given as a series, the index must contain the same component names as given in columns of parameter *active_power*.
- **power_factor** (*pandas.Series* or *float*) – Ratio of real to apparent power. In case *power_factor* is given as a series, the index must contain the same component names as given in columns of parameter *active_power*.

Returns

Dataframe with the same format as the *active_power* dataframe, containing the reactive power.

Return type

pandas.DataFrame

edisgo.flex_opt.reinforce_grid module

`edisgo.flex_opt.reinforce_grid.reinforce_grid(edisgo, timesteps_pfa=None, copy_grid=False, max_while_iterations=20, combined_analysis=False, mode=None, without_generator_import=False)`

Evaluates network reinforcement needs and performs measures.

This function is the parent function for all network reinforcements.

Parameters

- **edisgo** (*EDisGo*) – The eDisGo API object

- **timesteps_pfa** (str or `pandas.DatetimeIndex` or `pandas.Timestamp`) – `timesteps_pfa` specifies for which time steps power flow analysis is conducted and therefore which time steps to consider when checking for over-loading and over-voltage issues. It defaults to `None` in which case all timesteps in `timeseries.timeindex` (see `TimeSeries`) are used. Possible options are:
 - `None` Time steps in `timeseries.timeindex` (see `TimeSeries`) are used.
 - `'snapshot_analysis'` Reinforcement is conducted for two worst-case snapshots. See `edisgo.tools.tools.select_worstcase_snapshots()` for further explanation on how worst-case snapshots are chosen. Note: If you have large time series choosing this option will save calculation time since power flow analysis is only conducted for two time steps. If your time series already represents the worst-case keep the default value of `None` because finding the worst-case snapshots takes some time.
 - `pandas.DatetimeIndex` or `pandas.Timestamp` Use this option to explicitly choose which time steps to consider.
- **copy_grid** (*bool*) – If `True` reinforcement is conducted on a copied grid and discarded. Default: `False`.
- **max_while_iterations** (*int*) – Maximum number of times each while loop is conducted.
- **combined_analysis** (*bool*) – If `True` allowed voltage deviations for combined analysis of MV and LV topology are used. If `False` different allowed voltage deviations for MV and LV are used. See also config section `grid_expansion_allowed_voltage_deviations`. If `mode` is set to `'mv'` `combined_analysis` should be `False`. Default: `False`.
- **mode** (*str*) – Determines network levels reinforcement is conducted for. Specify
 - `None` to reinforce MV and LV network levels. `None` is the default.
 - `'mv'` to reinforce MV network level only, neglecting MV/LV stations, and LV network topology. LV load and generation is aggregated per LV network and directly connected to the primary side of the respective MV/LV station.
 - `'mvlv'` to reinforce MV network level only, including MV/LV stations, and neglecting LV network topology. LV load and generation is aggregated per LV network and directly connected to the secondary side of the respective MV/LV station.
 - `'lv'` to reinforce LV networks including MV/LV stations.
- **without_generator_import** (*bool*) – If `True` excludes lines that were added in the generator import to connect new generators to the topology from calculation of topology expansion costs. Default: `False`.

Returns

Returns the Results object holding network expansion costs, equipment changes, etc.

Return type

Results

Notes

See *Features in detail* for more information on how network reinforcement is conducted.

edisgo.flex_opt.reinforce_measures module

`edisgo.flex_opt.reinforce_measures.reinforce_mv_lv_station_overloading(edisgo_obj,
critical_stations)`

Reinforce MV/LV substations due to overloading issues.

In a first step a parallel transformer of the same kind is installed. If this is not sufficient as many standard transformers as needed are installed.

Parameters

- **edisgo_obj** (*EDisGo*) –
- **critical_stations** (*pandas.DataFrame*) – Dataframe containing over-loaded MV/LV stations, their missing apparent power at maximal over-loading and the corresponding time step. Index of the dataframe are the representatives of the grids with over-loaded stations. Columns are 's_missing' containing the missing apparent power at maximal over-loading in MVA as float and 'time_index' containing the corresponding time step the over-loading occurred in as *pandas.Timestamp*.

Returns

Dictionary with added and removed transformers in the form:

```
{'added': {'Grid_1': ['transformer_reinforced_1',  
                    ...,  
                    'transformer_reinforced_x'],  
          'Grid_10': ['transformer_reinforced_10']},  
 'removed': {'Grid_1': ['transformer_1']}}}
```

Return type

dict

`edisgo.flex_opt.reinforce_measures.reinforce_hv_mv_station_overloading(edisgo_obj,
critical_stations)`

Reinforce HV/MV station due to overloading issues.

In a first step a parallel transformer of the same kind is installed. If this is not sufficient as many standard transformers as needed are installed.

Parameters

- **edisgo_obj** (*EDisGo*) –
- **critical_stations** (*pandas;pandas.DataFrame<DataFrame>*) – Dataframe containing over-loaded HV/MV stations, their missing apparent power at maximal over-loading and the corresponding time step. Index of the dataframe are the representatives of the grids with over-loaded stations. Columns are 's_missing' containing the missing apparent power at maximal over-loading in MVA as float and 'time_index' containing the corresponding time step the over-loading occurred in as *pandas.Timestamp*.

Returns

Dictionary with added and removed transformers in the form:


```
{'added': {'Grid_1': ['transformer_reinforced_1',
                    ...,
                    'transformer_reinforced_x'],
          'Grid_10': ['transformer_reinforced_10']},
      'removed': {'Grid_1': ['transformer_1']}}
}
```

Return type
dict

`edisgo.flex_opt.reinforce_measures.reinforce_mv_lv_station_voltage_issues(edisgo_obj, critical_stations)`

Reinforce MV/LV substations due to voltage issues.

A parallel standard transformer is installed.

Parameters

- **edisgo_obj** (*EDisGo*) –
- **critical_stations** (dict) – Dictionary with representative of *LVGrid* as key and a *pandas.DataFrame* with station's voltage deviation from allowed lower or upper voltage limit as value. Index of the dataframe is the station with voltage issues. Columns are 'v_diff_max' containing the maximum voltage deviation as float and 'time_index' containing the corresponding time step the voltage issue occurred in as *pandas.Timestamp*.

Returns

Dictionary with added transformers in the form:

```
{'added': {'Grid_1': ['transformer_reinforced_1',
                    ...,
                    'transformer_reinforced_x'],
          'Grid_10': ['transformer_reinforced_10']},
}
```

Return type
dict

`edisgo.flex_opt.reinforce_measures.reinforce_lines_voltage_issues(edisgo_obj, grid, crit_nodes)`

Reinforce lines in MV and LV topology due to voltage issues.

Parameters

- **edisgo_obj** (*EDisGo*) –
- **grid** (*MVGrid* or *LVGrid*) –
- **crit_nodes** (*pandas.DataFrame*) – Dataframe with all nodes with voltage issues in the grid and their maximal deviations from allowed lower or upper voltage limits sorted descending from highest to lowest voltage deviation (it is not distinguished between over- or undervoltage). Columns of the dataframe are 'v_diff_max' containing the maximum absolute voltage deviation as float and 'time_index' containing the corresponding time step the voltage issue occurred in as *pandas.Timestamp*. Index of the dataframe are the names of all buses with voltage issues.

Returns

Dictionary with name of lines as keys and the corresponding number of lines added as values.

Return type
dict

Notes

Reinforce measures:

1. Disconnect line at 2/3 of the length between station and critical node farthest away from the station and install new standard line
2. Install parallel standard line

In LV grids only lines outside buildings are reinforced; loads and generators in buildings cannot be directly connected to the MV/LV station.

In MV grids lines can only be disconnected at LV stations because they have switch disconnectors needed to operate the lines as half rings (loads in MV would be suitable as well because they have a switch bay (Schaltfeld) but loads in dingo are only connected to MV busbar). If there is no suitable LV station the generator is directly connected to the MV busbar. There is no need for a switch disconnector in that case because generators don't need to be n-1 safe.

`edisgo.flex_opt.reinforce_measures.reinforce_lines_overloading(edisgo_obj, crit_lines)`

Reinforce lines in MV and LV topology due to overloading.

Parameters

- **edisgo_obj** (*EDisGo*) –
- **crit_lines** (*pandas.DataFrame*) – Dataframe containing over-loaded lines, their maximum relative over-loading (maximum calculated current over allowed current) and the corresponding time step. Index of the dataframe are the names of the over-loaded lines. Columns are 'max_rel_overload' containing the maximum relative over-loading as float, 'time_index' containing the corresponding time step the over-loading occurred in as *pandas.Timestamp*, and 'voltage_level' specifying the voltage level the line is in (either 'mv' or 'lv').

Returns

Dictionary with name of lines as keys and the corresponding number of lines added as values.

Return type

dict

Notes

Reinforce measures:

1. Install parallel line of the same type as the existing line (Only if line is a cable, not an overhead line. Otherwise a standard equipment cable is installed right away.)
2. Remove old line and install as many parallel standard lines as needed.

1.8.4 edisgo.io package

edisgo.io.ding0_import module

`edisgo.io.ding0_import.import_ding0_grid(path, edisgo_obj)`

Import an eDisGo network topology from *Ding0* data.

This import method is specifically designed to load network topology data in the format as *Ding0* provides it via csv files.

Parameters

- **path** (*str*) – Path to ding0 network csv files.
- **edisgo_obj** (*EDisGo*) – The eDisGo data container object.

edisgo.io.electromobility_import module

`edisgo.io.electromobility_import.import_electromobility(edisgo_obj, simbev_directory, tracbev_directory, **kwargs)`

Import electromobility data from [SimBEV](#) and [TracBEV](#).

Parameters

- **edisgo_obj** (*EDisGo*) –
- **simbev_directory** (*str* or *pathlib.PurePath*) – SimBEV directory holding SimBEV data.
- **tracbev_directory** (*str* or *pathlib.PurePath*) – TracBEV directory holding TracBEV data.
- **kwargs** – Kwargs may contain any further attributes you want to specify.

gc_to_car_rate_home

[float] Specifies the minimum rate between potential charging parks points for the use case “home” and the total number of cars. Default 0.5 .

gc_to_car_rate_work

[float] Specifies the minimum rate between potential charging parks points for the use case “work” and the total number of cars. Default 0.25 .

gc_to_car_rate_public

[float] Specifies the minimum rate between potential charging parks points for the use case “public” and the total number of cars. Default 0.1 .

gc_to_car_rate_hpc

[float] Specifies the minimum rate between potential charging parks points for the use case “hpc” and the total number of cars. Default 0.005 .

mode_parking_times

[str] If the mode_parking_times is set to “frugal” only parking times with any charging demand are imported. Default “frugal”.

charging_processes_dir

[str] Charging processes sub-directory. Default None.

simbev_config_file

[str] Name of the simbev config file. Default “metadata_simbev_run.json”.

`edisgo.io.electromobility_import.read_csvs_charging_processes(csv_path, mode='frugal', csv_dir=None)`

Reads all CSVs in a given path and returns a DataFrame with all [SimBEV](#) charging processes.

Parameters

- **csv_path** (*str*) – Main path holding SimBEV output data
- **mode** (*str*) – Returns all information if None. Returns only rows with charging demand greater than 0 if “frugal”. Default: “frugal”.
- **csv_dir** (*str*) – Optional sub-directory holding charging processes CSVs under path. Default: None.

Returns

DataFrame with AGS, car ID, trip destination, charging use case (private or public), netto charging capacity, charging demand, charge start, charge end, potential charging park ID and charging point ID.

Return type

[pandas.DataFrame](#)

```
edisgo.io.electromobility_import.read_simbev_config_df(path, edisgo_obj, sim-  
                                                    bev_config_file='metadata_simbev_run.json')
```

Get [SimBEV](#) config data.

Parameters

- **path** ([str](#)) – Main path holding SimBEV output data.
- **edisgo_obj** ([EDisGo](#)) –
- **simbev_config_file** ([str](#)) – SimBEV config file name. Default: “meta-data_simbev_run.json”.

Returns

DataFrame with used random seed, used threads, stepsize in minutes, year, scenarrette, simulated days, maximum number of cars per AGS, completed standing times and time series per AGS and used ramp up data CSV.

Return type

[pandas.DataFrame](#)

```
edisgo.io.electromobility_import.read_gpkg_potential_charging_parks(path, edisgo_obj,  
                                                                    **kwargs)
```

Get GeoDataFrame with all [TracBEV](#) potential charging parks.

Parameters

- **path** ([str](#)) – Main path holding SimBEV output data
- **edisgo_obj** ([EDisGo](#)) –

Returns

GeoDataFrame with AGS, charging use case (home, work, public or hpc), user centric weight and geometry.

Return type

[geopandas.geodataframe](#)

```
edisgo.io.electromobility_import.distribute_charging_demand(edisgo_obj, **kwargs)
```

Distribute charging demand from SimBEV onto potential charging parks from TracBEV.

Parameters

- **edisgo_obj** ([EDisGo](#)) –
- **kwargs** – Kwargs may contain any further attributes you want to specify.

mode

[str] Distribution mode. If the mode is set to “user_friendly” only the simbev weights are used for the distribution. If the mode is “grid_friendly” also grid conditions are respected. Default “user_friendly”.

generators_weight_factor

[float] Weighting factor of the generators weight within an LV grid in comparison to the loads weight. Default 0.5.

distance_weight

[float] Weighting factor for the distance between a potential charging park and its nearest substation in comparison to the combination of the generators and load factors of the LV grids. Default 1 / 3.

user_friendly_weight

[float] Weighting factor of the user friendly weight in comparison to the grid friendly weight. Default 0.5.

```
edisgo.io.electromobility_import.get_weights_df(edisgo_obj, potential_charging_park_indices,  
                                                **kwargs)
```

Get weights per potential charging point for a given set of grid connection indices.

Parameters

- **edisgo_obj** (*EDisGo*) –
- **potential_charging_park_indices** (*list*) – List of potential charging parks indices
- **mode** (*str*) – Only use user friendly weights (“user_friendly”) or combine with grid friendly weights (“grid_friendly”). Default: “user_friendly”.
- **user_friendly_weight** (*float*) – Weight of user friendly weight if mode “grid_friendly”. Default: 0.5.
- **distance_weight** (*float*) – Grid friendly weight is a combination of the installed capacity of generators and loads within a LV grid and the distance towards the nearest substation. This parameter sets the weight for the distance parameter. Default: 1/3.

Returns

DataFrame with numeric weights

Return type

pandas.DataFrame

`edisgo.io.electromobility_import.normalize(weights_df)`

Normalize a given DataFrame so that its sum equals 1 and return a flattened Array.

Parameters

weights_df (*pandas.DataFrame*) – DataFrame with single numeric column

Returns

Array with normalized weights

Return type

Numpy 1-D array

`edisgo.io.electromobility_import.combine_weights(potential_charging_park_indices,
designated_charging_point_capacity_df,
weights_df)`

Add designated charging capacity weights into the initial weights and normalize weights

Parameters

- **potential_charging_park_indices** (*list*) – List of potential charging parks indices
- **designated_charging_point_capacity_df** – *pandas.DataFrame* DataFrame with designated charging point capacity per potential charging park
- **weights_df** (*pandas.DataFrame*) – DataFrame with initial user or combined weights

Returns

Array with normalized weights

Return type

Numpy 1-D array

`edisgo.io.electromobility_import.weighted_random_choice(edisgo_obj,
potential_charging_park_indices, car_id,
destination, charging_point_id,
normalized_weights, rng=None)`

Weighted random choice of a potential charging park. Setting the chosen values into `charging_processes_df`

Parameters

- **edisgo_obj** (*EDisGo*) –

- **potential_charging_park_indices** (*list*) – List of potential charging parks indices
- **car_id** (*int*) – Car ID
- **destination** (*str*) – Trip destination
- **charging_point_id** (*int*) – Charging Point ID
- **normalized_weights** (*Numpy 1-D array*) – Array with normalized weights
- **rng** (*Numpy random generator*) – If None a random generator with seed=charging_point_id is initialized

Returns

Chosen Charging Park ID

Return type

int

`edisgo.io.electromobility_import.distribute_private_charging_demand(edisgo_obj)`

Distributes all private charging processes. Each car gets its own private charging point if a charging process takes place.

Parameters

edisgo_obj (*EDisGo*) –

`edisgo.io.electromobility_import.distribute_public_charging_demand(edisgo_obj, **kwargs)`

Distributes all public charging processes. For each process it is checked if a matching charging point exists to minimize the number of charging points.

Parameters

edisgo_obj (*EDisGo*) –

`edisgo.io.electromobility_import.determine_grid_connection_capacity(total_charging_point_capacity,
lower_limit=0.3,
upper_limit=1.0,
minimum_factor=0.45)`

`edisgo.io.electromobility_import.integrate_charging_parks(edisgo_obj)`

Integrates all designated charging parks into the grid.

The charging time series at each charging park are not set in this function.

Parameters

edisgo_obj (*EDisGo*) –

edisgo.io.generators_import module

`edisgo.io.generators_import.oedb(edisgo_object, generator_scenario, **kwargs)`

Gets generator park for specified scenario from oedb and integrates them into the grid.

The importer uses SQLAlchemy ORM objects. These are defined in `ego.io`.

For further information see also `import_generators`.

Parameters

- **edisgo_object** (*EDisGo*) –
- **generator_scenario** (*str*) – Scenario for which to retrieve generator data. Possible options are ‘nep2035’ and ‘ego100’.
- **remove_decommissioned** (*bool*) – If True, removes generators from network that are not included in the imported dataset (=decommissioned). Default: True.

- **update_existing** (*bool*) – If True, updates capacity of already existing generators to capacity specified in the imported dataset. Default: True.
- **p_target** (*dict or None*) – Per default, no target capacity is specified and generators are expanded as specified in the respective scenario. However, you may want to use one of the scenarios but have slightly more or less generation capacity than given in the respective scenario. In that case you can specify the desired target capacity per technology type using this input parameter. The target capacity dictionary must have technology types (e.g. ‘wind’ or ‘solar’) as keys and corresponding target capacities in MW as values. If a target capacity is given that is smaller than the total capacity of all generators of that type in the future scenario, only some of the generators in the future scenario generator park are installed, until the target capacity is reached. If the given target capacity is greater than that of all generators of that type in the future scenario, then each generator capacity is scaled up to reach the target capacity. Be careful to not have much greater target capacities as this will lead to unplausible generation capacities being connected to the different voltage levels. Also be aware that only technologies specified in the dictionary are expanded. Other technologies are kept the same. Default: None.
- **allowed_number_of_comp_per_lv_bus** (*int*) – Specifies, how many generators are at most allowed to be placed at the same LV bus. Default: 2.

ediso.io.pypsa_io module

This module provides tools to convert eDisGo representation of the network topology to PyPSA data model. Call `to_pypsa()` to retrieve the PyPSA network container.

`ediso.io.pypsa_io.to_pypsa(ediso_object, mode=None, timesteps=None, **kwargs)`

Convert grid to `PyPSA.Network` representation.

You can choose between translation of the MV and all underlying LV grids (`mode=None` (default)), the MV network only (`mode='mv'` or `mode='mvlv'`) or a single LV network (`mode='lv'`).

Parameters

- **ediso_object** (*EDisGo*) – EDisGo object containing grid topology and time series information.
- **mode** (*str*) – Determines network levels that are translated to `PyPSA.Network`. See `mode` parameter in `to_pypsa` for more information.
- **timesteps** (*pandas.DatetimeIndex or pandas.Timestamp*) – See `timesteps` parameter in `to_pypsa` for more information.

:param See other parameters in `to_pypsa` for more: :param information.:

Returns

`PyPSA.Network` representation.

Return type

`PyPSA.Network`

`ediso.io.pypsa_io.set_seed(ediso_obj, pypsa_network)`

Set initial guess for the Newton-Raphson algorithm.

In `PyPSA` an initial guess for the Newton-Raphson algorithm used in the power flow analysis can be provided to speed up calculations. For PQ buses, which besides the slack bus, is the only bus type in ediso, voltage magnitude and angle need to be guessed. If the power flow was already conducted for the required time steps and buses, the voltage magnitude and angle results from previously conducted power flows stored in `pfa_v_mag_pu_seed` and `pfa_v_ang_seed` are used as the initial guess. Always the latest power flow calculation is used and only results from power flow analyses including the MV level are considered, as analysing single LV grids is currently

not in the focus of edisgo and does not require as much speeding up, as analysing single LV grids is usually already quite quick. If for some buses or time steps no power flow results are available, default values are used. For the voltage magnitude the default value is 1 and for the voltage angle 0.

Parameters

- **edisgo_obj** ([EDisGo](#)) –
- **pypsa_network** ([pypsa.Network](#)) – Pypsa network in which seed is set.

`edisgo.io.pypsa_io.process_pfa_results(edisgo, pypsa, timesteps, dtype='float')`

Passing power flow results from PyPSA to [Results](#).

Parameters

- **edisgo** ([EDisGo](#)) –
- **pypsa** ([pypsa.Network](#)) – The PyPSA Network container
- **timesteps** ([pandas.DatetimeIndex](#) or [pandas.Timestamp](#)) – Time steps for which latest power flow analysis was conducted and for which to retrieve pypsa results.

Notes

P and Q are returned from the line ending/transformer side with highest apparent power S, exemplary written as

$$S_{max} = \max(\sqrt{P_0^2 + Q_0^2}, \sqrt{P_1^2 + Q_1^2}) \quad P = P_0 P_1(S_{max}) \quad Q = Q_0 Q_1(S_{max})$$

See also:

[Results](#), analysis

edisgo.io.timeseries_import module

`edisgo.io.timeseries_import.feedin_oedb(config_data, weather_cell_ids, timeindex)`

Import feed-in time series data for wind and solar power plants from the [OpenEnergy DataBase](#).

Parameters

- **config_data** ([Config](#)) – Configuration data from config files, relevant for information of which data base table to retrieve feed-in data from.
- **weather_cell_ids** ([list\(int\)](#)) – List of weather cell id's (integers) to obtain feed-in data for.
- **timeindex** ([pandas.DatetimeIndex](#)) – Feed-in data is currently only provided for weather year 2011. If timeindex contains a different year, the data is reindexed.

Returns

DataFrame with hourly time series for active power feed-in per generator type (wind or solar, in column level 0) and weather cell (in column level 1), normalized to a capacity of 1 MW.

Return type

[pandas.DataFrame](#)

`edisgo.io.timeseries_import.load_time_series_demandlib(config_data, timeindex)`

Get normalized sectoral electricity load time series using the [demandlib](#).

Resulting electricity load profiles hold time series of hourly conventional electricity demand for the sectors residential, retail, agricultural and industrial. Time series are normalized to a consumption of 1 MWh per year.

Parameters

- **config_data** (*Config*) – Configuration data from config files, relevant for industrial load profiles.
- **timeindex** (*pandas.DatetimeIndex*) – Timesteps for which to generate load time series.

Returns

DataFrame with conventional electricity load time series for sectors residential, retail, agricultural and industrial. Index is a *pandas.DatetimeIndex*. Columns hold the sector type.

Return type

pandas.DataFrame

`edisgo.io.timeseries_import.cop_oedb(config_data, weather_cell_ids=None, timeindex=None)`

Get COP (coefficient of performance) time series data from the *OpenEnergy DataBase*.

Parameters

- **config_data** (*Config*) – Configuration data from config files, relevant for information of which data base table to retrieve COP data from.
- **weather_cell_ids** (*list(int)*) – List of weather cell id's (integers) to obtain COP data for.
- **timeindex** (*pandas.DatetimeIndex*) – COP data is only provided for the weather year 2011. If timeindex contains a different year, the data is reindexed.

Returns

DataFrame with hourly COP time series in p.u. per weather cell.

Return type

pandas.DataFrame

`edisgo.io.timeseries_import.heat_demand_oedb(config_data, building_ids, timeindex=None)`

Get heat demand time series data from the *OpenEnergy DataBase*.

Parameters

- **config_data** (*Config*) – Configuration data from config files, relevant for information of which data base table to retrieve data from.
- **building_ids** (*list(int)*) – List of building IDs to obtain heat demand for.
- **timeindex** (*pandas.DatetimeIndex*) – Heat demand data is only provided for the weather year 2011. If timeindex contains a different year, the data is reindexed.

Returns

DataFrame with hourly heat demand time series in MW per building ID.

Return type

pandas.DataFrame

1.8.5 edisgo.opf package

edisgo.opf.run_mp_opf module

`edisgo.opf.run_mp_opf.convert(o)`

Helper function for json dump, as int64 cannot be dumped.

`edisgo.opf.run_mp_opf.bus_names_to_ints(pypsa_network, bus_names)`

This remaps a list of eDisGo bus names from Strings to Integers.

Integer indices are needed for the optimization. The result uses one-based indexing, as it gets passed on to Julia directly.

Parameters

- **pypsa_network** –

- **bus_names** (*list*(*str*)) – List of bus names to be remapped to indices.

Returns

List of one-based bus indices.

Return type

list(*int*)

`edisgo.opf.run_mp_opf.run_mp_opf(edisgo_network, timesteps=None, storage_series=[], **kwargs)`

Parameters

- **edisgo_network** –
- **timesteps** (*pandas.DatetimeIndex*<*DatetimeIndex*> or *pandas.Timestamp*<*Timestamp*>) –
- ****kwargs** – “scenario”: “nep” # objective function “objective”: “nep”, # chosen relaxation “relaxation”: “none”, # upper bound on network expansion “max_exp”: 10, # number of time steps considered in optimization “time_horizon”: 2, # length of time step in hours “time_elapsed”: 1.0, # storage units are considered “storage_units”: False, # positioning of storage units, if empty list, all buses are potential positions # of storage units and # capacity is optimized “storage_buses”: [], # total storage capacity in the network “total_storage_capacity”: 0.0, # Requirements for curtailment in every time step is considered “storage_series”: [], # Time series for storage operation required by upper grid layer “curtailment_requirement”: False, # List of total curtailment for each time step, len(list)== “time_horizon” “curtailment_requirement_series”: [], # An overall allowance of curtailment is considered “curtailment_allowance”: False, # Maximal allowed curtailment over entire time horizon, # DEFAULT: “3percent”=> 3% of total RES generation in time horizon may be # curtailed, else: Float “curtailment_total”: “3percent”, “results_path”: “opf_solutions” # path to where OPF results are stored

edisgo.opf.timeseries_reduction module

`edisgo.opf.timeseries_reduction.get_steps_curtailment(edisgo_obj, percentage=0.5)`

Get the time steps with the most critical violations for curtailment optimization.

Parameters

- **edisgo_obj** (*EDisGo*) – The eDisGo API object
- **percentage** (*float*) – The percentage of most critical time steps to select

Returns

the reduced time index for modeling curtailment

Return type

pandas.DatetimeIndex

`edisgo.opf.timeseries_reduction.get_steps_storage(edisgo_obj, window=5)`

Get the most critical time steps from series for storage problems.

Parameters

- **edisgo_obj** (*EDisGo*) – The eDisGo API object
- **window** (*int*) – The additional hours to include before and after each critical time step.

Returns

the reduced time index for modeling storage

Return type

pandas.DatetimeIndex

`edisgo.opf.timeseries_reduction.get_linked_steps(cluster_params, num_steps=24, keep_steps=[])`

Use provided data to identify representative time steps and create mapping Dict that can be passed to optimization

Parameters

- **cluster_params** (`pandas.DataFrame`) – Time series containing the parameters to be considered for distance between points.
- **num_steps** (`int`) – The number of representative time steps to be selected.
- **keep_steps** (*Iterable of the same type as cluster_params.index*) – Time steps to retain with full resolution, regardless of clustering result.

Returns

Dictionary where each represented time step is a key and its representative time step is a value.

Return type

`dict`

edisgo.opf.results package

`edisgo.opf.results.opf_expand_network.expand_network(edisgo, tolerance=1e-06)`

Apply network expansion factors that were obtained by optimization to eDisGo MVGrid

Parameters

- **edisgo** (*EDisGo*) –
- **tolerance** (`float`) – The acceptable margin with which an expansion factor can deviate from the nearest Integer before it gets rounded up

`edisgo.opf.results.opf_expand_network.grid_expansion_costs(opf_results, tolerance=1e-06)`

Calculates grid expansion costs from OPF.

As grid expansion is conducted continuously number of expanded lines is determined by simply rounding up (including some tolerance).

Parameters

- **opf_results** (*OPFResults class*) –
- **tolerance** (`float`) –

Returns

Grid expansion costs determined by OPF

Return type

`float`

`edisgo.opf.results.opf_expand_network.integrate_storage_units(edisgo, min_storage_size=0.3, timeseries=True, as_load=False)`

Integrates storage units from OPF into edisgo grid topology.

Storage units that are too small to be connected to the MV grid or that are not used (time series contains only zeros) are discarded.

Parameters

- **edisgo** (*EDisGo object*) –
- **min_storage_size** (`float`) – Minimal storage size in MW needed to connect storage unit to MV grid. Smaller storage units are ignored.
- **timeseries** (`bool`) – If True time series is added to component.
- **as_load** (`bool`) – If True, storage is added as load to the edisgo topology. This is temporarily needed as the OPF cannot handle storage units from edisgo yet. This way, storage units with fixed position and time series can be considered in OPF.

Returns

First return value contains the names of the added storage units and the second return value the capacity of storage units that were too small to connect to the MV grid or not used.

Return type

`list(str)`, `float`

```
edisgo.opf.results.opf_expand_network.get_curtailment_per_node(edisgo, curtailment_ts=None,  
                                                             tolerance=0.001)
```

Gets curtailed power per node.

As LV generators are aggregated at the corresponding LV station curtailment is not determined per generator but per node.

This function also checks if curtailment requirements were met by OPF in case the curtailment requirement time series is provided.

Parameters

- **edisgo** (*EDisGo object*) –
- **curtailment_ts** (*pd.Series*) – Series with curtailment requirement per time step. Only needs to be provided if you want to check if requirement was met.
- **tolerance** (*float*) – Tolerance for checking if curtailment requirement and curtailed power are equal.

Returns

DataFrame with curtailed power in MW per node. Column names correspond to nodes and index to time steps calculated.

Return type

`pd.DataFrame`

```
edisgo.opf.results.opf_expand_network.get_load_curtailment_per_node(edisgo, tolerance=0.001)
```

Gets curtailed load per node.

Parameters

- **edisgo** (*EDisGo object*) –
- **tolerance** (*float*) – Tolerance for checking if curtailment requirement and curtailed power are equal.

Returns

DataFrame with curtailed power in MW per node. Column names correspond to nodes and index to time steps calculated.

Return type

`pd.DataFrame`

```
edisgo.opf.results.opf_expand_network.integrate_curtailment_as_load(edisgo,  
                                                                    curtailment_per_node)
```

Adds load curtailed power per node as load

This is done because curtailment results from OPF are not given per generator but per node (as LV generators are aggregated per LV grid).

Parameters

- **edisgo** –
- **curtailment_per_node** –

Returns

```
edisgo.opf.results.opf_result_class.read_from_json(edisgo_obj, path, mode='mv')
```

Read optimization results from json file.

This reads the optimization results directly from a JSON result file without carrying out the optimization process.

Parameters

- **edisgo_obj** (*EDisGo*) – An edisgo object with the same topology that the optimization was run on.
- **path** (*str*) – Path to the optimization result JSON file.
- **mode** (*str*) – Voltage level, currently only supports “mv”

```
class edisgo.opf.results.opf_result_class.LineVariables
```

Bases: `object`

```
class edisgo.opf.results.opf_result_class.BusVariables
```

Bases: `object`

```
class edisgo.opf.results.opf_result_class.GeneratorVariables
```

Bases: `object`

```
class edisgo.opf.results.opf_result_class.LoadVariables
```

Bases: `object`

```
class edisgo.opf.results.opf_result_class.StorageVariables
```

Bases: `object`

```
class edisgo.opf.results.opf_result_class.OPFResults
```

Bases: `object`

```
set_solution(solution_name, pypsa_net)
```

```
read_solution_file(solution_name)
```

```
dump_solution_file(solution_name=[])
```

```
set_solution_to_results(pypsa_net)
```

```
set_line_variables(pypsa_net)
```

```
set_bus_variables(pypsa_net)
```

```
set_gen_variables(pypsa_net)
```

```
set_load_variables(pypsa_net)
```

```
set_strg_variables(pypsa_net)
```

edisgo.opf.util package

```
edisgo.opf.util.plot_solutions.plot_line_expansion(edisgo_obj, timesteps)
```

```
edisgo.opf.util.scenario_settings.opf_settings()
```

1.8.6 edisgo.tools package

edisgo.tools.config module

This file is part of eDisGo, a python package for distribution network analysis and optimization.

It is developed in the project open_eGo: <https://openegoproject.wordpress.com>

eDisGo lives on github: <https://github.com/openego/edisgo/> The documentation is available on RTD: <http://edisgo.readthedocs.io>

Based on code by oemof developing group

This module provides a highlevel layer for reading and writing config files.

class `edisgo.tools.config.Config(**kwargs)`

Bases: `object`

Container for all configurations.

Parameters

- **config_path** (*None* or *str* or *:dict*) – Path to the config directory. Options are:
 - **'default'** (default)
If *config_path* is set to 'default', the provided default config files are used directly.
 - **str**
If *config_path* is a string, configs will be loaded from the directory specified by *config_path*. If the directory does not exist, it is created. If config files don't exist, the default config files are copied into the directory.
 - **dict**
A dictionary can be used to specify different paths to the different config files. The dictionary must have the following keys:
 - * 'config_db_tables'
 - * 'config_grid'
 - * 'config_grid_expansion'
 - * 'config_timeseries'Values of the dictionary are paths to the corresponding config file. In contrast to the other options, the directories and config files must exist and are not automatically created.
 - **None**
If *config_path* is None, configs are loaded from the edisgo default config directory (\$HOME\$/edisgo). If the directory does not exist, it is created. If config files don't exist, the default config files are copied into the directory.

Default: "default".

- **from_json** (*bool*) – Set to True to load config data from json file. In that case the json file is assumed to be located in path specified through *config_path*. Per default this is set to False in which case config data is loaded from cfg files. Default: False.
- **json_filename** (*str*) – Filename of the json file. If None, it is loaded from file with name "configs.json". Default: None.

- **from_zip_archive** (*bool*) – Set to True to load json config file from zip archive. Default: False.

Notes

The Config object can be used like a dictionary. See example on how to use it.

Examples

Create Config object from default config files

```
>>> from edisgo.tools.config import Config
>>> config = Config()
```

Get reactive power factor for generators in the MV network

```
>>> config['reactive_power_factor']['mv_gen']
```

from_cfg(*config_path=None*)

Load config files.

Parameters

config_path (*None or str or dict*) – See class definition for more information.

Returns

eDisGo configuration data from config files.

Return type

collections.OrderedDict

to_json(*directory, filename=None*)

Saves config data to json file.

Parameters

- **directory** (*str*) – Directory, the json file is saved to.
- **filename** (*str or None*) – Filename the json file is saved under. If None, it is saved under the filename “configs.json”. Default: None.

from_json(*directory, filename=None, from_zip_archive=False*)

Imports config data from json file as dictionary.

Parameters

- **directory** (*str*) – Directory, the json file is loaded from.
- **filename** (*str or None*) – Filename of the json file. If None, it is loaded from file with name “configs.json”. Default: None.
- **from_zip_archive** (*bool*) – Set to True if data is archived in a zip archive. Default: False.

Returns

Dictionary with config data loaded from json file.

Return type

dict

`edisgo.tools.config.load_config(filename, config_dir=None, copy_default_config=True)`

Loads the specified config file.

Parameters

- **filename** (*str*) – Config file name, e.g. ‘config_grid.cfg’.
- **config_dir** (*str*, *optional*) – Path to config file. If None uses default edisgo config directory specified in config file ‘config_system.cfg’ in section ‘user_dirs’ by subsections ‘root_dir’ and ‘config_dir’. Default: None.
- **copy_default_config** (*bool*) – If True copies a default config file into *config_dir* if the specified config file does not exist. Default: True.

`edisgo.tools.config.get(section, key)`

Returns the value of a given key of a given section of the main config file.

Parameters

- **section** (*str*) –
- **key** (*str*) –

Returns

The value which will be casted to float, int or boolean. If no cast is successful, the raw string is returned.

Return type

float or *int* or *bool* or *str*

`edisgo.tools.config.get_default_config_path()`

Returns the basic edisgo config path. If it does not yet exist it creates it and copies all default config files into it.

Returns

Path to default edisgo config directory specified in config file ‘config_system.cfg’ in section ‘user_dirs’ by subsections ‘root_dir’ and ‘config_dir’.

Return type

str

`edisgo.tools.config.make_directory(directory)`

Makes directory if it does not exist.

Parameters

directory (*str*) – Directory path

edisgo.tools.geo module

`edisgo.tools.geo.proj2equidistant(srid)`

Transforms to equidistant projection (epsg:3035).

Parameters

srid (*int*) – Spatial reference identifier of geometry to transform.

Return type

functools.partial()

`edisgo.tools.geo.proj2equidistant_reverse(srid)`

Transforms back from equidistant projection to given projection.

Parameters

srid (*int*) – Spatial reference identifier of geometry to transform.

Return type

functools.partial()

`edisgo.tools.geo.proj_by_srids(srid1, srid2)`

Transforms from specified projection to other specified projection.

Parameters

- **srid1** (*int*) – Spatial reference identifier of geometry to transform.
- **srid2** (*int*) – Spatial reference identifier of destination CRS.

Return type

`functools.partial()`

Notes

Projections often used are conformal projection (epsg:4326), equidistant projection (epsg:3035) and spherical mercator projection (epsg:3857).

`edisgo.tools.geo.calc_geo_lines_in_buffer(grid_topology, bus, grid, buffer_radius=2000, buffer_radius_inc=1000)`

Determines lines that are at least partly within buffer around given bus.

If there are no lines, the buffer specified in *buffer_radius* is successively extended by *buffer_radius_inc* until lines are found.

Parameters

- **grid_topology** (*Topology*) –
- **bus** (*pandas.Series*) – Data of origin bus the buffer is created around. Series has same rows as columns of *buses_df*.
- **grid** (*Grid*) – Grid whose lines are searched.
- **buffer_radius** (*float*, *optional*) – Radius in m used to find connection targets. Default: 2000.
- **buffer_radius_inc** (*float*, *optional*) – Radius in m which is incrementally added to *buffer_radius* as long as no target is found. Default: 1000.

Returns

List of lines in buffer (meaning close to the bus) sorted by the lines' representatives.

Return type

`list(str)`

`edisgo.tools.geo.calc_geo_dist_vincenty(grid_topology, bus_source, bus_target, branch_detour_factor=1.3)`

Calculates the geodesic distance between two buses in km.

The detour factor in *config_grid* is incorporated in the geodesic distance.

Parameters

- **grid_topology** (*Topology*) –
- **bus_source** (*str*) – Name of source bus as in index of *buses_df*.
- **bus_target** (*str*) – Name of target bus as in index of *buses_df*.
- **branch_detour_factor** (*float*) – Detour factor to consider that two buses can usually not be connected directly. Default: 1.3.

Returns

Distance in km.

Return type

`float`

`edisgo.tools.geo.find_nearest_bus(point, bus_target)`

Finds the nearest bus in *bus_target* to a given point.

Parameters

- **point** (`shapely.Point`) – Point to find nearest bus for.
- **bus_target** (`pandas.DataFrame`) – Dataframe with candidate buses and their positions given in 'x' and 'y' columns. The dataframe has the same format as *buses_df*.

Returns

Tuple that contains the name of the nearest bus and its distance.

Return type

`tuple(str, float)`

`edisgo.tools.geo.find_nearest_conn_objects(grid_topology, bus, lines, conn_diff_tolerance=0.0001)`

Searches all lines for the nearest possible connection object per line.

It picks out 1 object out of 3 possible objects: 2 line-adjacent buses and 1 potentially created branch tee on the line (using perpendicular projection). The resulting stack (list) is sorted ascending by distance from bus.

Parameters

- **grid_topology** (`Topology`) –
- **bus** (`pandas.Series`) – Data of bus to connect. Series has same rows as columns of *buses_df*.
- **lines** (`list(str)`) – List of line representatives from index of *lines_df*.
- **conn_diff_tolerance** (`float, optional`) – Threshold which is used to determine if 2 objects are at the same position. Default: 0.0001.

Returns

List of connection objects. Each object is represented by dict with representative, shapely object and distance to node.

Return type

`list(dict)`

edisgo.tools.geopandas_helper module

```
class edisgo.tools.geopandas_helper.GeoPandasGridContainer(crs, grid_id, grid, buses_gdf,  
                                                         generators_gdf, loads_gdf,  
                                                         storage_units_gdf, transformers_gdf,  
                                                         lines_gdf)
```

Bases: `object`

Grids geo data for all components with information about their geolocation.

Parameters

- **crs** (`str`) – Coordinate Reference System of the geometry objects.
- **id** (`str` or `int`) – Grid identifier
- **grid** (`Grid`) – Matching grid object
- **buses_gdf** (`geopandas.GeoDataFrame`) – GeoDataframe with all buses in the Grid. See *buses_df* for more information.
- **generators_gdf** (`geopandas.GeoDataFrame`) – GeoDataframe with all generators in the Grid. See *generators_df* for more information.
- **loads_gdf** (`geopandas.GeoDataFrame`) – GeoDataframe with all loads in the Grid. See *loads_df* for more information.

- **storage_units_gdf** (`geopandas.GeoDataFrame`) – GeoDataframe with all storage units in the Grid. See [storage_units_df](#) for more information.
- **transformers_gdf** (`geopandas.GeoDataFrame`) – GeoDataframe with all transformers in the Grid. See [transformers_df](#) for more information.
- **lines_gdf** (`geopandas.GeoDataFrame`) – GeoDataframe with all lines in the Grid. See [loads_df](#) for more information.

`edisgo.tools.geopandas_helper.to_geopandas(grid_obj)`

Translates all DataFrames with geolocations within a Grid class to GeoDataFrames.

Parameters

grid_obj (*Grid*) – Grid object to transform.

Returns

Data container with the grids geo data for all components with information about their geolocation.

Return type

GeoPandasGridContainer

edisgo.tools.logger module

`edisgo.tools.logger.setup_logger(file_name=None, log_dir=None, loggers=None, stream_output=<_io.TextIOWrapper name='<stdout>' mode='w' encoding='utf-8'>, debug_message=False, reset_loggers=False)`

Setup different loggers with individual logging levels and where to write output.

The following table from python ‘Logging Howto’ shows you when which logging level is used.

| Level | When it's used |
|----------|--|
| DEBUG | Detailed information, typically of interest only when diagnosing problems. |
| INFO | Confirmation that things are working as expected. |
| WARNING | An indication that something unexpected happened, or indicative of some problem in the near future (e.g. ‘disk space low’). The software is still working as expected. |
| ERROR | Due to a more serious problem, the software has not been able to perform some function. |
| CRITICAL | A serious error, indicating that the program itself may be unable to continue running. |

Parameters

- **file_name** (*str* or *None*) – Specifies file name of file logging information is written to. Possible options are:
 - **None (default)**
Saves log file with standard name `%Y_%m_%d-%H:%M:%S_edisgo.log`.
 - **str**
Saves log file with the specified file name.
- **log_dir** (*str* or *None*) – Specifies directory log file is saved to. Possible options are:
 - **None (default)**
Saves log file in current working directory.
 - **”default”**
Saves log file into directory configured in the configs.
 - **str**
Saves log file into the specified directory.

- **loggers** (*None* or *list(dict)*) –
 - **None**

Configuration as shown in the example below is used. Configures root logger with file and stream level warning and the edisgo logger with file and stream level debug.
 - **list(dict)**

List of dicts with the logger configuration. Each dictionary must contain the following keys and corresponding values:

 - * **'name'**

Specifies name of the logger as string, e.g. 'root' or 'edisgo'.
 - * **'file_level'**

Specifies file logging level. Possible options are:

 - **"debug"**

Logs logging messages with logging level logging.DEBUG and above.
 - **"info"**

Logs logging messages with logging level logging.INFO and above.
 - **"warning"**

Logs logging messages with logging level logging.WARNING and above.
 - **"error"**

Logs logging messages with logging level logging.ERROR and above.
 - **"critical"**

Logs logging messages with logging level logging.CRITICAL.
 - **None**

No logging messages are logged.
 - * **'stream_level'**

Specifies stream logging level. Possible options are the same as for *file_level*.
- **stream_output** (*stream*) – Default sys.stdout is used. sys.stderr is also possible.
- **debug_message** (*bool*) – If True the handlers of every configured logger is printed.
- **reset_loggers** (*bool*) – If True the handlers of all loggers are cleared before configuring the loggers.

Examples

```
>>> setup_logger(  
>>>     loggers=[  
>>>         {"name": "root", "file_level": "warning", "stream_level": "warning"},  
>>>         {"name": "edisgo", "file_level": "info", "stream_level": "info"}  
>>>     ]  
>>> )
```

edisgo.tools.networkx_helper module

`edisgo.tools.networkx_helper.translate_df_to_graph(buses_df, lines_df, transformers_df=None)`

Translate DataFrames to networkx Graph Object.

Parameters

- **buses_df** (`pandas.DataFrame`) – Dataframe with all buses to use as Graph nodes. For more information about the Dataframe see [buses_df](#).
- **lines_df** (`pandas.DataFrame`) – Dataframe with all lines to use as Graph branches. For more information about the Dataframe see [lines_df](#)
- **transformers_df** (`pandas.DataFrame`, optional) – Dataframe with all transformers to use as additional Graph nodes. For more information about the Dataframe see [transformers_df](#)

Returns

Graph representation of the grid as networkx Ordered Graph, where lines are represented by edges in the graph, and buses and transformers are represented by nodes.

Return type

`networkx.Graph`

edisgo.tools.plots module

`edisgo.tools.plots.histogram(data, **kwargs)`

Function to create histogram, e.g. for voltages or currents.

Parameters

- **data** (`pandas.DataFrame`) – Data to be plotted, e.g. voltage or current (`v_res` or `i_res` from `network.results.Results`). Index of the dataframe must be a `pandas.DatetimeIndex`.
- **timeindex** (`pandas.Timestamp` or `list(pandas.Timestamp)` or `None`, optional) – Specifies time steps histogram is plotted for. If timeindex is `None` all time steps provided in `data` are used. Default: `None`.
- **directory** (`str` or `None`, optional) – Path to directory the plot is saved to. Is created if it does not exist. Default: `None`.
- **filename** (`str` or `None`, optional) – Filename the plot is saved as. File format is specified by ending. If filename is `None`, the plot is shown. Default: `None`.
- **color** (`str` or `None`, optional) – Color used in plot. If `None` it defaults to blue. Default: `None`.
- **alpha** (`float`, optional) – Transparency of the plot. Must be a number between 0 and 1, where 0 is see through and 1 is opaque. Default: 1.
- **title** (`str` or `None`, optional) – Plot title. Default: `None`.
- **x_label** (`str`, optional) – Label for x-axis. Default: `""`.
- **y_label** (`str`, optional) – Label for y-axis. Default: `""`.
- **normed** (`bool`, optional) – Defines if histogram is normed. Default: `False`.
- **x_limits** (`tuple` or `None`, optional) – Tuple with x-axis limits. First entry is the minimum and second entry the maximum value. Default: `None`.
- **y_limits** (`tuple` or `None`, optional) – Tuple with y-axis limits. First entry is the minimum and second entry the maximum value. Default: `None`.
- **fig_size** (`str` or `tuple`, optional) –

Size of the figure in inches or a string with the following options:

- `'a4portrait'`
- `'a4landscape'`
- `'a5portrait'`

- 'a5landscape'

Default: 'a5landscape'.

- **binwidth** (`float`) – Width of bins. Default: None.

`edisgo.tools.plots.add_basemap(ax, zoom=12)`

Adds map to a plot.

`edisgo.tools.plots.get_grid_district_polygon(config, subst_id=None, projection=4326)`

Get MV network district polygon from oedb for plotting.

`edisgo.tools.plots.mv_grid_topology(edisgo_obj, timestep=None, line_color=None, node_color=None, line_load=None, grid_expansion_costs=None, filename=None, arrows=False, grid_district_geom=True, background_map=True, voltage=None, limits_cb_lines=None, limits_cb_nodes=None, xlim=None, ylim=None, lines_cmap='inferno_r', title='', scaling_factor_line_width=None, curtailment_df=None, **kwargs)`

Plot line loading as color on lines.

Displays line loading relative to nominal capacity.

Parameters

- **edisgo_obj** (*EDisGo*) –
- **timestep** (`pandas.Timestamp`) – Time step to plot analysis results for. If *timestep* is None maximum line load and if given, maximum voltage deviation, is used. In that case arrows cannot be drawn. Default: None.
- **line_color** (`str` or None) – Defines whereby to choose line colors (and implicitly size). Possible options are:
 - 'loading' Line color is set according to loading of the line. Loading of MV lines must be provided by parameter *line_load*.
 - 'expansion_costs' Line color is set according to investment costs of the line. This option also effects node colors and sizes by plotting investment in stations and setting *node_color* to 'storage_integration' in order to plot storage size of integrated storage units. Grid expansion costs must be provided by parameter *grid_expansion_costs*.
 - None (default) Lines are plotted in black. Is also the fallback option in case of wrong input.
- **node_color** (`str` or None) – Defines whereby to choose node colors (and implicitly size). Possible options are:
 - 'technology' Node color as well as size is set according to type of node (generator, MV station, etc.).
 - 'voltage' Node color is set according to maximum voltage at each node. Voltages of nodes in MV network must be provided by parameter *voltage*.
 - 'voltage_deviation' Node color is set according to voltage deviation from 1 p.u.. Voltages of nodes in MV network must be provided by parameter *voltage*.
 - 'storage_integration' Only storage units are plotted. Size of node corresponds to size of storage.
 - None (default) Nodes are not plotted. Is also the fallback option in case of wrong input.
 - 'curtailment' Plots curtailment per node. Size of node corresponds to share of curtailed power for the given time span. When this option is chosen a dataframe

with curtailed power per time step and node needs to be provided in parameter *curtailment_df*.

- ‘charging_park’ Plots nodes with charging stations in red.
- **line_load** (*pandas.DataFrame* or *None*) – Dataframe with current results from power flow analysis in A. Index of the dataframe is a *pandas.DatetimeIndex*, columns are the line representatives. Only needs to be provided when parameter *line_color* is set to ‘loading’. Default: *None*.
- **grid_expansion_costs** (*pandas.DataFrame* or *None*) – Dataframe with network expansion costs in kEUR. See *grid_expansion_costs* in *Results* for more information. Only needs to be provided when parameter *line_color* is set to ‘expansion_costs’. Default: *None*.
- **filename** (*str*) – Filename to save plot under. If not provided, figure is shown directly. Default: *None*.
- **arrows** (*Boolean*) – If *True* draws arrows on lines in the direction of the power flow. Does only work when *line_color* option ‘loading’ is used and a time step is given. Default: *False*.
- **grid_district_geom** (*Boolean*) – If *True* network district polygon is plotted in the background. This also requires the *geopandas* package to be installed. Default: *True*.
- **background_map** (*Boolean*) – If *True* map is drawn in the background. This also requires the *contextily* package to be installed. Default: *True*.
- **voltage** (*pandas.DataFrame*) – Dataframe with voltage results from power flow analysis in p.u.. Index of the dataframe is a *pandas.DatetimeIndex*, columns are the bus representatives. Only needs to be provided when parameter *node_color* is set to ‘voltage’. Default: *None*.
- **limits_cb_lines** (*tuple*) – Tuple with limits for colorbar of line color. First entry is the minimum and second entry the maximum value. Only needs to be provided when parameter *line_color* is not *None*. Default: *None*.
- **limits_cb_nodes** (*tuple*) – Tuple with limits for colorbar of nodes. First entry is the minimum and second entry the maximum value. Only needs to be provided when parameter *node_color* is not *None*. Default: *None*.
- **xlim** (*tuple*) – Limits of x-axis. Default: *None*.
- **ylim** (*tuple*) – Limits of y-axis. Default: *None*.
- **lines_cmap** (*str*) – Colormap to use for lines in case *line_color* is ‘loading’ or ‘expansion_costs’. Default: ‘inferno_r’.
- **title** (*str*) – Title of the plot. Default: ‘’.
- **scaling_factor_line_width** (*float* or *None*) – If provided line width is set according to the nominal apparent power of the lines. If line width is *None* a default line width of 2 is used for each line. Default: *None*.
- **curtailment_df** (*pandas.DataFrame*) – Dataframe with curtailed power per time step and node. Columns of the dataframe correspond to buses and index to the time step. Only needs to be provided if *node_color* is set to ‘curtailment’.
- **legend_loc** (*str*) – Location of legend. See *matplotlib* legend location options for more information. Default: ‘upper left’.

`edisgo.tools.plots.color_map_color(value, vmin, vmax, cmap_name='coolwarm')`

Get matching color for a value on a matplotlib color map.

Parameters

- **value** (*float* or *int*) – Value to get color for
- **vmin** (*float* or *int*) – Minimum value on color map
- **vmax** (*float* or *int*) – Maximum value on color map
- **cmap_name** (*str* or *list*) – Name of color map to use, or the colormap

Returns

Color name in hex format

Return type

`str`

```
edisgo.tools.plots.plot_plotly(edisgo_obj, grid=None, line_color='relative_loading',  
                               node_color='voltage_deviation', line_result_selection='max',  
                               node_result_selection='max', selected_timesteps=None,  
                               center_coordinates=False, pseudo_coordinates=False,  
                               node_selection=False)
```

Draws a plotly html figure.

Parameters

- **edisgo_obj** (*EDisGo*) – Selected edisgo_obj to get plotting information from.
- **grid** (*Grid*) – Grid to plot. If None, the MVGrid of the edisgo_obj is plotted. Default: None.
- **line_color** (*str* or *None*) – Defines whereby to choose line colors. Possible options are:
 - **'loading'**
Line color is set according to loading of the line.
 - **'relative_loading' (default)**
Line color is set according to relative loading of the line.
 - **'reinforce'**
Line color is set according to investment costs of the line.
 - **None**
Line color is black. This is also the fallback, in case other options fail.
- **node_color** (*str* or *None*) – Defines whereby to choose node colors. Possible options are:
 - **'adjacencies'**
Node color as well as size is set according to the number of direct neighbors.
 - **'voltage_deviation' (default)**
Node color is set according to voltage deviation from 1 p.u..
 - **None**
Line color is black. This is also the fallback, in case other options fail.
- **line_result_selection** (*str*) – Defines which values are shown for the load of the lines:
 - **'min'**
Minimal line load of all time steps.
 - **'max' (default)**
Maximal line load of all time steps.
- **node_result_selection** (*str*) – Defines which values are shown for the voltage of the nodes:
 - **'min'**
Minimal node voltage of all time steps.
 - **'max' (default)**
Maximal node voltage of all time steps.
- **selected_timesteps** (*pandas.Timestamp* or *list(pandas.Timestamp)* or *None*) – Selected time steps to show results for.
 - **None (default)**
All time steps are used.
 - *list(pandas.Timestamp)* or *pandas.Timestamp* Selected time steps are used.

- **center_coordinates** (*bool*) – Enables the centering of the coordinates. If True the transformer node is set to the coordinates x=0 and y=0. Else, the coordinates from the HV/MV-station of the MV grid are used. Default: False.
- **pseudo_coordinates** (*bool*) – Enable pseudo coordinates for the plotted grid. Default: False.
- **node_selection** (*bool* or *list(str)*) – Only plot selected nodes. Default: False.

Returns

Plotly figure with branches and nodes.

Return type

`plotlyplotly.graph_objects.Figure`

`edisgo.tools.plots.chosen_graph(edisgo_obj, selected_grid)`

Get the matching networkx graph from a chosen grid.

Parameters

- **edisgo_obj** (*EDisGo*) –
- **selected_grid** (*str*) – Grid name. Can be either ‘Grid’ to select the MV grid with all LV grids or the name of the MV grid to select only the MV grid or the name of one of the LV grids of the eDisGo object to select a specific LV grid.

Returns

Tuple with the first entry being the networkx graph of the selected grid and the second entry the grid to use as root node. See `draw_plotly()` for more information.

Return type

(`networkx.Graph`, *Grid* or *bool*)

`edisgo.tools.plots.plot_dash_app(edisgo_objects, debug=False)`

Generates a jupyter dash app from given eDisGo object(s).

Parameters

- **edisgo_objects** (*EDisGo* or `dict[str, EDisGo]`) – eDisGo objects to show in plotly dash app. In the case of multiple edisgo objects pass a dictionary with the eDisGo objects as values and the respective eDisGo object names as keys.
- **debug** (*bool*) – Debugging for the dash app:
 - **False (default)**
Disable debugging for the dash app.
 - **True**
Enable debugging for the dash app.

Returns

Jupyter dash app.

Return type

`JupyterDash`

`edisgo.tools.plots.plot_dash(edisgo_objects, mode='inline', debug=False, port=8050)`

Shows the generated jupyter dash app from given eDisGo object(s).

Parameters

- **edisgo_objects** (*EDisGo* or `dict[str, EDisGo]`) – eDisGo objects to show in plotly dash app. In the case of multiple edisgo objects pass a dictionary with the eDisGo objects as values and the respective eDisGo object names as keys.
- **mode** (*str*) – Display mode
 - **“inline” (default)**
Jupyter lab inline plotting.
 - **“jupyterlab”**
Plotting in own Jupyter lab tab.

- "external"
Plotting in own browser tab.
- **debug** (*bool*) – If True, enables debugging of the jupyter dash app.
- **port** (*int*) – Port which the app uses. Default: 8050.

edisgo.tools.powermodels_io module

`edisgo.tools.powermodels_io.to_powermodels(pypsa_net)`

Convert pypsa network to network dictionary format, using the pypower structure as an intermediate steps

powermodels network dictionary: <https://lanl-ansi.github.io/PowerModels.jl/stable/network-data/>

pypower caseformat: <https://github.com/rwl/PYPOWER/blob/master/pypower/caseformat.py>

Parameters

pypsa_net –

Returns

`edisgo.tools.powermodels_io.convert_storage_series(timeseries)`

`edisgo.tools.powermodels_io.add_storage_from_edisgo(edisgo_obj, psa_net, pm_dict)`

Read static storage data (position and capacity) from eDisGo and export to Powermodels dict

`edisgo.tools.powermodels_io.pypsa2ppc(psa_net)`

Converter from pypsa data structure to pypower data structure

adapted from pandapower's pd2ppc converter

<https://github.com/e2nIEE/pandapower/blob/911f300a96ee0ac062d82f7684083168ff052586/pandapower/pd2ppc.py>

`edisgo.tools.powermodels_io.ppc2pm(ppc, psa_net)`

converter from pypower datastructure to powermodels dictionary,

adapted from pandapower to powermodels converter: https://github.com/e2nIEE/pandapower/blob/develop/pandapower/converter/powermodels/to_pm.py

Parameters

ppc –

Returns

edisgo.tools.preprocess_pypsa_opf_structure module

`edisgo.tools.preprocess_pypsa_opf_structure.preprocess_pypsa_opf_structure(edisgo_grid, psa_network, hvmv_trafo=False)`

Prepares pypsa network for OPF problem.

- adds line costs
- adds HV side of HV/MV transformer to network
- moves slack to HV side of HV/MV transformer

Parameters

- **edisgo_grid** (*EDisGo*) –
- **psa_network** (*pypsa.Network*) –
- **hvmv_trafo** (Boolean) – If True, HV side of HV/MV transformer is added to buses and Slack generator is moved to HV side.

`ediso.tools.preprocess_pypsa_opf_structure.aggregate_fluct_generators(psa_network)`

Aggregates fluctuating generators of same type at the same node.

Iterates over all generator buses. If multiple fluctuating generators are attached, they are aggregated by type.

Parameters

psa_network (`pypsa.Network`) –

ediso.tools.tools module

`ediso.tools.tools.select_worstcase_snapshots(ediso_obj)`

Select two worst-case snapshots from time series

Two time steps in a time series represent worst-case snapshots. These are

1. **Maximum Residual Load:** refers to the point in the time series where the (load - generation) achieves its maximum.
2. **Minimum Residual Load:** refers to the point in the time series where the (load - generation) achieves its minimum.

These two points are identified based on the generation and load time series. In case load or feed-in case don't exist None is returned.

Parameters

ediso_obj (`EDisGo`) –

Returns

Dictionary with keys 'min_residual_load' and 'max_residual_load'. Values are corresponding worst-case snapshots of type `pandas.Timestamp`.

Return type

`dict`

`ediso.tools.tools.calculate_relative_line_load(ediso_obj, lines=None, timesteps=None)`

Calculates relative line loading for specified lines and time steps.

Line loading is calculated by dividing the current at the given time step by the allowed current.

Parameters

- **ediso_obj** (`EDisGo`) –
- **lines** (`list(str)` or `None`, optional) – Line names/representatives of lines to calculate line loading for. If None, line loading is calculated for all lines in the network. Default: None.
- **timesteps** (`pandas.Timestamp` or `list(pandas.Timestamp)` or `None`, optional) – Specifies time steps to calculate line loading for. If timesteps is None, all time steps power flow analysis was conducted for are used. Default: None.

Returns

Dataframe with relative line loading (unitless). Index of the dataframe is a `pandas.DatetimeIndex`, columns are the line representatives.

Return type

`pandas.DataFrame`

`ediso.tools.tools.calculate_line_reactance(line_inductance_per_km, line_length, num_parallel)`

Calculates line reactance in Ohm.

Parameters

- **line_inductance_per_km** (`float` or `array-like`) – Line inductance in mH/km.
- **line_length** (`float`) – Length of line in km.
- **num_parallel** (`int`) – Number of parallel lines.

Returns

Reactance in Ohm

Return type

`float`

`edisgo.tools.tools.calculate_line_resistance(line_resistance_per_km, line_length, num_parallel)`

Calculates line resistance in Ohm.

Parameters

- **line_resistance_per_km** (*float* or *array-like*) – Line resistance in Ohm/km.
- **line_length** (*float*) – Length of line in km.
- **num_parallel** (*int*) – Number of parallel lines.

Returns

Resistance in Ohm

Return type

float

`edisgo.tools.tools.calculate_line_susceptance(line_capacitance_per_km, line_length, num_parallel)`

Calculates line shunt susceptance in Siemens.

Parameters

- **line_capacitance_per_km** (*float*) – Line capacitance in uF/km.
- **line_length** (*float*) – Length of line in km.
- **num_parallel** (*int*) – Number of parallel lines.

Returns

Shunt susceptance in Siemens.

Return type

float

`edisgo.tools.tools.calculate_apparent_power(nominal_voltage, current, num_parallel)`

Calculates apparent power in MVA from given voltage and current.

Parameters

- **nominal_voltage** (*float* or *array-like*) – Nominal voltage in kV.
- **current** (*float* or *array-like*) – Current in kA.
- **num_parallel** (*int* or *array-like*) – Number of parallel lines.

Returns

Apparent power in MVA.

Return type

float

`edisgo.tools.tools.drop_duplicated_indices(dataframe, keep='first')`

Drop rows of duplicate indices in dataframe.

Parameters

- **dataframe** (*pandas.DataFrame*) – handled dataframe
- **keep** (*str*) – indicator of row to be kept, 'first', 'last' or False, see *pandas.DataFrame.drop_duplicates()* method

`edisgo.tools.tools.drop_duplicated_columns(df, keep='first')`

Drop columns of dataframe that appear more than once.

Parameters

- **df** (*pandas.DataFrame*) – Dataframe of which columns are dropped.
- **keep** (*str*) – Indicator of whether to keep first ('first'), last ('last') or none (False) of the duplicated columns. See *drop_duplicates()* method of *pandas.DataFrame*.

`edisgo.tools.tools.select_cable(edisgo_obj, level, apparent_power)`

Selects suitable cable type and quantity using given apparent power.

Cable is selected to be able to carry the given *apparent_power*, no load factor is considered. Overhead lines are not considered in choosing a suitable cable.

Parameters

- **edisgo_obj** (*EDisGo*) –
- **level** (*str*) – Grid level to get suitable cable for. Possible options are 'mv' or 'lv'.
- **apparent_power** (*float*) – Apparent power the cable must carry in MVA.

Returns

- `pandas.Series` – Series with attributes of selected cable as in equipment data and cable type as series name.
- `int` – Number of necessary parallel cables.

`ediso.tools.tools.assign_feeder(ediso_obj, mode='mv_feeder')`

Assigns MV or LV feeder to each bus and line, depending on the *mode*.

The feeder name is written to a new column *mv_feeder* or *lv_feeder* in *Topology*'s *buses_df* and *lines_df*. The MV respectively LV feeder name corresponds to the name of the first bus in the respective feeder.

Parameters

- `ediso_obj` (*EDisGo*) –
- `mode` (*str*) – Specifies whether to assign MV or LV feeder. Valid options are 'mv_feeder' or 'lv_feeder'. Default: 'mv_feeder'.

`ediso.tools.tools.get_path_length_to_station(ediso_obj)`

Determines path length from each bus to HV-MV station.

The path length is written to a new column *path_length_to_station* in *buses_df* dataframe of *Topology* class.

Parameters

`ediso_obj` (*EDisGo*) –

Returns

Series with bus name in index and path length to station as value.

Return type

`pandas.Series`

`ediso.tools.tools.assign_voltage_level_to_component(df, buses_df)`

Adds column with specification of voltage level component is in.

The voltage level ('mv' or 'lv') is determined based on the nominal voltage of the bus the component is connected to. If the nominal voltage is smaller than 1 kV, voltage level 'lv' is assigned, otherwise 'mv' is assigned.

Parameters

- `df` (`pandas.DataFrame`) – Dataframe with component names in the index. Only required column is column 'bus', giving the name of the bus the component is connected to.
- `buses_df` (`pandas.DataFrame`) – Dataframe with bus information. Bus names are in the index. Only required column is column 'v_nom', giving the nominal voltage of the voltage level the bus is in.

Returns

Same dataframe as given in parameter *df* with new column 'voltage_level' specifying the voltage level the component is in (either 'mv' or 'lv').

Return type

`pandas.DataFrame`

`ediso.tools.tools.get_weather_cells_intersecting_with_grid_district(ediso_obj)`

Get all weather cells that intersect with the grid district.

Parameters

`ediso_obj` (*EDisGo*) –

Returns

Set with weather cell IDs

Return type

`set`

`ediso.tools.tools.get_directory_size(start_dir)`

Calculates the size of all files within the start path.

Walks through all files and sub-directories within a given directory and calculate the sum of size of all files in the directory. See: <https://stackoverflow.com/a/1392549/13491957>

Parameters

start_dir (*str*) – Start path.

Returns

Size of the directory.

Return type

int

`edisgo.tools.tools.get_files_recursive(path, files=None)`

Recursive function to get all files in a given path and its sub directories.

Parameters

- **path** (*str*) – Directory to start from.
- **files** (*list*, *optional*) – List of files to start with. Default: None.

`edisgo.tools.tools.add_line_susceptance(edisgo_obj, mode='mv_b')`

Adds line susceptance information in Siemens to lines in existing grids.

Parameters

- **edisgo_obj** (*EDisGo*) – EDisGo object to which line susceptance information is added.
- **mode** (*str*) – Defines how the susceptance is added:
 - **'no_b'**
Susceptance is set to 0 for all lines.
 - **'mv_b' (Default)**
Susceptance is for the MV lines set according to the equipment parameters and for the LV lines it is set to zero.
 - **'all_b'**
Susceptance is for the MV lines set according to the equipment parameters and for the LV lines 0.25 uF/km is chosen.

Return type

EDisGo

Module contents

`edisgo.tools.session_scope()`

Function to ensure that sessions are closed properly.

1.9 What's New

Changelog for each release.

- *Release v0.1.1*
- *Release v0.1.0*
- *Release v0.0.10*
- *Release v0.0.9*
- *Release v0.0.8*
- *Release v0.0.7*
- *Release v0.0.6*

- [Release v0.0.5](#)
- [Release v0.0.3](#)
- [Release v0.0.2](#)

1.9.1 Release v0.1.1

Release date: July 22, 2022

This release comes with some minor additions and bug fixes.

Changes

- Added a pull request and issue template
- Fix readthecods API doc
- Consider parallel lines in calculation of x, r and s_nom
- Bug fix calculation of x and r of new lines
- Bug fix of getting a list of all weather cells within grid district

1.9.2 Release v0.1.0

Release date: July 26, 2021

This release comes with some major refactoring. The internal data structure of the network topologies was changed from a networkx graph structure to a pandas dataframe structure based on the [PyPSA](#) data structure. This comes along with major API changes. Not all functionality of the previous eDisGo release 0.0.10 is yet refactored (e.g. the heuristics for grid supportive storage integration and generator curtailment), but we are working on it and the upcoming releases will have the full functionality again.

Besides the refactoring we added extensive tests along with automatic testing with GitHub Actions and coveralls tool to track test coverage.

Further, from now on python 3.6 is not supported anymore. Supported python versions are 3.7, 3.8 and 3.9.

Changes

- Major refactoring [#159](#)
- Added support for Python 3.7, 3.8 and 3.9 [#181](#)
- Added GitHub Actions for testing and coverage [#180](#)
- Adapted to new ding0 release [#184](#) - loads and generators in the same building are now connected to the same bus instead of separate buses and loads and generators in aggregated load areas are connected via a MV/LV station instead of directly to the HV/MV station)
- Added charging points as new components along with a methodology to integrate them into the grid
- Added multiperiod optimal power flow based on julia package PowerModels.jl optimizing storage positioning and/or operation as well as generator dispatch with regard to minimizing grid expansion costs

1.9.3 Release v0.0.10

Release date: October 18, 2019

Changes

- Updated to networkx 2.0
- Changed data of transformers [#240](#)
- Proper session handling and readonly usage ([PR #160](#))

Bug fixes

- Corrected calculation of current from pypsa power flow results ([PR #153](#)).

1.9.4 Release v0.0.9

Release date: December 3, 2018

Changes

- bug fix in determining voltage deviation in LV stations and LV grid

1.9.5 Release v0.0.8

Release date: October 29, 2018

Changes

- added tolerance for curtailment targets slightly higher than generator availability to allow small rounding errors

1.9.6 Release v0.0.7

Release date: October 23, 2018

This release mainly focuses on new plotting functionalities and making reimporting saved results to further analyze and visualize them more comfortable.

Changes

- new plotting methods in the EDisGo API class (plottings of the MV grid topology showing line loadings, grid expansion costs, voltages and/or integrated storages and histograms for voltages and relative line loadings)
- new classes EDisGoReimport, NetworkReimport and ResultsReimport to reimport saved results and enable all analysis and plotting functionalities offered by the original classes
- bug fixes

1.9.7 Release v0.0.6

Release date: September 6, 2018

This release comes with a bunch of new features such as results output and visualization, speed-up options, a new storage integration methodology and an option to provide separate allowed voltage deviations for calculation of grid expansion needs. See list of changes below for more details.

Changes

- A methodology to integrate storages in the MV grid to reduce grid expansion costs was added that takes a given storage capacity and operation and allocates it to multiple smaller storages. This methodology is mainly to be used together with the [eTraGo tool](#) where an optimization of the HV and EHV levels is conducted to calculate optimal storage size and operation at each HV/MV substation.
- The voltage-based curtailment methodology was adapted to take into account allowed voltage deviations and curtail generators with voltages that exceed the allowed voltage deviation more than generators with voltages that do not exceed the allowed voltage deviation.
- When conducting grid reinforcement it is now possible to apply separate allowed voltage deviations for different voltage levels (#108). Furthermore, an additional check was added at the end of the grid expansion methodology if the 10%-criterion was observed.
- To speed up calculations functions to update the pypsa representation of the edisgo graph after generator import, storage integration and time series update, e.g. after curtailment, were added.
- Also as a means to speed up calculations an option to calculate grid expansion costs for the two worst time steps, characterized by highest and lowest residual load at the HV/MV substation, was added.
- For the newly added storage integration methodology it was necessary to calculate grid expansion costs without changing the topology of the graph in order to identify feeders with high grid expansion needs. Therefore, the option to conduct grid reinforcement on a copy of the graph was added to the grid expansion function.
- So far loads and generators always provided or consumed inductive reactive power with the specified power factor. It is now possible to specify whether loads and generators should behave as inductors or capacitors and to provide a concrete reactive power time series(#131).
- The Results class was extended by outputs for storages, grid losses and active and reactive power at the HV/MV substation (#138) as well as by a function to save all results to csv files.
- A plotting function to plot line loading in the MV grid was added.
- Update [ding0](#) version to v0.1.8 and include [data processing v0.4.5](#) data
- [Bug fix](#)

1.9.8 Release v0.0.5

Release date: July 19, 2018

Most important changes in this release are some major bug fixes, a differentiation of line load factors and allowed voltage deviations for load and feed-in case in the grid reinforcement and a possibility to update time series in the pypsa representation.

Changes

- Switch disconnecters in MV rings will now be installed, even if no LV station exists in the ring [#136](#)
- Update to new version of ding0 [v0.1.7](#)
- Consider feed-in and load case in grid expansion methodology
- Enable grid expansion on snapshots
- Bug fixes

1.9.9 Release v0.0.3

Release date: July 6 2018

New features have been included in this release. Major changes being the use of the `weather_cell_id` and the inclusion of new methods for distributing the curtailment to be more suitable to network operations.

Changes

- As part of the solution to github issues [#86](#), [#98](#), Weather cell information was of importance due to the changes in the source of data. The table `ego_renewable_feedin_v031` is now used to provide this feedin time series indexed using the weather cell id's. Changes were made to `ego.io` and `ding0` to correspondingly allow the use of this table by eDisGo.
- A new curtailment method have been included based on the voltages at the nodes with *GeneratorFluctuating* objects. The method is called `curtail_voltage` and its objective is to increase curtailment at locations where voltages are very high, thereby alleviating over-voltage issues and also reducing the need for network reinforcement.
- Add parallelization for custom functions [#130](#)
- Update `ding0` version to [v0.1.6](#) and include [data processing v.4.2](#) data
- Bug Fixes

1.9.10 Release v0.0.2

Release date: March 15 2018

The code was heavily revised. Now, eDisGo provides the top-level API class `EDisGo` for user interaction. See below for details and other small changes.

Changes

- Switch disconnector/ disconnecting points are now relocated by eDisGo [#99](#). Before, locations determined by Ding0 were used. Relocation is conducted according to minimal load differences in both parts of the ring.
- Switch disconnectors are always located in LV stations [#23](#)
- Made all round speed improvements as mentioned in the issues [#43](#)
- The structure of eDisGo and its input data has been extensively revised in order to make it more consistent and easier to use. We introduced a top-level API class called `EDisGo` through which all user input and measures are now handled. The `EDisGo` class thereby replaces the former `Scenario` class and parts of the `Network` class. See [A minimum working example](#) for a quick overview of how to use the `EDisGo` class or [Usage details](#) for a more comprehensive introduction to the edisgo structure and usage.

- We introduce a CLI script to use basic functionality of eDisGo including parallelization. CLI uses higher level functions to run eDisGo. Consult `edisgo_run` for further details. [#93](#).

1.10 Index

Index

BIBLIOGRAPHY

[DENA] A.C. Agricola et al.: *dena-Verteilnetzstudie: Ausbau- und Innovationsbedarf der Stromverteilnetze in Deutschland bis 2030*. 2012.

PYTHON MODULE INDEX

e

- `edisgo.flex_opt.charging_strategies`, 107
- `edisgo.flex_opt.check_tech_constraints`, 108
- `edisgo.flex_opt.costs`, 112
- `edisgo.flex_opt.exceptions`, 113
- `edisgo.flex_opt.heat_pump_operation`, 113
- `edisgo.flex_opt.q_control`, 114
- `edisgo.flex_opt.reinforce_grid`, 114
- `edisgo.flex_opt.reinforce_measures`, 116
- `edisgo.io.ding0_import`, 118
- `edisgo.io.electromobility_import`, 119
- `edisgo.io.generators_import`, 122
- `edisgo.io.pypsa_io`, 123
- `edisgo.io.timeseries_import`, 124
- `edisgo.network.components`, 56
- `edisgo.network.electromobility`, 63
- `edisgo.network.grids`, 67
- `edisgo.network.heat`, 72
- `edisgo.network.results`, 75
- `edisgo.network.timeseries`, 82
- `edisgo.network.topology`, 94
- `edisgo.opf.results.opf_expand_network`, 127
- `edisgo.opf.results.opf_result_class`, 128
- `edisgo.opf.run_mp_opf`, 125
- `edisgo.opf.timeseries_reduction`, 126
- `edisgo.opf.util.plot_solutions`, 129
- `edisgo.opf.util.scenario_settings`, 129
- `edisgo.tools`, 146
 - `edisgo.tools.config`, 130
 - `edisgo.tools.geo`, 132
 - `edisgo.tools.geopandas_helper`, 134
 - `edisgo.tools.logger`, 135
 - `edisgo.tools.networkx_helper`, 137
 - `edisgo.tools.plots`, 137
 - `edisgo.tools.powermodels_io`, 142
 - `edisgo.tools.preprocess_pypsa_opf_structure`, 142
 - `edisgo.tools.tools`, 143

A

active_power_timeseries
(edisgo.network.components.Generator property), 59

active_power_timeseries
(edisgo.network.components.Load property), 58

active_power_timeseries
(edisgo.network.components.Storage property), 59

add_basemap() (in module edisgo.tools.plots), 138

add_bus() (edisgo.network.topology.Topology method), 102

add_component() (edisgo.EDisGo method), 47

add_component_time_series()
(edisgo.network.timeseries.TimeSeries method), 92

add_generator() (edisgo.network.topology.Topology method), 101

add_line() (edisgo.network.topology.Topology method), 102

add_line_susceptance() (in module edisgo.tools.tools), 146

add_load() (edisgo.network.topology.Topology method), 101

add_storage_from_edisgo() (in module edisgo.tools.powermodels_io), 142

add_storage_unit() (edisgo.network.topology.Topology method), 102

aggregate_components() (edisgo.EDisGo method), 49

aggregate_fluct_generators() (in module edisgo.tools.preprocess_pypsa_opf_structure), 142

ags (edisgo.network.components.PotentialChargingParks property), 61

analyze() (edisgo.EDisGo method), 45

annual_consumption (edisgo.network.components.Load property), 57

apply_charging_strategy() (edisgo.EDisGo method), 51

apply_heat_pump_operating_strategy()

(edisgo.EDisGo method), 52

assign_feeder() (in module edisgo.tools.tools), 145

assign_voltage_level_to_component() (in module edisgo.tools.tools), 145

B

BasicComponent (class in edisgo.network.components), 56

branch (edisgo.network.components.Switch property), 61

building_ids_df (edisgo.network.heat.HeatPump property), 73

bus (edisgo.network.components.Component property), 57

bus_closed (edisgo.network.components.Switch property), 60

bus_names_to_ints() (in module edisgo.opf.run_mp_opf), 125

bus_open (edisgo.network.components.Switch property), 60

buses_df (edisgo.network.grids.Grid property), 69

buses_df (edisgo.network.grids.LVGrid property), 71

buses_df (edisgo.network.grids.MVGrid property), 70

buses_df (edisgo.network.topology.Topology property), 98

BusVariables (class in edisgo.opf.results.opf_result_class), 129

C

calc_geo_dist_vincenty() (in module edisgo.tools.geo), 133

calc_geo_lines_in_buffer() (in module edisgo.tools.geo), 133

calculate_apparent_power() (in module edisgo.tools.tools), 144

calculate_line_reactance() (in module edisgo.tools.tools), 143

calculate_line_resistance() (in module edisgo.tools.tools), 143

calculate_line_susceptance() (in module edisgo.tools.tools), 144

calculate_relative_line_load() (in module edisgo.tools.tools), 143

`change_line_type()` (*edisgo.network.topology.Topology* method), 104

`charging_points_active_power()` (*edisgo.network.timeseries.TimeSeries* method), 84

`charging_points_active_power_by_use_case` (*edisgo.network.timeseries.TimeSeriesRaw* attribute), 93

`charging_points_df` (*edisgo.network.grids.Grid* property), 69

`charging_points_df` (*edisgo.network.topology.Topology* property), 99

`charging_points_reactive_power()` (*edisgo.network.timeseries.TimeSeries* method), 84

`charging_processes_df` (*edisgo.network.components.PotentialChargingParks* property), 62

`charging_processes_df` (*edisgo.network.electromobility.Electromobility* property), 63

`charging_strategy()` (in module *edisgo.flex_opt.charging_strategies*), 107

`check_integrity()` (*edisgo.EDisGo* method), 55

`check_integrity()` (*edisgo.network.timeseries.TimeSeries* method), 92

`check_integrity()` (*edisgo.network.topology.Topology* method), 106

`check_ten_percent_voltage_deviation()` (in module *edisgo.flex_opt.check_tech_constraints*), 111

`chosen_graph()` (in module *edisgo.tools.plots*), 141

`close()` (*edisgo.network.components.Switch* method), 61

`color_map_color()` (in module *edisgo.tools.plots*), 139

`combine_weights()` (in module *edisgo.io.electromobility_import*), 121

`Component` (class in *edisgo.network.components*), 57

`Config` (class in *edisgo.tools.config*), 130

`config` (*edisgo.EDisGo* property), 39

`connect_to_lv()` (*edisgo.network.topology.Topology* method), 104

`connect_to_mv()` (*edisgo.network.topology.Topology* method), 104

`conventional_loads_active_power_by_sector` (*edisgo.network.timeseries.TimeSeriesRaw* attribute), 93

`convert()` (in module *edisgo.opf.run_mp_opf*), 125

`convert_storage_series()` (in module *edisgo.tools.powermodels_io*), 142

`cop_df` (*edisgo.network.heat.HeatPump* property), 72

`cop_oedb()` (in module *edisgo.io.timeseries_import*), 125

D

`designated_charging_point_capacity` (*edisgo.network.components.PotentialChargingParks* property), 62

`determine_grid_connection_capacity()` (in module *edisgo.io.electromobility_import*), 122

`dispatchable_generators_active_power_by_technology` (*edisgo.network.timeseries.TimeSeriesRaw* attribute), 93

`distribute_charging_demand()` (in module *edisgo.io.electromobility_import*), 120

`distribute_private_charging_demand()` (in module *edisgo.io.electromobility_import*), 122

`distribute_public_charging_demand()` (in module *edisgo.io.electromobility_import*), 122

`draw()` (*edisgo.network.grids.LVGrid* method), 71

`draw()` (*edisgo.network.grids.MVGrid* method), 71

`drop_component_time_series()` (*edisgo.network.timeseries.TimeSeries* method), 92

`drop_duplicated_columns()` (in module *edisgo.tools.tools*), 144

`drop_duplicated_indices()` (in module *edisgo.tools.tools*), 144

`dump_solution_file()` (*edisgo.opf.results.opf_result_class.OPFResults* method), 129

E

`EDisGo` (class in *edisgo*), 38

`edisgo.flex_opt.charging_strategies` module, 107

`edisgo.flex_opt.check_tech_constraints` module, 108

`edisgo.flex_opt.costs` module, 112

`edisgo.flex_opt.exceptions` module, 113

`edisgo.flex_opt.heat_pump_operation` module, 113

`edisgo.flex_opt.q_control` module, 114

`edisgo.flex_opt.reinforce_grid` module, 114

`edisgo.flex_opt.reinforce_measures` module, 116

`edisgo.io.ding0_import` module, 118

`edisgo.io.electromobility_import` module, 119

`edisgo.io.generators_import` module, 122

`edisgo.io.pypsa_io` module, 123

edisgo.io.timeseries_import
 module, 124
 edisgo.network.components
 module, 56
 edisgo.network.electromobility
 module, 63
 edisgo.network.grids
 module, 67
 edisgo.network.heat
 module, 72
 edisgo.network.results
 module, 75
 edisgo.network.timeseries
 module, 82
 edisgo.network.topology
 module, 94
 edisgo.opf.results.opf_expand_network
 module, 127
 edisgo.opf.results.opf_result_class
 module, 128
 edisgo.opf.run_mp_opf
 module, 125
 edisgo.opf.timeseries_reduction
 module, 126
 edisgo.opf.util.plot_solutions
 module, 129
 edisgo.opf.util.scenario_settings
 module, 129
 edisgo.tools
 module, 146
 edisgo.tools.config
 module, 130
 edisgo.tools.geo
 module, 132
 edisgo.tools.geopandas_helper
 module, 134
 edisgo.tools.logger
 module, 135
 edisgo.tools.networkx_helper
 module, 137
 edisgo.tools.plots
 module, 137
 edisgo.tools.powermodels_io
 module, 142
 edisgo.tools.preprocess_pypsa_opf_structure
 module, 142
 edisgo.tools.tools
 module, 143
 edisgo_id(*edisgo.network.components.PotentialCharging*
 property), 62
 edisgo_obj(*edisgo.network.components.BasicComponent*
 property), 56
 edisgo_obj(*edisgo.network.grids.Grid* *property*), 67
 edisgo_obj(*in module edisgo.flex_opt.costs*), 112
 edisgo_object(*edisgo.network.results.Results* *at-*
 tribute), 75
 Electromobility(*class in*
 edisgo.network.electromobility), 63
 electromobility(*edisgo.EDisGo* *attribute*), 39
 equality_check()
 (*edisgo.network.results.Results*
 method), 81
 equipment_changes(*edisgo.network.results.Results*
 property), 77
 equipment_data(*edisgo.network.topology.Topology*
 property), 100
 Error, 113
 eta_charging_points
 (*edisgo.network.electromobility.Electromobility*
 property), 65
 expand_network()
 (*in* *module*
 edisgo.opf.results.opf_expand_network),
 127
F
 feedin_oedb()
 (*in* *module*
 edisgo.io.timeseries_import), 124
 find_nearest_bus()
 (*in module edisgo.tools.geo*), 133
 find_nearest_conn_objects()
 (*in* *module*
 edisgo.tools.geo), 134
 fixed_cosphi()
 (*edisgo.network.timeseries.TimeSeries*
 method), 89
 fixed_cosphi()
 (*in module edisgo.flex_opt.q_control*),
 114
 flexibility_bands(*edisgo.network.electromobility.Electromobility*
 property), 66
 fluctuating_generators_active_power_by_technology
 (*edisgo.network.timeseries.TimeSeriesRaw* *at-*
 tribute), 93
 from_cfg()
 (*edisgo.tools.config.Config* *method*), 131
 from_csv()
 (*edisgo.network.electromobility.Electromobility*
 method), 67
 from_csv()
 (*edisgo.network.heat.HeatPump* *method*),
 75
 from_csv()
 (*edisgo.network.results.Results* *method*), 82
 from_csv()
 (*edisgo.network.timeseries.TimeSeries*
 method), 92
 from_csv()
 (*edisgo.network.timeseries.TimeSeriesRaw*
 method), 94
 from_csv()
 (*edisgo.network.topology.Topology*
 method), 106
 from_json()
 (*edisgo.tools.config.Config* *method*), 131
G
 Generator(*class in edisgo.network.components*), 58
 generators(*edisgo.network.grids.Grid* *property*), 68
 generators_active_power
 (*edisgo.network.timeseries.TimeSeries* *prop-*
 erty), 83

generators_df (*edisgo.network.grids.Grid* property), 68
 generators_df (*edisgo.network.topology.Topology* property), 95
 generators_reactive_power (*edisgo.network.timeseries.TimeSeries* property), 83
 GeneratorVariables (class in *edisgo.opf.results.opf_result_class*), 129
 geom (*edisgo.network.components.Component* property), 57
 geometry (*edisgo.network.components.PotentialChargingParks* property), 62
 geopandas (*edisgo.network.grids.Grid* property), 67
 geopandas (*edisgo.network.grids.LVGrid* property), 72
 GeoPandasGridContainer (class in *edisgo.tools.geopandas_helper*), 134
 get() (in module *edisgo.tools.config*), 132
 get_connected_components_from_bus() (*edisgo.network.topology.Topology* method), 101
 get_connected_lines_from_bus() (*edisgo.network.topology.Topology* method), 100
 get_curtailment_per_node() (in module *edisgo.opf.results.opf_expand_network*), 128
 get_default_config_path() (in module *edisgo.tools.config*), 132
 get_directory_size() (in module *edisgo.tools.tools*), 145
 get_files_recursive() (in module *edisgo.tools.tools*), 146
 get_flexibility_bands() (*edisgo.network.electromobility.Electromobility* method), 66
 get_grid_district_polygon() (in module *edisgo.tools.plots*), 138
 get_line_connecting_buses() (*edisgo.network.topology.Topology* method), 100
 get_linked_steps() (in module *edisgo.opf.timeseries_reduction*), 126
 get_load_curtailment_per_node() (in module *edisgo.opf.results.opf_expand_network*), 128
 get_lv_grid() (*edisgo.network.topology.Topology* method), 99
 get_neighbours() (*edisgo.network.topology.Topology* method), 101
 get_path_length_to_station() (in module *edisgo.tools.tools*), 145
 get_q_sign_generator() (in module *edisgo.flex_opt.q_control*), 114
 get_q_sign_load() (in module *edisgo.flex_opt.q_control*), 114
 get_steps_curtailment() (in module *edisgo.opf.timeseries_reduction*), 126
 get_steps_storage() (in module *edisgo.opf.timeseries_reduction*), 126
 get_weather_cells_intersecting_with_grid_district() (in module *edisgo.tools.tools*), 145
 get_weights_df() (in module *edisgo.io.electromobility_import*), 120
 graph (*edisgo.network.grids.Grid* property), 67
 Grid (class in *edisgo.network.grids*), 67
 Grid (*edisgo.network.components.BasicComponent* property), 56
 grid (*edisgo.network.components.Component* property), 57
 grid (*edisgo.network.components.PotentialChargingParks* property), 61
 grid (*edisgo.network.components.Switch* property), 61
 grid_connection_capacity (*edisgo.network.components.PotentialChargingParks* property), 63
 grid_district (*edisgo.network.topology.Topology* property), 100
 grid_expansion_costs (*edisgo.network.results.Results* property), 78
 grid_expansion_costs() (in module *edisgo.flex_opt.costs*), 112
 grid_expansion_costs() (in module *edisgo.opf.results.opf_expand_network*), 127
 grid_losses (*edisgo.network.results.Results* property), 78

H

harmonize_charging_processes_df() (in module *edisgo.flex_opt.charging_strategies*), 107
 heat_demand_df (*edisgo.network.heat.HeatPump* property), 72
 heat_demand_oedb() (in module *edisgo.io.timeseries_import*), 125
 heat_pump (*edisgo.EDisGo* attribute), 39
 HeatPump (class in *edisgo.network.heat*), 72
 histogram() (in module *edisgo.tools.plots*), 137
 histogram_relative_line_load() (*edisgo.EDisGo* method), 53
 histogram_voltage() (*edisgo.EDisGo* method), 53
 hv_mv_station_load() (in module *edisgo.flex_opt.check_tech_constraints*), 109

I

i_res (*edisgo.network.results.Results* property), 76

- `id` (*edisgo.network.components.BasicComponent* property), 56
- `id` (*edisgo.network.grids.Grid* property), 67
- `id` (*edisgo.network.topology.Topology* property), 99
- `import_ding0_grid()` (*edisgo.EDisGo* method), 40
- `import_ding0_grid()` (in module *edisgo.io.ding0_import*), 118
- `import_electromobility()` (*edisgo.EDisGo* method), 49
- `import_electromobility()` (in module *edisgo.io.electromobility_import*), 119
- `import_generators()` (*edisgo.EDisGo* method), 45
- `import_heat_pumps()` (*edisgo.EDisGo* method), 51
- `ImpossibleVoltageReduction`, 113
- `integrate_charging_parks()` (in module *edisgo.io.electromobility_import*), 122
- `integrate_component_based_on_geolocation()` (*edisgo.EDisGo* method), 48
- `integrate_curtailment_as_load()` (in module *edisgo.opf.results.opf_expand_network*), 128
- `integrate_storage_units()` (in module *edisgo.opf.results.opf_expand_network*), 127
- `integrated_charging_parks_df` (*edisgo.network.electromobility.Electromobility* property), 65
- `is_worst_case` (*edisgo.network.timeseries.TimeSeries* property), 83
- ## L
- `line_expansion_costs()` (in module *edisgo.flex_opt.costs*), 112
- `lines_allowed_load()` (in module *edisgo.flex_opt.check_tech_constraints*), 108
- `lines_df` (*edisgo.network.grids.Grid* property), 69
- `lines_df` (*edisgo.network.topology.Topology* property), 97
- `lines_relative_load()` (in module *edisgo.flex_opt.check_tech_constraints*), 108
- `LineVariables` (class in *edisgo.opf.results.opf_result_class*), 129
- `Load` (class in *edisgo.network.components*), 57
- `load_config()` (in module *edisgo.tools.config*), 131
- `load_time_series_demandlib()` (in module *edisgo.io.timeseries_import*), 124
- `loads` (*edisgo.network.grids.Grid* property), 68
- `loads_active_power` (*edisgo.network.timeseries.TimeSeries* property), 84
- `loads_df` (*edisgo.network.grids.Grid* property), 68
- `loads_df` (*edisgo.network.topology.Topology* property), 94
- `loads_reactive_power` (*edisgo.network.timeseries.TimeSeries* property), 84
- `LoadVariables` (class in *edisgo.opf.results.opf_result_class*), 129
- `lv_grids` (*edisgo.network.grids.MVGrid* property), 70
- `lv_grids` (*edisgo.network.topology.Topology* property), 99
- `lv_line_load()` (in module *edisgo.flex_opt.check_tech_constraints*), 108
- `lv_voltage_deviation()` (in module *edisgo.flex_opt.check_tech_constraints*), 110
- `LVGrid` (class in *edisgo.network.grids*), 71
- ## M
- `make_directory()` (in module *edisgo.tools.config*), 132
- `MaximumIterationError`, 113
- `measures` (*edisgo.network.results.Results* property), 75
- `message` (*edisgo.flex_opt.exceptions.ImpossibleVoltageReduction* attribute), 113
- `message` (*edisgo.flex_opt.exceptions.MaximumIterationError* attribute), 113
- module
- edisgo.flex_opt.charging_strategies*, 107
 - edisgo.flex_opt.check_tech_constraints*, 108
 - edisgo.flex_opt.costs*, 112
 - edisgo.flex_opt.exceptions*, 113
 - edisgo.flex_opt.heat_pump_operation*, 113
 - edisgo.flex_opt.q_control*, 114
 - edisgo.flex_opt.reinforce_grid*, 114
 - edisgo.flex_opt.reinforce_measures*, 116
 - edisgo.io.ding0_import*, 118
 - edisgo.io.electromobility_import*, 119
 - edisgo.io.generators_import*, 122
 - edisgo.io.pypsa_io*, 123
 - edisgo.io.timeseries_import*, 124
 - edisgo.network.components*, 56
 - edisgo.network.electromobility*, 63
 - edisgo.network.grids*, 67
 - edisgo.network.heat*, 72
 - edisgo.network.results*, 75
 - edisgo.network.timeseries*, 82
 - edisgo.network.topology*, 94
 - edisgo.opf.results.opf_expand_network*, 127
 - edisgo.opf.results.opf_result_class*, 128
 - edisgo.opf.run_mp_opf*, 125
 - edisgo.opf.timeseries_reduction*, 126
 - edisgo.opf.util.plot_solutions*, 129
 - edisgo.opf.util.scenario_settings*, 129
 - edisgo.tools*, 146

edisgo.tools.config, 130
edisgo.tools.geo, 132
edisgo.tools.geopandas_helper, 134
edisgo.tools.logger, 135
edisgo.tools.networkx_helper, 137
edisgo.tools.plots, 137
edisgo.tools.powermodels_io, 142
edisgo.tools.preprocess_pypsa_opf_structure,
142
edisgo.tools.tools, 143

mv_grid (edisgo.network.topology.Topology property),
99
mv_grid_topology() (in module edisgo.tools.plots),
138
mv_line_load() (in module
edisgo.flex_opt.check_tech_constraints),
108
mv_lv_station_load() (in module
edisgo.flex_opt.check_tech_constraints),
109
mv_voltage_deviation() (in module
edisgo.flex_opt.check_tech_constraints),
110
MVGrid (class in edisgo.network.grids), 70

N

nearest_substation (edisgo.network.components.PotentialChargingParks
property), 62
nominal_power (edisgo.network.components.Generator
property), 58
nominal_power (edisgo.network.components.Storage
property), 59
nominal_voltage (edisgo.network.grids.Grid prop-
erty), 67
normalize() (in module
edisgo.io.electromobility_import), 121

O

oedb() (in module edisgo.io.generators_import), 122
open() (edisgo.network.components.Switch method), 61
operating_strategy() (in module
edisgo.flex_opt.heat_pump_operation), 113
opf_settings() (in module
edisgo.opf.util.scenario_settings), 129
OPFResults (class in edisgo.opf.results.opf_result_class),
129

P

p_set (edisgo.network.components.Load property), 57
p_set (edisgo.network.grids.Grid property), 70
p_set_per_sector (edisgo.network.grids.Grid prop-
erty), 70
peak_generation_capacity
(edisgo.network.grids.Grid property), 69

peak_generation_capacity_per_technology
(edisgo.network.grids.Grid property), 70
perform_mp_opf() (edisgo.EDisGo method), 47
pfa_p (edisgo.network.results.Results property), 75
pfa_q (edisgo.network.results.Results property), 76
pfa_slack (edisgo.network.results.Results property), 79
pfa_v_ang_seed (edisgo.network.results.Results prop-
erty), 79
pfa_v_mag_pu_seed (edisgo.network.results.Results
property), 79
plot_dash() (in module edisgo.tools.plots), 141
plot_dash_app() (in module edisgo.tools.plots), 141
plot_line_expansion() (in module
edisgo.opf.util.plot_solutions), 129
plot_mv_grid() (edisgo.EDisGo method), 53
plot_mv_grid_expansion_costs() (edisgo.EDisGo
method), 53
plot_mv_grid_topology() (edisgo.EDisGo method),
53
plot_mv_line_loading() (edisgo.EDisGo method),
53
plot_mv_storage_integration() (edisgo.EDisGo
method), 53
plot_mv_voltages() (edisgo.EDisGo method), 53
plot_plotly() (in module edisgo.tools.plots), 140
potential_charging_parks
(edisgo.network.electromobility.Electromobility
property), 64
potential_charging_parks_gdf
(edisgo.network.electromobility.Electromobility
property), 64
PotentialChargingParks (class in
edisgo.network.components), 61
ppc2pm() (in module edisgo.tools.powermodels_io), 142
predefined_charging_points_by_use_case()
(edisgo.network.timeseries.TimeSeries
method), 89
predefined_conventional_loads_by_sector()
(edisgo.network.timeseries.TimeSeries
method), 89
predefined_dispatchable_generators_by_technology()
(edisgo.network.timeseries.TimeSeries
method), 88
predefined_fluctuating_generators_by_technology()
(edisgo.network.timeseries.TimeSeries
method), 88
preprocess_pypsa_opf_structure() (in module
edisgo.tools.preprocess_pypsa_opf_structure),
142
process_pfa_results() (in module
edisgo.io.pypsa_io), 124
proj2equidistant() (in module edisgo.tools.geo), 132
proj2equidistant_reverse() (in module
edisgo.tools.geo), 132

`proj_by_srids()` (in module `edisgo.tools.geo`), 132
`pypsa2ppc()` (in module `edisgo.tools.powermodels_io`), 142

Q

`q_control` (`edisgo.network.timeseries.TimeSeriesRaw` attribute), 93

R

`reactive_power_timeseries` (`edisgo.network.components.Generator` property), 59
`reactive_power_timeseries` (`edisgo.network.components.Load` property), 58
`reactive_power_timeseries` (`edisgo.network.components.Storage` property), 60
`read_csvs_charging_processes()` (in module `edisgo.io.electromobility_import`), 119
`read_from_json()` (in module `edisgo.opf.results.opf_result_class`), 128
`read_gpkg_potential_charging_parks()` (in module `edisgo.io.electromobility_import`), 120
`read_simbev_config_df()` (in module `edisgo.io.electromobility_import`), 119
`read_solution_file()` (`edisgo.opf.results.opf_result_class.OPFResults` method), 129
`reduce_memory()` (`edisgo.EDisGo` method), 55
`reduce_memory()` (`edisgo.network.heat.HeatPump` method), 74
`reduce_memory()` (`edisgo.network.results.Results` method), 80
`reduce_memory()` (`edisgo.network.timeseries.TimeSeries` method), 91
`reduce_memory()` (`edisgo.network.timeseries.TimeSeriesRaw` method), 94
`reinforce()` (`edisgo.EDisGo` method), 47
`reinforce_grid()` (in module `edisgo.flex_opt.reinforce_grid`), 114
`reinforce_hv_mv_station_overloading()` (in module `edisgo.flex_opt.reinforce_measures`), 116
`reinforce_lines_overloading()` (in module `edisgo.flex_opt.reinforce_measures`), 118
`reinforce_lines_voltage_issues()` (in module `edisgo.flex_opt.reinforce_measures`), 117
`reinforce_mv_lv_station_overloading()` (in module `edisgo.flex_opt.reinforce_measures`), 116
`reinforce_mv_lv_station_voltage_issues()` (in module `edisgo.flex_opt.reinforce_measures`), 117
`remove_bus()` (`edisgo.network.topology.Topology` method), 103

`remove_component()` (`edisgo.EDisGo` method), 49
`remove_generator()` (`edisgo.network.topology.Topology` method), 103
`remove_line()` (`edisgo.network.topology.Topology` method), 103
`remove_load()` (`edisgo.network.topology.Topology` method), 103
`remove_storage_unit()` (`edisgo.network.topology.Topology` method), 103
`resample_timeseries()` (`edisgo.EDisGo` method), 55
`resample_timeseries()` (`edisgo.network.timeseries.TimeSeries` method), 93
`reset()` (`edisgo.network.timeseries.TimeSeries` method), 85
`residual_load` (`edisgo.network.timeseries.TimeSeries` property), 91
`Results` (class in `edisgo.network.results`), 75
`results` (`edisgo.EDisGo` attribute), 39
`rings` (`edisgo.network.topology.Topology` property), 100
`run_mp_opf()` (in module `edisgo.opf.run_mp_opf`), 126

S

`s_res` (`edisgo.network.results.Results` property), 77
`save()` (`edisgo.EDisGo` method), 54
`save_edisgo_to_pickle()` (`edisgo.EDisGo` method), 55
`sector` (`edisgo.network.components.Load` property), 58
`select_cable()` (in module `edisgo.tools.tools`), 144
`select_worstcase_snapshots()` (in module `edisgo.tools.tools`), 143
`session_scope()` (in module `edisgo.tools`), 146
`set_active_power_manual()` (`edisgo.network.timeseries.TimeSeries` method), 85
`set_bus_variables()` (`edisgo.opf.results.opf_result_class.OPFResults` method), 129
`set_cop()` (`edisgo.network.heat.HeatPump` method), 73
`set_gen_variables()` (`edisgo.opf.results.opf_result_class.OPFResults` method), 129
`set_heat_demand()` (`edisgo.network.heat.HeatPump` method), 73
`set_line_variables()` (`edisgo.opf.results.opf_result_class.OPFResults` method), 129
`set_load_variables()` (`edisgo.opf.results.opf_result_class.OPFResults` method), 129
`set_reactive_power_manual()` (`edisgo.network.timeseries.TimeSeries` method), 85

set_seed() (in module *edisgo.io.pypsa_io*), 123
 set_solution() (*edisgo.opf.results.opf_result_class.OPFResults* method), 129
 set_solution_to_results() (*edisgo.opf.results.opf_result_class.OPFResults* method), 129
 set_strg_variables() (*edisgo.opf.results.opf_result_class.OPFResults* method), 129
 set_time_series_active_power_predefined() (*edisgo.EDisGo* method), 41
 set_time_series_manual() (*edisgo.EDisGo* method), 40
 set_time_series_reactive_power_control() (*edisgo.EDisGo* method), 42
 set_time_series_worst_case_analysis() (*edisgo.EDisGo* method), 41
 set_timeindex() (*edisgo.EDisGo* method), 40
 set_worst_case() (*edisgo.network.timeseries.TimeSeries* method), 86
 setup_logger() (in module *edisgo.tools.logger*), 135
 simbev_config_df (*edisgo.network.electromobility.Electromobility* property), 64
 simulated_days (*edisgo.network.electromobility.Electromobility* property), 65
 state (*edisgo.network.components.Switch* property), 61
 station (*edisgo.network.grids.Grid* property), 68
 stepsize (*edisgo.network.electromobility.Electromobility* property), 65
 Storage (class in *edisgo.network.components*), 59
 storage_units_active_power (*edisgo.network.timeseries.TimeSeries* property), 84
 storage_units_df (*edisgo.network.grids.Grid* property), 68
 storage_units_df (*edisgo.network.topology.Topology* property), 96
 storage_units_reactive_power (*edisgo.network.timeseries.TimeSeries* property), 85
 StorageVariables (class in *edisgo.opf.results.opf_result_class*), 129
 subtype (*edisgo.network.components.Generator* property), 59
 Switch (class in *edisgo.network.components*), 60
 switch_disconnectors (*edisgo.network.grids.Grid* property), 69
 switch_disconnectors_df (*edisgo.network.grids.Grid* property), 69
 switches_df (*edisgo.network.topology.Topology* property), 98
 time_series_raw (*edisgo.network.timeseries.TimeSeries* attribute), 83
 timeindex (*edisgo.network.timeseries.TimeSeries* property), 83
 TimeSeries (class in *edisgo.network.timeseries*), 82
 timeseries (*edisgo.EDisGo* attribute), 39
 TimeSeriesRaw (class in *edisgo.network.timeseries*), 93
 timesteps_load_feedin_case (*edisgo.network.timeseries.TimeSeries* property), 91
 to_csv() (*edisgo.network.electromobility.Electromobility* method), 66
 to_csv() (*edisgo.network.heat.HeatPump* method), 74
 to_csv() (*edisgo.network.results.Results* method), 81
 to_csv() (*edisgo.network.timeseries.TimeSeries* method), 91
 to_csv() (*edisgo.network.timeseries.TimeSeriesRaw* method), 94
 to_csv() (*edisgo.network.topology.Topology* method), 106
 to_geopandas() (*edisgo.network.topology.Topology* method), 106
 to_geopandas() (in module *edisgo.tools.geopandas_helper*), 135
 to_graph() (*edisgo.EDisGo* method), 45
 to_graph() (*edisgo.network.topology.Topology* method), 106
 to_json() (*edisgo.tools.config.Config* method), 131
 to_powermodels() (in module *edisgo.tools.powermodels_io*), 142
 to_pypsa() (*edisgo.EDisGo* method), 43
 to_pypsa() (in module *edisgo.io.pypsa_io*), 123
 Topology (class in *edisgo.network.topology*), 94
 topology (*edisgo.EDisGo* attribute), 39
 topology (*edisgo.network.components.BasicComponent* property), 56
 transformers_df (*edisgo.network.grids.LVGrid* property), 71
 transformers_df (*edisgo.network.grids.MVGrid* property), 70
 transformers_df (*edisgo.network.topology.Topology* property), 96
 transformers_hvmv_df (*edisgo.network.topology.Topology* property), 97
 translate_df_to_graph() (in module *edisgo.tools.networkx_helper*), 137
 type (*edisgo.network.components.Generator* property), 58
 type (*edisgo.network.components.Switch* property), 60

T

thermal_storage_units_df

U

`unresolved_issues` (*edisgo.network.results.Results* property), 80

`update_number_of_parallel_lines()` (*edisgo.network.topology.Topology* method), 103

`use_case` (*edisgo.network.components.PotentialChargingParks* property), 62

`user_centric_weight` (*edisgo.network.components.PotentialChargingParks* property), 62

V

`v_res` (*edisgo.network.results.Results* property), 76

`voltage_diff()` (in module *edisgo.flex_opt.check_tech_constraints*), 111

`voltage_level` (*edisgo.network.components.BasicComponent* property), 56

`voltage_level` (*edisgo.network.components.PotentialChargingParks* property), 61

W

`weather_cell_id` (*edisgo.network.components.Generator* property), 59

`weather_cells` (*edisgo.network.grids.Grid* property), 69

`weighted_random_choice()` (in module *edisgo.io.electromobility_import*), 121

`within_grid` (*edisgo.network.components.PotentialChargingParks* property), 63

`without_generator_import` (in module *edisgo.flex_opt.costs*), 112